


Thresholds

INSTALLATION INSTRUCTIONS

- 1 Measure and cut threshold to size as required.
- 2 Notch as necessary, to suit door frame.
- 3 Caulk underneath and around edges of threshold for moisture control.
- 4 Attach threshold to floor surface with screws provided.

Suggested Installation

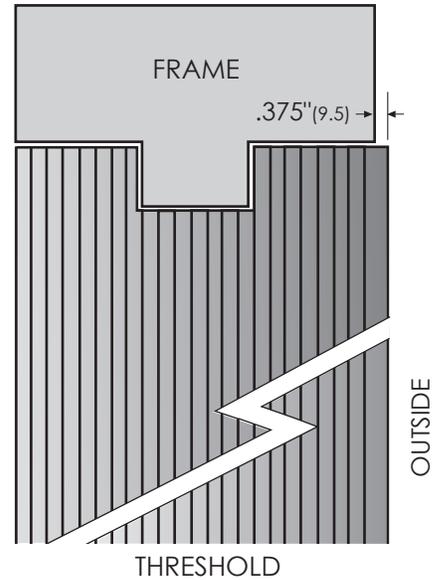

ZERO INTERNATIONAL

415 Concord Avenue, Bronx, NY 10455-1004
Tel : 718-585-3230 • Fax : 718-292-2243
Zero.Customer.Support@allegion.com
www.zerointernational.com

