

Post-Frame & Residential

Installation Guide

metal sales
manufacturing corporation



The application and detail drawings in this manual are strictly for illustration purposes and may not be applicable to all building designs or product installations. All projects should conform to applicable building codes for that particular area. It is recommended to follow all building regulations and standard industry practices.

Metal Sales Manufacturing Corporation is not responsible for the performance of the roof system if it is not installed in accordance with the suggested instructions referenced in this installation manual or in the product overview. (See Product Manual or Product Technical Literature). If there is a conflict between this manual and the actual erection drawings, the erection drawings are to take precedence.

Prior to ordering and installing materials, all dimensions should be verified by field measurements.

Metal Sales reserves the right to modify, without notice, any details, recommendations or suggestions. Any questions you may have regarding proper installation of the roofing system should be directed to your Metal Sales representative, see pages 2 and 3.

Consult Metal Sales for any additional information not outlined in this manual.

This manual is designed to be utilized as a guide when installing Post Frame and Residential roofing systems.

It is the responsibility of the erector to ensure the safe installation of this product system.

SAFETY

STUDY APPLICABLE OSHA AND OTHER SAFETY REQUIREMENTS BEFORE FOLLOWING THESE INSTRUCTIONS.

The installation of metal roof systems is a dangerous procedure and should be supervised by trained knowledgeable erectors. **USE EXTREME CARE WHILE INSTALLING ROOF PANELS.** It is not possible for Metal Sales to be aware of all the possible job site situations that could cause an unsafe condition to exist. The erector of the roof system is responsible for reading these instructions and determining the safest way to install the roof system.

These instructions are provided only as a guide to show a knowledgeable, trained erector the correct part placement one to another. If following any of the installation steps would endanger a worker, the erector should stop work and decide upon a corrective action.


Provide required safety railing, netting, or safety lines for crew members working on the roof.

Do not use the roof panel as a walking platform. The roof panels will not withstand the weight of a person standing at the edge of the panel.

Do not stand on the roof panel until the panels have been attached.

ms metal sales

manufacturing corporation

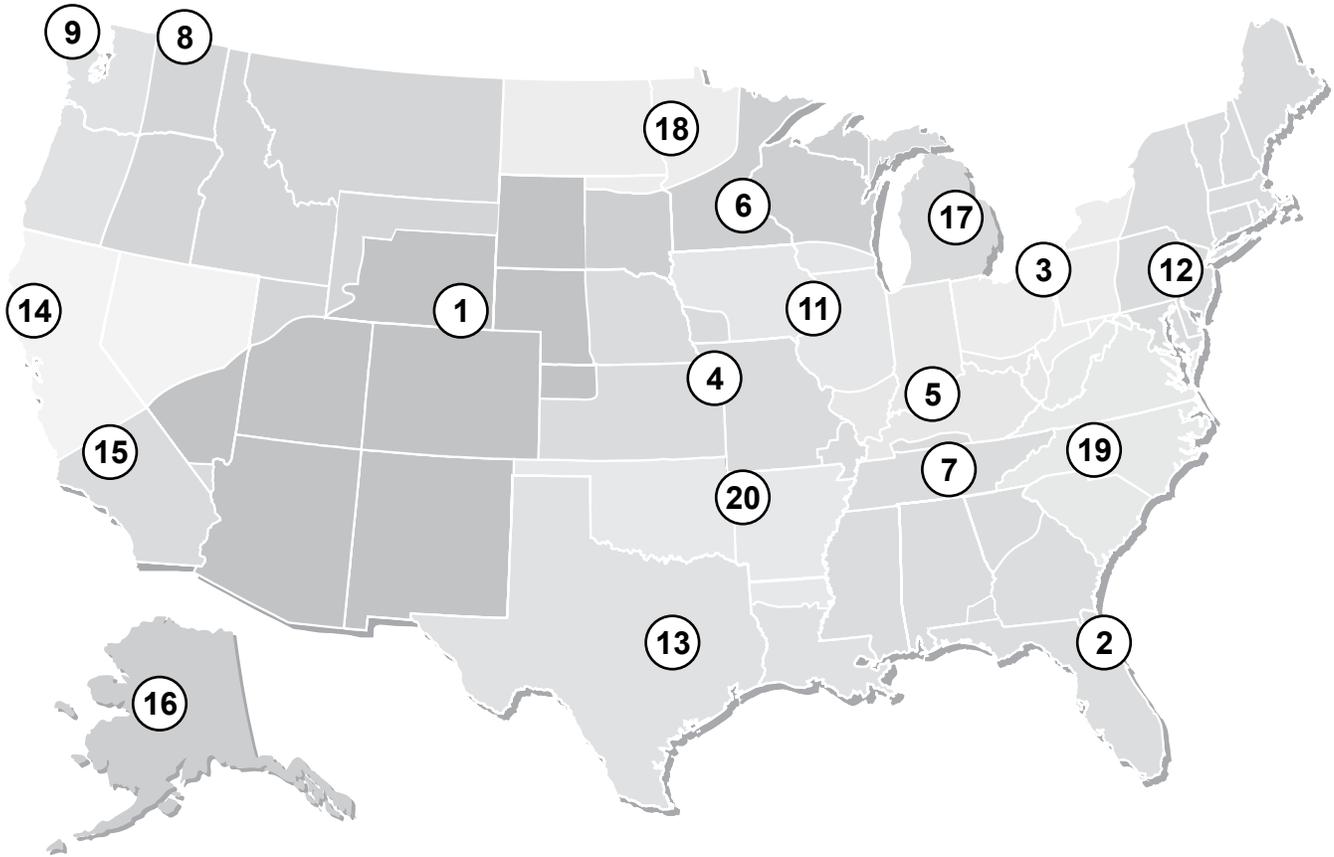

For more than 45 years, Metal Sales Manufacturing Corporation has earned a reputation as the premier provider of innovative metal building components and accessories.

We've backed this reputation with the industry's largest professional sales and services team. We offer a full line of exceptional quality metal roof and wall panels for agricultural, commercial, architectural, industrial, and residential projects of every shape and size, new construction or retro-fit.

1.) LONGMONT BRANCH

7990 E. I-25 Frontage Road
Longmont, CO 80504
303.702.5440 Phone
800.289.7663 Toll Free
800.289.1617 Toll Free Fax

2.) JACKSONVILLE BRANCH

7110 Stuart Avenue
Jacksonville, FL 32254
904.783.3660 Phone
800.394.4419 Toll Free
904.783.9175 Fax
800.413.3292 Toll Free Fax

3.) JEFFERSON BRANCH

352 East Erie Street
Jefferson, OH 44047
440.576.9070 Phone
800.321.5833 Toll Free
440.576.9242 Fax
800.233.5719 Toll Free Fax

4.) INDEPENDENCE BRANCH

1306 S. Powell Road
Independence, MO 64057
816.796.0900 Phone
800.747.0012 Toll Free
816.796.0906 Fax

5.) SELLERSBURG BRANCH

7800 State Road 60
Sellersburg, IN 47172
812.246.1866 Phone
800.999.7777 Toll Free
812.246.0893 Fax
800.477.9318 Toll Free Fax

6.) ROGERS BRANCH

22651 Industrial Blvd.
Rogers, MN 55374
763.428.8080 Phone
800.328.9316 Toll Free
763.428.8525 Fax
800.938.9119 Toll Free Fax

7.) ANTIOCH BRANCH

4314 Hurricane Creek Blvd.
Antioch, TN 37013
615.641.7100 Phone
800.251.8508 Toll Free
615.641.7118 Fax
800.419.4372 Toll Free Fax

8.) SPOKANE BRANCH

East 2727 Trent Avenue
Spokane, WA 99202
509.536.6000 Phone
800.572.6565 Toll Free
509.534.4427 Fax

9.) KENT BRANCH

20213 84th Avenue, South
Kent, WA 98032
253.872.5750 Phone
800.431.3470 Toll Free (Outside WA)
800.742.7900 Toll Free (Inside WA)
253.872.2008 Fax

11.) ROCK ISLAND BRANCH

8111 West 29th Street
Rock Island, IL 61201
309.787.1200 Phone
800.747.1206 Toll Free
309.787.1833 Fax

12.) ORWIGSBURG BRANCH

29 Pinedale Industrial Road
Orwigsburg, PA 17961
570.366.2020 Phone
800.544.2577 Toll Free
570.366.1648 Fax
800.544.2574 Toll Free Fax

13.) TEMPLE BRANCH

3838 North General Bruce Dr.
Temple, TX 76501
254.791.6650 Phone
800.543.4415 Toll Free
254.791.6655 Fax
800.543.4473 Toll Free Fax

14.) WOODLAND BRANCH

1326 Paddock Place
Woodland, CA 95776
530.668.5690 Phone
800.759.6019 Toll Free
530.668.0901 Fax

15.) FONTANA BRANCH

14213 Whittram Avenue
Fontana, CA 92335
909.829.8618 Phone
800.782.7953 Toll Free
909.829.9083 Fax

16.) ANCHORAGE BRANCH

4637 Old Seward Hwy.
Anchorage, AK 99503
907.646.7663 Phone
866.640.7663 Toll Free
907.646.7664 Fax

17.) BAY CITY BRANCH

5209 Mackinaw Road
Bay City, MI 48706
989.686.5879 Phone
888.777.7640 Toll Free
989.686.5870 Fax
888.777.0112 Toll Free Fax

18.) DETROIT LAKES BRANCH

1435 Egret Avenue
Detroit Lakes, MN 56501
218.847.2988 Phone
888.594.1394 Toll Free
218.847.4835 Fax
888.594.1454 Toll Free Fax

19.) MOCKSVILLE BRANCH

188 Quality Way
Mocksville, NC 27028
336.751.6381 Phone
800.228.6119 Toll Free
336.751.6301 Fax
800.228.7916 Toll Free Fax

20.) FORT SMITH BRANCH


7510 Ball Road
Fort Smith, AR 72908
479.646.1176 Phone
877.452.3915 Toll Free
479.646.5204 Fax

TECHNICAL SUPPORT**TECHNICAL SERVICES**

545 South 3rd Street
Louisville, KY 40202
502.855.4300 Phone
800.406.7387 Toll Free
502.855.4290 Fax
800.944.6884 Toll Free Fax

	PAGE NO.
General Information	
Important Information	1
Metal Sales' Locations	2
Customer Service	3
Panel Information	6-12
Panel Fastening Patterens.....	13-14
Panel Fastening Information	15
Post Frame Flashing Profiles	16-18
Residential Flashing Profiles	19
Accessory Profiles	20
Handling Material	
Receiving Material	21
General Handling	21
Mechanical Handling	21
Manual Handling	22
Storage	
General	23
Foot Traffic	23
Required Tools.....	23
Design / Installation Considerations	
General.....	24
Condition of Substructure.....	24
Field Cutting and Touch-Up	
Field Cutting	25
Touch-Up Paint.....	25
Ventilation	25
Fastener Selection Guide	26
Installation Overview	27
Post Frame Panel Installation	
<i>Installing Inside Closures (Step 1)</i>	28
<i>Installing First Panel (Step 2)</i>	28
<i>Installing Endlap Panel (Step 3)</i>	29
<i>Installing Sidelap Panel (Step 4)</i>	29
14" Universal Ridge Detail	30
Low Profile Ridge Vent.....	30
Outside Coner Detail.....	30
Inside Corner Detail	30
Gable Trim Detail	31
Rake Trim Detail.....	31
Universal Sidewall Detail.....	31
Universal Endwall Detail	31
Eave Molding Detail	32
Universal Gambrel Detail	32
Angle Base Detail.....	32
Double Angle Detail.....	32
Drip Cap Detail.....	33
Base Molding Detail	33
Cannonball Track Cover Detail	33
National Track Cover Detail	33
Door Jamb Molding Detail.....	34
Mini-Angle - U-Flashing Detail	34
Post Trim Detail.....	34
Door Post Trim Detail.....	34
Overhead Door Trim Detail	35
Soffit Detail.....	35
12" Soffit Detail.....	35
24" Soffit Detail.....	35

	PAGE NO.
Installation Overview	36
Residential Panel Installation	
<i>Installing Inside Closures (Step 1)</i>	<i>37</i>
<i>Installing First Panel (Step 2)</i>	<i>37</i>
<i>Installing Second Panel (Step 3)</i>	<i>38</i>
<i>Installing Second Eave Panel (Step 4)</i>	<i>38</i>
14" Universal Ridge Detail	39
Ridge / Hip Cover Detail	39
Vented Ridge Detail	39
Gable Trim Detail	39
Eave Detail	40
Gutter Detail	40
Valley Detail	40
Pitch Break Detail	40
Chimney / Cricket Detail	41
Roof Penetration Detail	41
Care and Maintenance	42

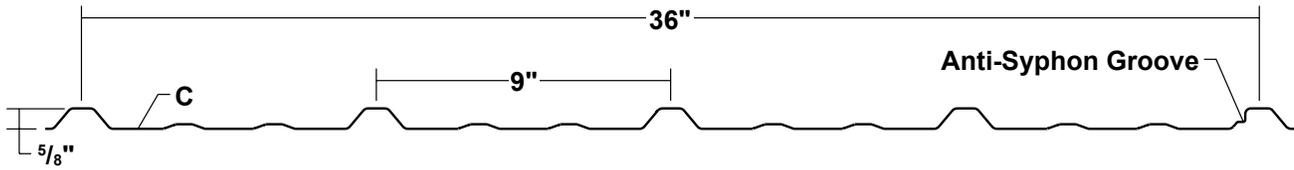

PRO-PANEL II ALLOWABLE UNIFORM LIVE LOADS (psf)

2 Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1.5'	2'	2.5'	3'	3.5'	4'	1.5'	2'	2.5'	3'	3.5'	4'
29	36	80	135	78	50	35	26	20	136	78	50	35	26	20
26	36	80	173	99	64	45	33	25	182	105	68	47	35	27

PRO-PANEL II ALLOWABLE SPANS

2 Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	3'-11"	3'-2"	2'-9"	2'-5"	2'-3"	2'-0"	3'-11"	3'-2"	2'-9"	2'-5"	2'-3"	2'-1"
26	36	80	4'-5"	3'-7"	3'-1"	2'-9"	2'-6"	2'-4"	4'-6"	3'-9"	3'-3"	2'-10"	2'-7"	2'-5"


PRO-PANEL II ALLOWABLE UNIFORM LIVE LOADS (psf)

3 or More Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1.5'	2'	2.5'	3'	3.5'	4'	1.5'	2'	2.5'	3'	3.5'	4'
29	36	80	156	90	58	41	27	18	157	90	59	41	27	18
26	36	80	199	115	75	52	35	23	210	122	79	55	35	23

PRO-PANEL II ALLOWABLE SPANS

3 or More Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	3'-10"	3'-4"	3'-0"	2'-8"	2'-5"	2'-2"	3'-10"	3'-4"	3'-0"	2'-8"	2'-5"	2'-3"
26	36	80	4'-2"	3'-8"	3'-4"	3'-0"	2'-9"	2'-6"	4'-2"	3'-8"	3'-4"	3'-1"	2'-10"	2'-7"

1. Section properties and allowable loads are calculated per AISI 2001 including 2004 Supplement.
2. Ixx and Sxx are effective section properties for deflection and bending.
3. Allowable loads/spans are calculated considering bending, shear, combined bending and shear and deflection.
4. Allowable load/span calculations do not include consideration for web crippling, fastener / connection limitations or uplift testing.
5. Allowable loads/spans do not include a 1/3 stress increase.

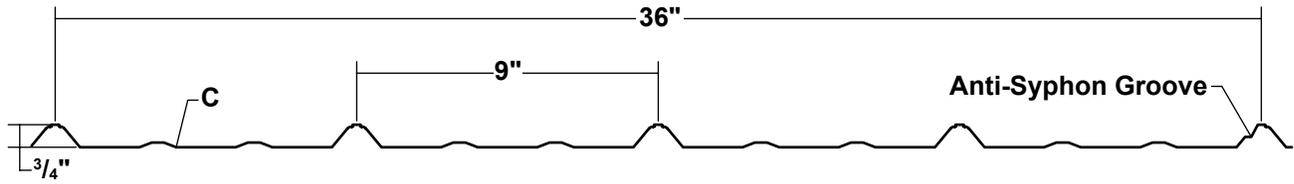

CLASSIC RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

2 Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1.5'	2'	2.5'	3'	3.5'	4'	1.5'	2'	2.5'	3'	3.5'	4'
29	36	80	122	70	45	31	23	18	155	88	57	40	29	23
26	36	80	159	91	58	41	30	23	196	112	73	51	37	29

CLASSIC RIB ALLOWABLE SPANS

2 Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	3'-8"	3'-0"	2'-7"	2'-4"	2'-1"	1'-11"	4'-2"	3'-5"	2'-11"	2'-7"	2'-5"	2'-2"
26	36	80	4'-3"	3'-5"	3'-0"	2'-8"	2'-5"	2'-3"	4'-9"	3'-10"	3'-4"	3'-0"	2'-8"	2'-6"


CLASSIC RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

3 or More Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1.5'	2'	2.5'	3'	3.5'	4'	1.5'	2'	2.5'	3'	3.5'	4'
29	36	80	142	81	52	36	27	21	179	103	66	46	34	26
26	36	80	185	105	68	47	35	27	227	131	84	59	44	33

CLASSIC RIB ALLOWABLE SPANS

3 or More Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	4'-0"	3'-3"	2'-10"	2'-6"	2'-3"	2'-1"	4'-4"	3'-8"	3'-2"	2'-10"	2'-7"	2'-4"
26	36	80	4'-7"	3'-9"	3'-3"	2'-10"	2'-7"	2'-5"	4'-8"	4'-1"	3'-7"	3'-2"	2'-11"	2'-8"

1. Section properties and allowable loads are calculated per AISI 2001 including 2004 Supplement.
2. Ixx and Sxx are effective section properties for deflection and bending.
3. Allowable loads/spans are calculated considering bending, shear, combined bending and shear and deflection.
4. Allowable load/span calculations do not include consideration for web crippling, fastener / connection limitations or uplift testing.
5. Allowable loads/spans do not include a 1/3 stress increase.

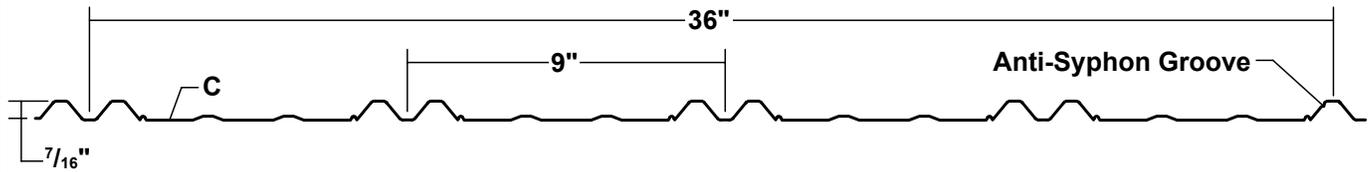

BI-RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

2 Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1'	1.5'	2'	2.5'	3'	3.5'	1'	1.5'	2'	2.5'	3'	3.5'
29	36	80	236	107	61	39	26	16	247	113	64	41	26	16
26	36	80	299	136	77	49	31	20	317	144	82	53	31	20

BI-RIB ALLOWABLE SPANS

2 Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	3'-3"	2'-10"	2'-5"	2'-2"	2'-0"	1'-10"	3'-3"	2'-10"	2'-6"	2'-3"	2'-0"	1'-10"
26	36	80	3'-5"	3'-0"	2'-9"	2'-5"	2'-3"	2'-1"	3'-5"	3'-0"	2'-9"	2'-6"	2'-3"	2'-1"


BI-RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

3 or More Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1'	1.5'	2'	2.5'	3'	3.5'	1'	1.5'	2'	2.5'	3'	3.5'
29	36	80	273	125	69	35	20	13	286	131	69	35	20	13
26	36	80	346	158	82	42	24	15	366	168	82	42	24	15

BI-RIB ALLOWABLE SPANS

3 or More Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	3'-0"	2'-7"	2'-4"	2'-2"	2'-1"	1'-11"	3'-0"	2'-7"	2'-4"	2'-2"	2'-1"	1'-11"
26	36	80	3'-2"	2'-9"	2'-6"	2'-4"	2'-2"	2'-1"	3'-2"	2'-9"	2'-6"	2'-4"	2'-2"	2'-1"

1. Section properties and allowable loads are calculated per AISI 2001 including 2004 Supplement.
2. Ixx and Sxx are effective section properties for deflection and bending.
3. Allowable loads/spans are calculated considering bending, shear, combined bending and shear and deflection.
4. Allowable load/span calculations do not include consideration for web crippling, fastener / connection limitations or uplift testing.
5. Allowable loads/spans do not include a 1/3 stress increase.

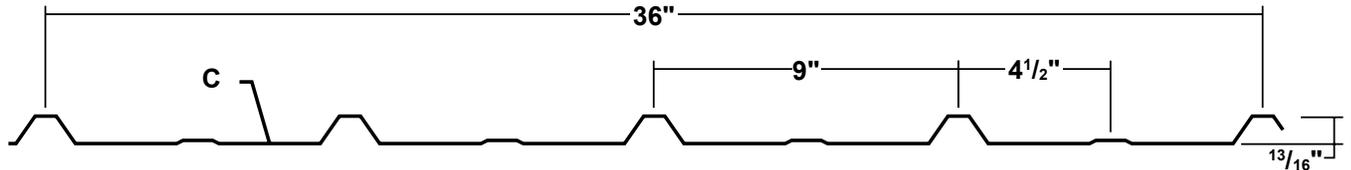

36" DELTA-RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

2 Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1'	1.5'	2'	2.5'	3'	3.5'	1'	1.5'	2'	2.5'	3'	3.5'
29	36	80	103	68	48	35	27	22	97	64	45	33	26	20
26	36	80	139	90	63	47	36	28	139	90	63	46	36	28

36" DELTA-RIB ALLOWABLE SPANS

2 Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	4'-7"	3'-9"	3'-2"	2'-10"	2'-7"	2'-4"	4'-6"	3'-7"	3'-1"	2'-9"	2'-6"	2'-3"
26	36	80	5'-4"	4'-4"	3'-9"	3'-4"	3'-0"	2'-9"	5'-4"	4'-4"	3'-9"	3'-4"	3'-0"	2'-9"


36" DELTA-RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

3 or More Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1'	1.5'	2'	2.5'	3'	3.5'	1'	1.5'	2'	2.5'	3'	3.5'
29	36	80	118	78	55	41	31	22	112	74	52	39	30	22
26	36	80	160	104	73	54	40	28	160	104	73	54	40	28

36" DELTA-RIB ALLOWABLE SPANS

3 or More Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	36	80	4'-7"	4'-0"	3'-5"	3'-1"	2'-9"	2'-6"	4'-7"	3'-11"	3'-4"	3'-0"	2'-8"	2'-6"
26	36	80	5'-0"	4'-4"	3'-11"	3'-7"	3'-3"	3'-0"	5'-0"	4'-4"	3'-11"	3'-7"	3'-3"	3'-0"

1. Section properties and allowable loads are calculated per AISI 2001 including 2004 Supplement.
2. Ixx and Sxx are effective section properties for deflection and bending.
3. Allowable loads/spans are calculated considering bending, shear, combined bending and shear and deflection.
4. Allowable load/span calculations do not include consideration for web crippling, fastener / connection limitations or uplift testing.
5. Allowable loads/spans do not include a 1/3 stress increase.

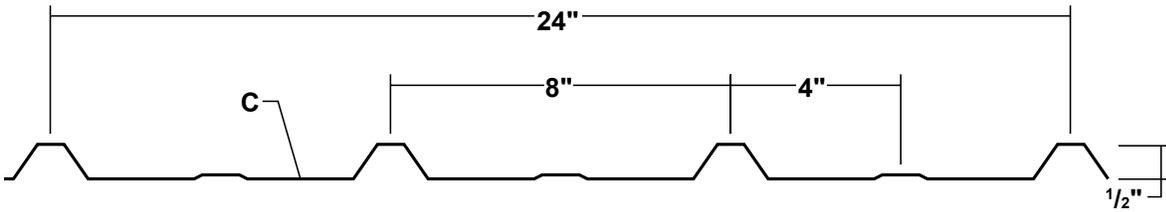

24" DELTA-RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

2 Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	2'	2.5'	3'	3.5'	4'	4.5'	2'	2.5'	3'	3.5'	4'	4.5'
29	24	80	124	82	58	43	33	26	108	71	50	37	28	23
26	24	80	169	110	77	57	44	35	162	106	74	55	42	33

24" DELTA-RIB ALLOWABLE SPANS

2 Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	24	80	5'-1"	4'-2"	3'-7"	3'-2"	2'-10"	2'-7"	4'-8"	3'-10"	3'-3"	2'-11"	2'-8"	2'-5"
26	24	80	5'-9"	4'-9"	4'-1"	3'-8"	3'-4"	3'-1"	5'-9"	4'-8"	4'-0"	3'-7"	3'-3"	3'-0"


24" DELTA-RIB ALLOWABLE UNIFORM LIVE LOADS (psf)

3 or More Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	2'	2.5'	3'	3.5'	4'	4.5'	2'	2.5'	3'	3.5'	4'	4.5'
29	24	80	141	94	67	50	37	26	124	82	58	43	33	26
26	24	80	194	127	89	66	48	33	187	122	86	64	48	33

24" DELTA-RIB ALLOWABLE SPANS

3 or More Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	24	80	4'-11"	4'-3"	3'-10"	3'-5"	3'-1"	2'-10"	4'-11"	4'-1"	3'-6"	3'-2"	2'-10"	2'-7"
26	24	80	5'-4"	4'-8"	4'-2"	3'-11"	3'-7"	3'-4"	5'-4"	4'-8"	4'-2"	3'-11"	3'-6"	3'-3"

1. Section properties and allowable loads are calculated per AISI 2001 including 2004 Supplement.
2. Ixx and Sxx are effective section properties for deflection and bending.
3. Allowable loads/spans are calculated considering bending, shear, combined bending and shear and deflection.
4. Allowable load/span calculations do not include consideration for web crippling, fastener / connection limitations or uplift testing.
5. Allowable loads/spans do not include a 1/3 stress increase.

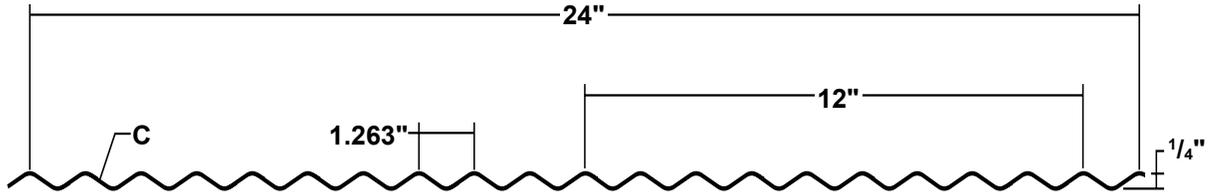

1-1/4" CORRUGATED ALLOWABLE UNIFORM LIVE LOADS (psf)

2 Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1'	1.25'	1.5'	1.75'	2'	2.25'	1'	1.25'	1.5'	1.75'	2'	2.25'
29	24	80	160	103	62	39	26	18	166	106	62	39	26	18
26	24	80	202	129	90	59	39	28	208	133	93	59	39	28

1-1/4" CORRUGATED ALLOWABLE SPANS

2 Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	24	80	2'-2"	1'-10"	1'-8"	1'-7"	1'-6"	1'-5"	2'-2"	1'-10"	1'-8"	1'-7"	1'-6"	1'-5"
26	24	80	2'-6"	2'-2"	1'-11"	1'-10"	1'-8"	1'-7"	2'-6"	2'-2"	1'-11"	1'-10"	1'-8"	1'-7"


1-1/4" CORRUGATED ALLOWABLE UNIFORM LIVE LOADS (psf)

3 or More Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1'	1.25'	1.5'	1.75'	2'	2.25'	1'	1.25'	1.5'	1.75'	2'	2.25'
29	24	80	165	84	49	31	21	14	165	84	49	31	21	14
26	24	80	235	127	73	46	31	22	242	127	73	46	31	22

1-1/4" CORRUGATED ALLOWABLE SPANS

3 or More Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	24	80	2'-0"	1'-9"	1'-7"	1'-5"	1'-4"	1'-3"	2'-0"	1'-9"	1'-7"	1'-5"	1'-4"	1'-3"
26	24	80	2'-3"	2'-0"	1'-10"	1'-8"	1'-7"	1'-6"	2'-3"	2'-0"	1'-10"	1'-8"	1'-7"	1'-6"

1. Section properties and allowable loads are calculated per AISI 2001 including 2004 Supplement.
2. Ixx and Sxx are effective section properties for deflection and bending.
3. Allowable loads/spans are calculated considering bending, shear, combined bending and shear and deflection.
4. Allowable load/span calculations do not include consideration for web crippling, fastener / connection limitations or uplift testing.
5. Allowable loads/spans do not include a 1/3 stress increase.

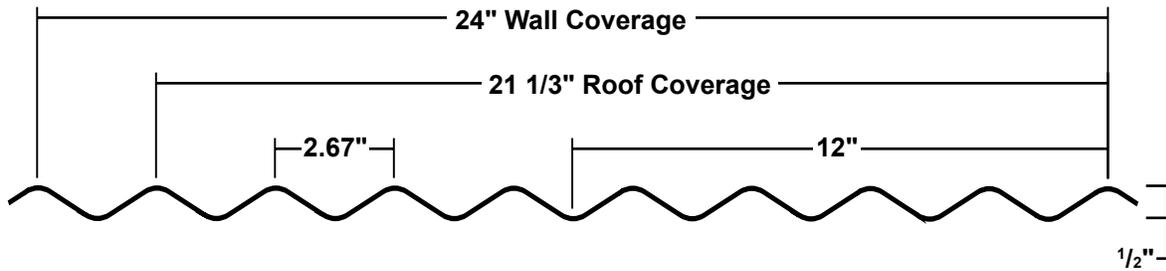

2-1/2" CORRUGATED ALLOWABLE UNIFORM LIVE LOADS (psf)

2 Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1.5'	1.75'	2'	2.25'	2.5'	3'	1.5'	1.75'	2'	2.25'	2.5'	3'
29	24	80	192	142	109	87	67	39	198	147	113	89	67	36
26	24	80	255	188	145	115	88	51	245	189	145	115	88	51

2-1/2" CORRUGATED ALLOWABLE SPANS

2 Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	24	80	3'-8"	3'-3"	2'-11"	2'-9"	2'-7"	2'-5"	3'-8"	3'-3"	2'-11"	2'-9"	2'-7"	2'-5"
26	24	80	4'-1"	3'-6"	3'-2"	3'-0"	2'-10"	2'-8"	4'-1"	3'-6"	3'-2"	3'-0"	2'-10"	2'-8"

2-1/2" CORRUGATED ALLOWABLE UNIFORM LIVE LOADS (psf)

3 or More Equal Spans			Inward Load Span						Outward Load Span					
Ga.	Width	Ksi	1.5'	1.75'	2'	2.25'	2.5'	3'	1.5'	1.75'	2'	2.25'	2.5'	3'
29	24	80	223	154	103	72	53	31	230	154	103	72	53	31
26	24	80	297	20	134	94	69	40	298	200	134	94	69	40


2-1/2" CORRUGATED ALLOWABLE SPANS

3 or More Equal Spans			Inward Load (psf)						Outward Load (psf)					
Ga.	Width	Ksi	20	30	40	50	60	70	20	30	40	50	60	70
29	24	80	3'-5"	3'-0"	2'-8"	2'-6"	2'-4"	2'-3"	3'-5"	3'-0"	2'-8"	2'-6"	2'-4"	2'-3"
26	24	80	3'-9"	3'-3"	2'-11"	2'-9"	2'-7"	2'-5"	3'-9"	3'-3"	2'-11"	2'-9"	2'-7"	2'-5"


1. Section properties and allowable loads are calculated per AISI 2001 including 2004 Supplement.
2. Ixx and Sxx are effective section properties for deflection and bending.
3. Allowable loads/spans are calculated considering bending, shear, combined bending and shear and deflection.
4. Allowable load/span calculations do not include consideration for web crippling, fastener / connection limitations or uplift testing.
5. Allowable loads/spans do not include a 1/3 stress increase.

PRO-PANEL II FASTENING

End of Panel

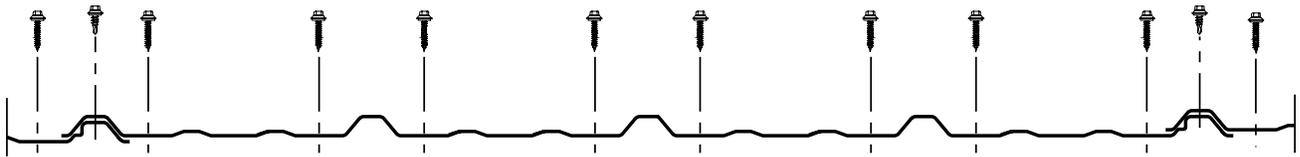


Field of Panel

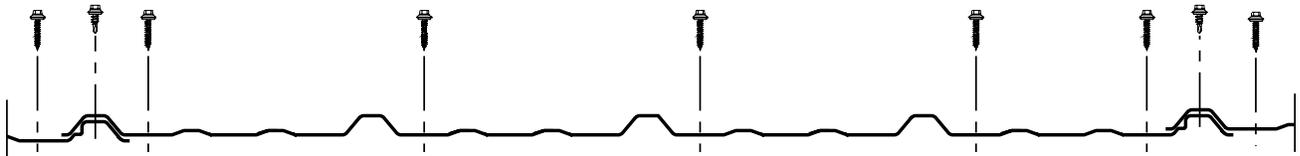


CLASSIC RIB FASTENING

End of Panel

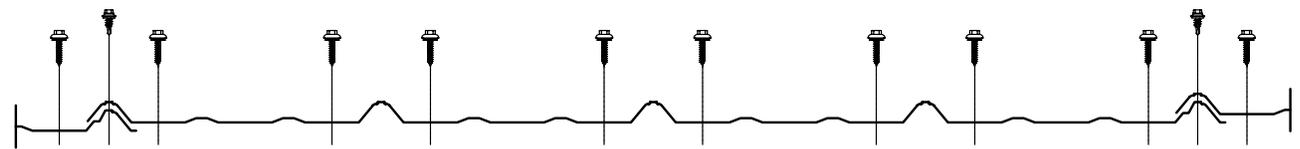


Field of Panel

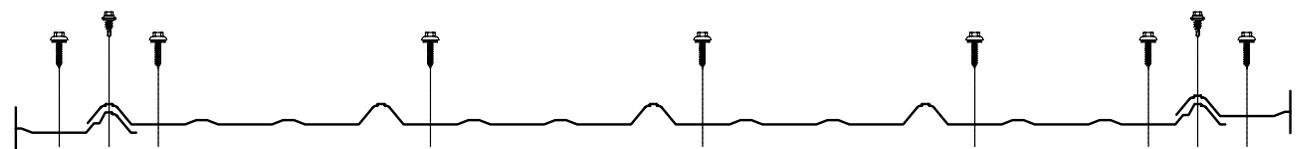


BI-RIB FASTENING


End of Panel

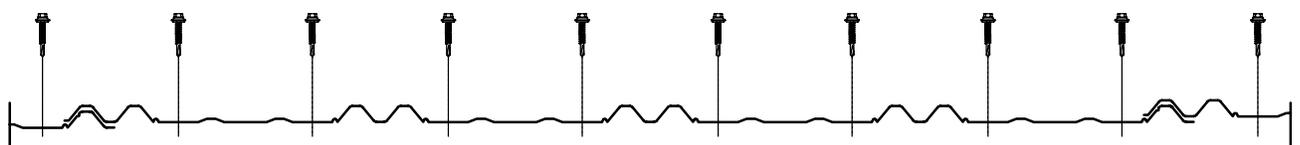

Field of Panel

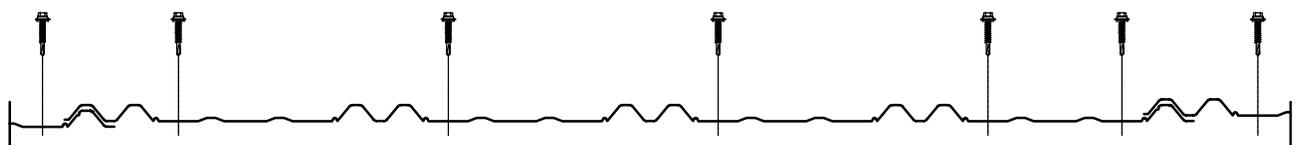


DELTA RIB 36" FASTENING

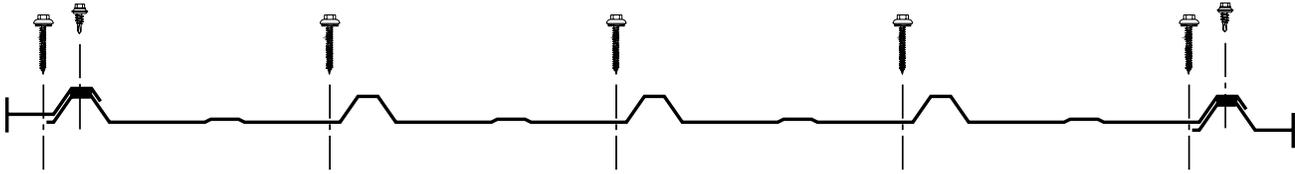

DELTA RIB 24" FASTENING




1-1/4" CORRUGATED FASTENING

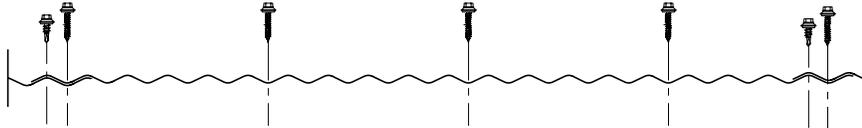


2-1/2" CORRUGATED FASTENING

Roof Attachment



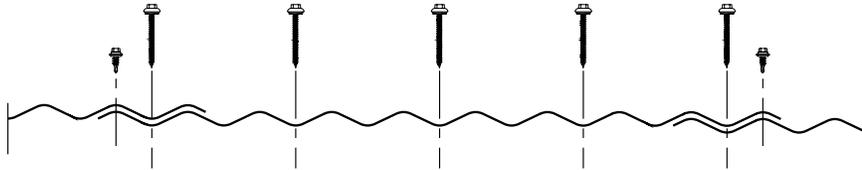



Wall Attachment

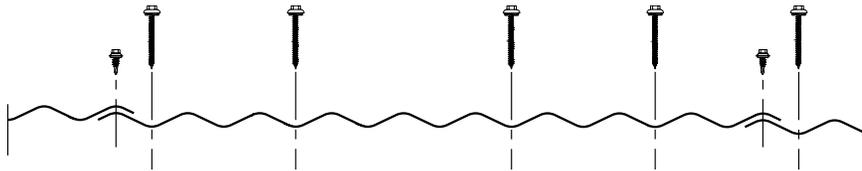

USING SCREWS:

For fastening with screws, it is best to use a painted or plated screw, Type A or drill bit with a flat rubber washer. The correct screw gun is also important to the proper installation of self-drilling or self-tapping screws. A tool with the appropriate speed and torque setting (as recommended by the fastener manufacturer) will help prevent fastener thread strip-out and possible damage to the panel or its coating. Typically 40 screws should be used per square for 2' wide panels and 80 screws should be used per square for 3' wide panels.

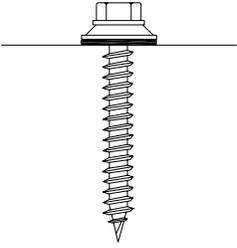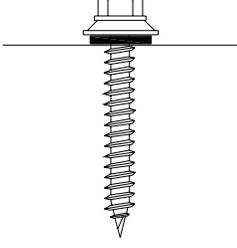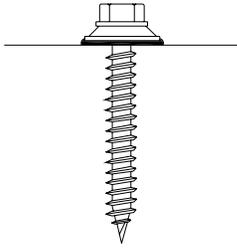
<p>CORRECT Sealing material slightly visible at edge of washer. Assembly is water tight.</p>	<p>TOO LOOSE Sealing material is not visible; not enough compression to seal.</p>	<p>TOO TIGHT Washer is deformed; sealing material pressed beyond fastener edge.</p>
		

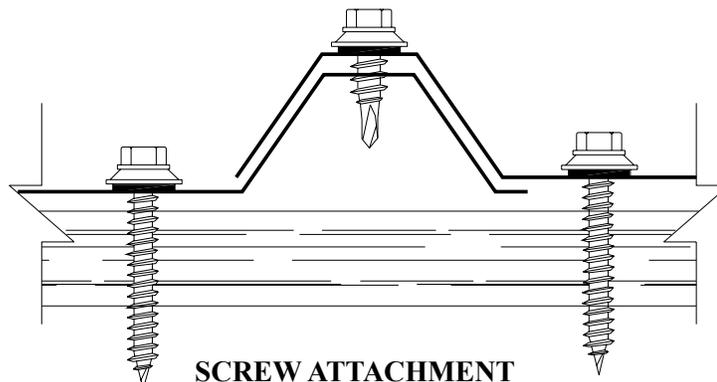


SEATING THE WASHER - Apply sufficient torque to seat the washer - do not overdrive the fastener.

TO PREVENT WOBBLING - Make sure fastener head is completely engaged in the socket. If the head does not go all the way in the socket - tap the magnet deeper into the socket to allow full head engagement. Metal chips will build up from drilling and should be removed from time to time.


PROTECT DRILL POINT - Push only hard enough on the screw gun to engage clutch. This prevents excess friction and burn out of the drill point. Correct pressure will allow screw to drill and tap without binding.

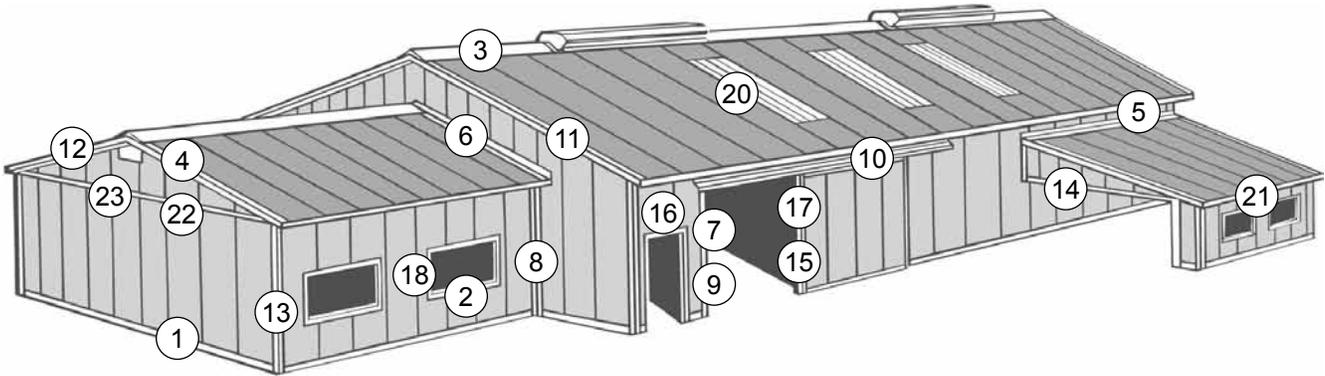


1 - BASE MOLDING

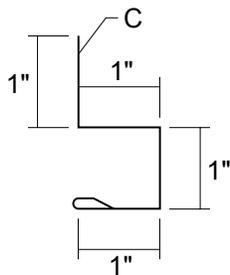


1 - ANGLE BASE

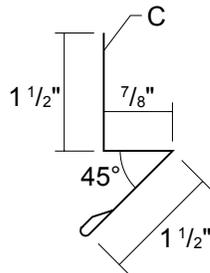


2 - J-CHANNEL

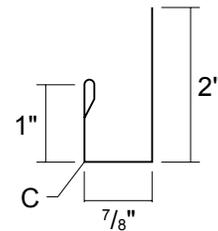


3 - 14" UNIVERSAL RIDGE

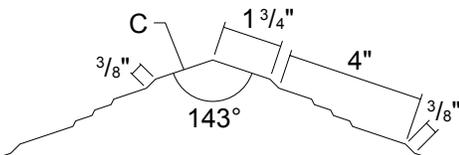


4 - SOFFIT

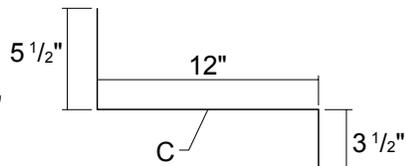


4 - 12" SOFFIT

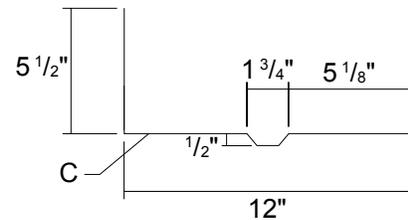


4 - 24" SOFFIT

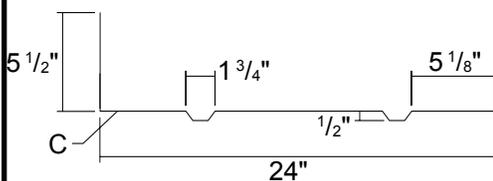


5 - UNIVERSAL ENDWALL

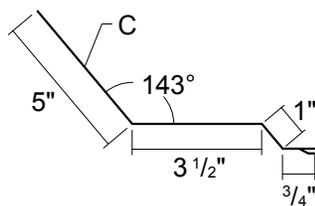


6 - UNIVERSAL SIDEWALL

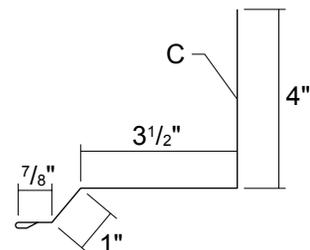


7 - MINI ANGLE

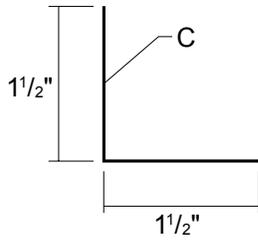


8 - INSIDE CORNER

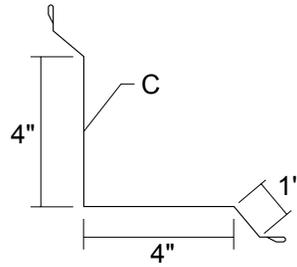


9 - POST TRIM

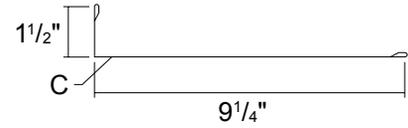


10 - NATIONAL TRACK COVER

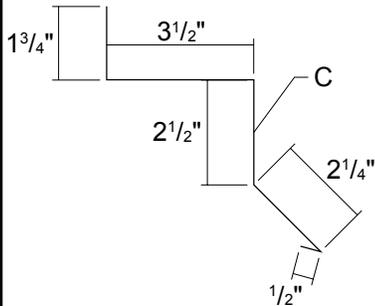


10 - TOP MOUNT TRACK COVER

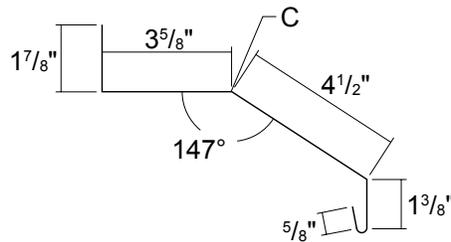


10 - CANNONBALL TRACK COVER

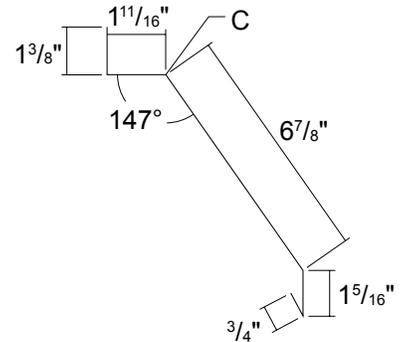


11 - GABLE TRIM

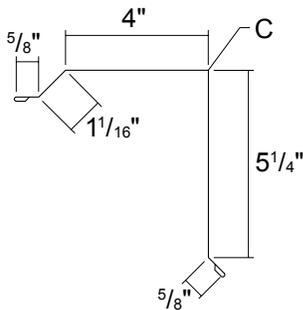


12 - RAKE TRIM

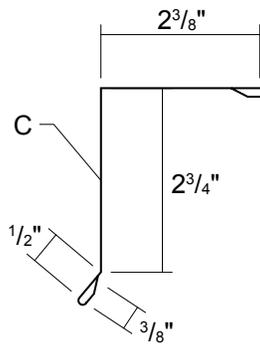


13 - OUTSIDE CORNER

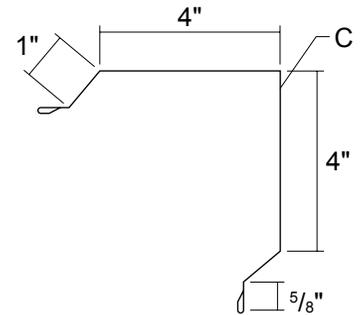


14 - OVERHEAD DOOR TRIM

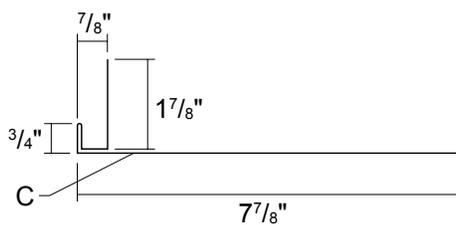


15 - DOOR JAMB

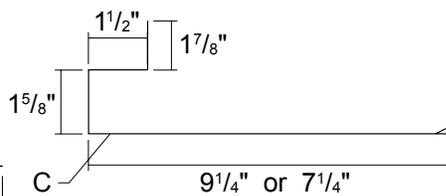


16 - DRIP CAP

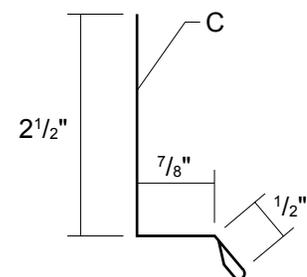


17 - DOOR POST TRIM

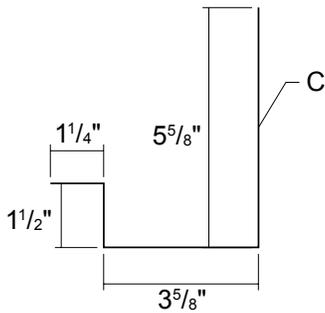


18 - FRAMING CLOSURE

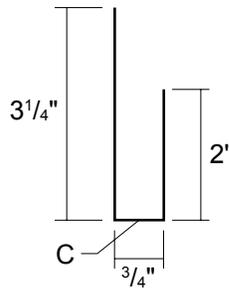


20 - TRANSLUCENT PANEL

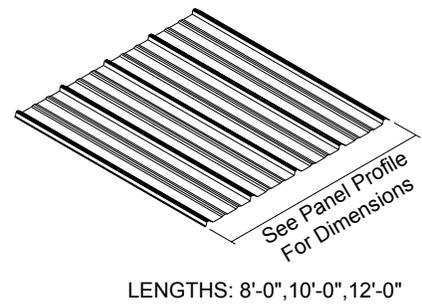


21 - EAVE MOLDING

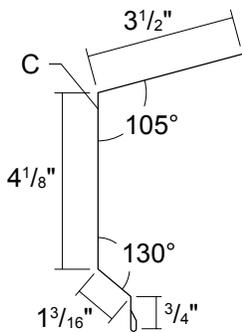


22 - DOUBLE ANGLE

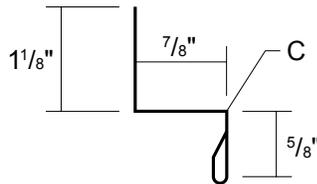


23 - WIDE Z-METAL

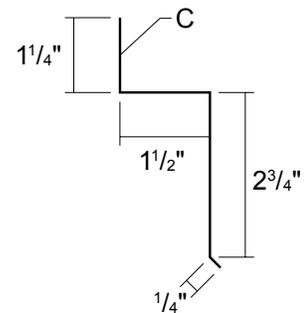


24 - UNIVERSAL GAMBREL

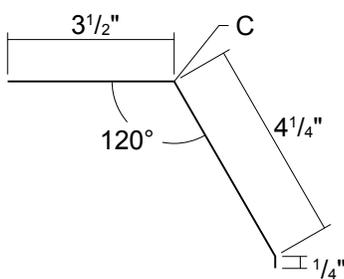


25 - RAKE / EAVE TRIM

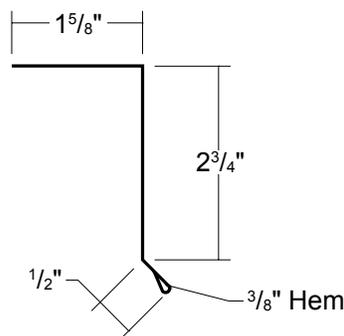


26 - 3/8" F & J-CHANNEL

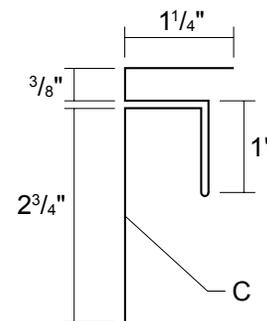


26 - 3/4" F & J-CHANNEL

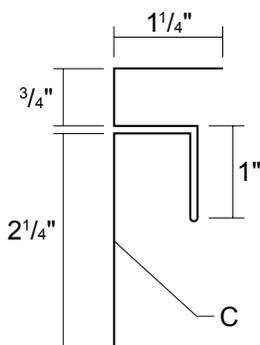


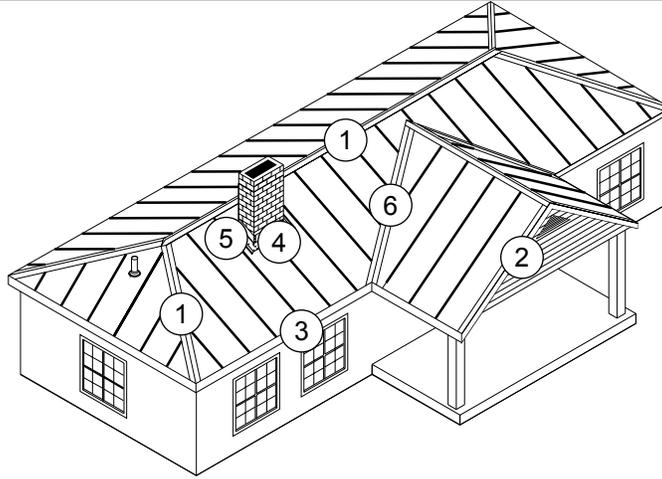


1 - RIDGE / HIP COVER

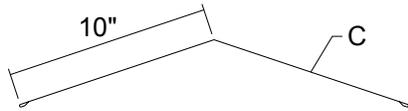


1 - 13" STEP RIDGE / HIP COVER

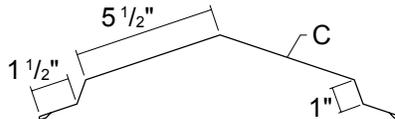


2 - GABLE TRIM

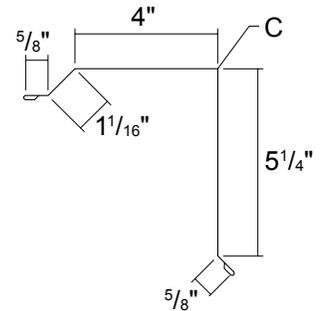


3 - EAVE

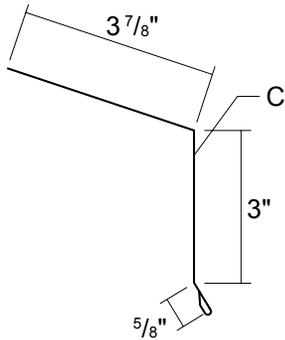


4 - UNIVERSAL ENDWALL

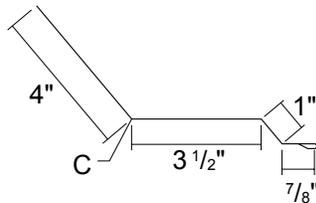


4 - PITCH BREAK

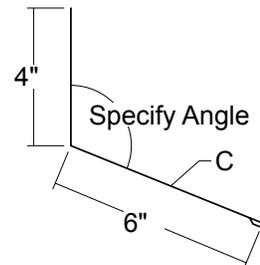


5 - UNIVERSAL SIDEWALL

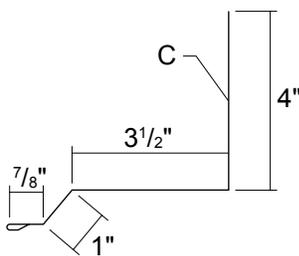

6 - VALLEY

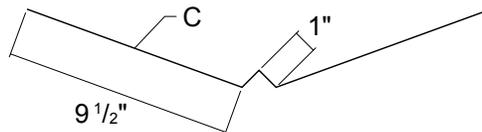


PRO-PANEL II CLOSURES

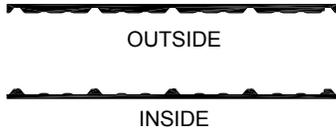


1" x 3'-0"
POLYETHYLENE FOAM

CLASSIC RIB CLOSURES

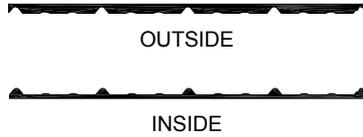


1" x 3'-0"
POLYETHYLENE FOAM

BI-RIB CLOSURES

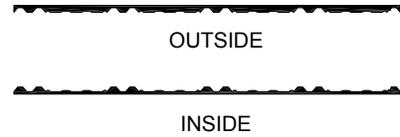


1" x 3'-0"
POLYETHYLENE FOAM

DELTA RIB CLOSURES

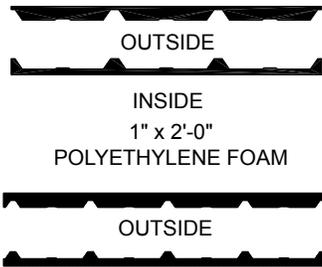

1" x 2'-0"
POLYETHYLENE FOAM

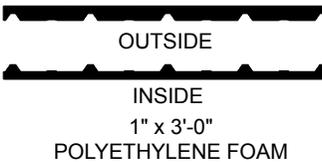

1" x 3'-0"
POLYETHYLENE FOAM

CORRUGATED CLOSURES




1" x 2'-0"
POLYETHYLENE FOAM

VERSA VENT




UNIVERSAL CLOSURE

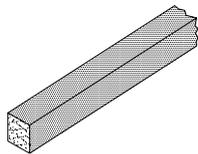


1" x 1 1/2" x 50'-0"
1" x 1 1/2" x 10'-0"

TUBE SEALANT

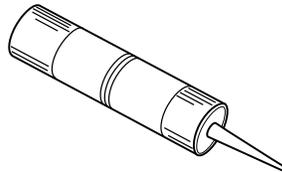


10.3 oz. CARTRIDGE
URETHANE

TOUCH-UP PAINT

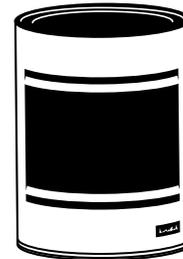


AVAILABLE IN PINTS
PVDF / MS CF45

TAPE SEALANT

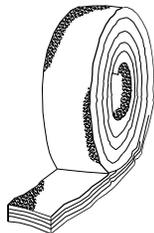


3/8" X 3/32" X 50'
SINGLE BEAD
BUTYL - GRAY

RUBBER ROOF JACK

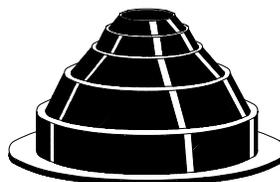

MINI (1/4" TO 1 1/8" O.D. PIPE)
#2 (1 3/4" TO 3" O.D. PIPE)
#4 (3" TO 6" O.D. PIPE)
#6 (6" TO 9" O.D. PIPE)
#8 (7" TO 13" O.D. PIPE)

MS-HT UNDERLAYMENT

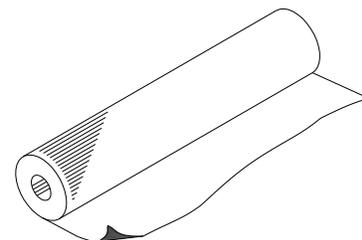

RECEIVING MATERIAL

It is the responsibility of the installer to unload material from the delivery truck. The installer shall be responsible for providing suitable equipment for unloading of material from the delivery.

After receiving material, check the condition of the material, and review the shipment against the shipping list to ensure all materials are accounted for. If damages or shortages are discovered, it should be noted on the Bill of Lading at the time of delivery. A claim should be made against the carrier as soon as possible. Metal Sales is not responsible for any damages or shortages unless they are documented in writing and presented to Metal Sales within 48 hours.

GENERAL HANDLING

Each bundle should be handled carefully to avoid being damaged. Care should be taken to prevent bending of the panel or abrasion to finish. Whenever possible, the bundle should remain crated until it is located in its place of storage. If bundles must be opened, we recommend you recreate them before lifting. To avoid damage please lift the bundle at its center of gravity.


CAUTION

Improper loading and unloading of bundles and crates may result in bodily harm and/or material damage. Metal Sales is not responsible for bodily injuries and/or material damages resulting from improper loading and unloading.

MECHANICAL HANDLING

Forklift - A forklift may be used for panels up to 20'-0" long. Please make sure the forks are at their maximum separation. Do not transport open bundles. When transporting bundles across rough terrain, or over a longer distance, some means of supporting the panel load must be used.

Crane - A crane should be used when lifting panels with lengths greater than 20'-0". Please be sure to utilize a spreader bar to ensure the even distribution of the weight to the pick up points. As a rule when lifting panels, no more than $\frac{1}{3}$ of the length of the panel should be left unsupported. Never use wire rope because this will damage the panels.



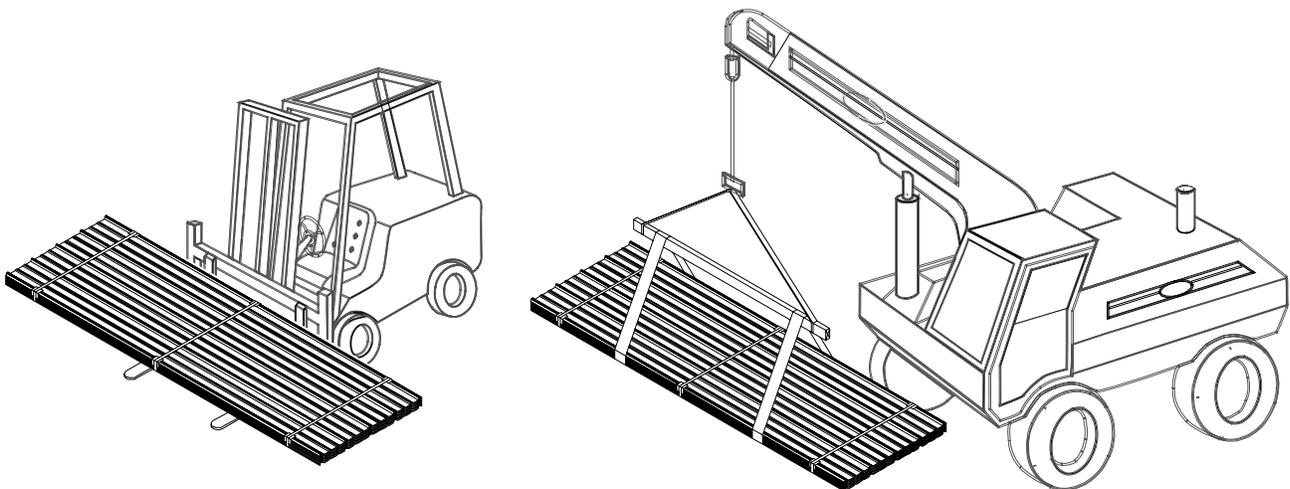


MANUAL HANDLING

When handling painted steel, care should be taken to prevent scratching of material. Clean gloves should be worn at all times to prevent a reaction with salts found on bare skin. Installers should wear rubber sole shoes to keep from scuffing material while walking on the roof.

Handling of individual panels should be done carefully and properly to avoid bending or damaging. Panels should be carried by grasping the edge of the panel so that the panel is vertical to the ground. The panel should not be carried horizontal to the ground as this could cause the panel to buckle or bend in the center.

Normally, individual panels can be handled by people placed every 6'-0" to 8'-0" along the length of the panel.

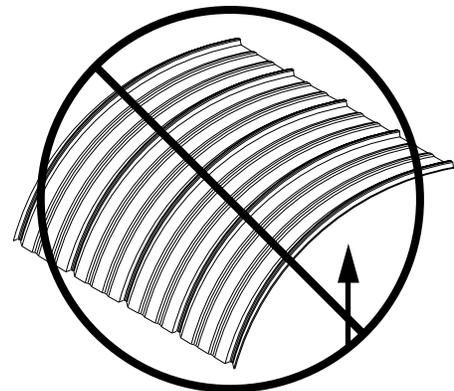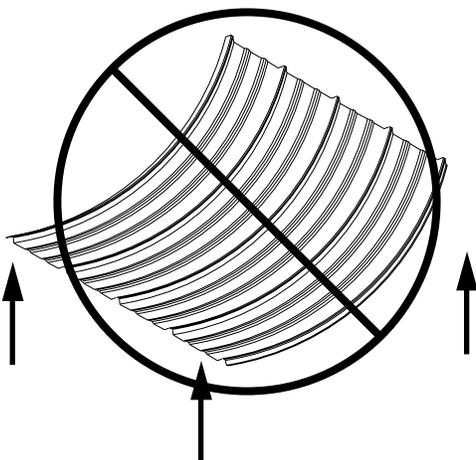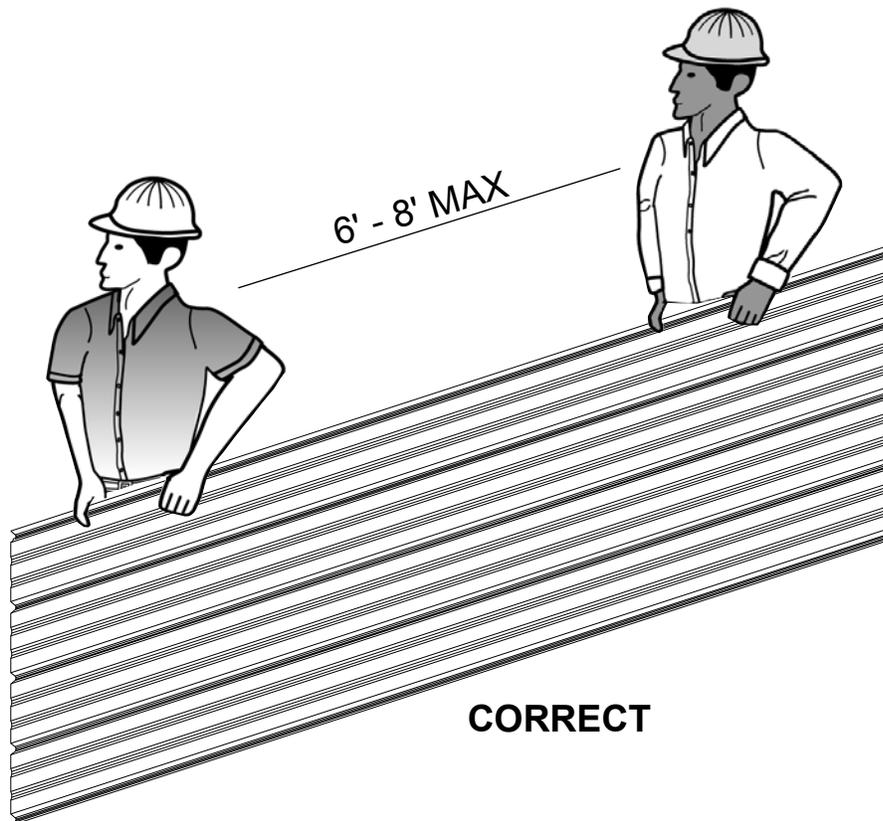


INCORRECT

GENERAL

Please inspect panels for moisture accumulation. If moisture has formed, the panels should be unbundled, wiped dry, and allowed to dry completely. Once dry, carefully restack the panels and loosely recover allowing for ample air circulation.

Bundled sheets should be stored high enough off of the ground to allow for air circulation and prevent contact with accumulating water. Elevate one end of the bundle to allow any moisture to run off the panels. Metal Sales recommends covering the bundle with a tarpaulin. Do not use tight fitting plastic-type tarpaulins as panel bundle covers. While they may provide protection from heavy downpours, they can also retard necessary ventilation and trap heat and moisture that may accelerate metal corrosion. If panels are to be stored in possible bad weather, we suggest they be stored inside. Extended storage of panels in a bundle is not recommended. **Under no circumstances should the panels be stored near or come in contact with salt water, corrosive chemicals, ash, or fumes generated or released inside the building or nearby plants, foundries, plating works, kilns, fertilizer, and wet or green lumber.**

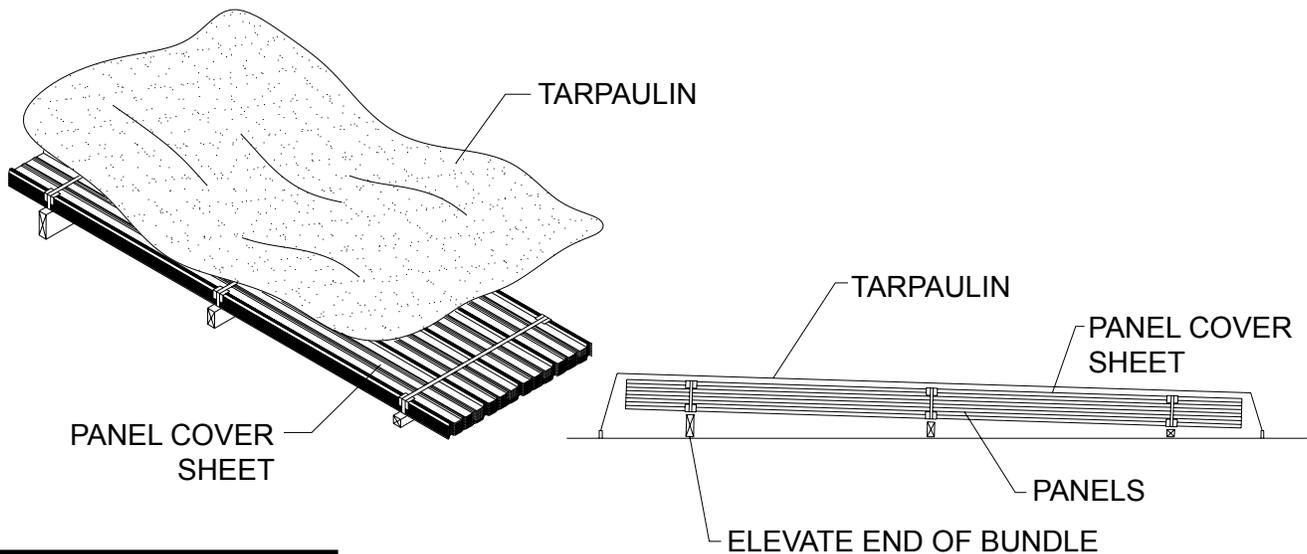**FOOT TRAFFIC**

Care of metal panels and flashings must be exercised throughout erection. Foot traffic can cause distortion of panel and damage to finish. Traffic over the installed system must be kept to an absolute minimum. Installers should wear rubber sole shoes to keep from scuffing material while walking on the roof.

When walking on the roof panels is unavoidable, walk only in the flats of the panel. Walking on the ribs can cause damage to the panels.

REQUIRED TOOLS

Standard required tools for field installation include:

- Screw Guns
- Magnetic Bits
- Metal Nibbler or Shear
- Tin Snips
- Tape Measure
- Hammer
- Chalk Line
- Drill with bits
- Pop Rivet Gun
- Safety Goggles
- Gloves
- Ear Plugs
- Fall Protection

GENERAL

Metal Sales' panels are designed to be installed over open framing and/or directly over a wood substrate (minimum 5/8") with 30# felt moisture barrier (or an Ice and Water Shield when required by Local Building Codes).

Always check with local building codes prior to all installations for any additional requirements that may be specific to your area.

Galvanized and Galvalume panels should not be in contact with, or subject to, water runoff from copper, lead, or uncoated steel materials.

Condensate water from air conditioning units typically contains dissolved copper. This condensate should be discharged through a plastic pipe extended beyond the edge of the roof.

CONDITION OF SUBSTRUCTURE

The roof should be inspected for any trapped moisture or structural damage such as bowing or sagging rafters and warped or loose roof purlins or solid decking. These areas should be repaired prior to installing new metal panels.


Prior to installation, make sure there are no nails or fasteners protruding from the roof framing or wood substrate which could damage the panels and impede the installation process.

When installed, panel distortion may occur if not applied over properly aligned and uniform substructure.

Whether installing over new or existing roof, the installer should check the roof deck for squareness before installing panels. Several methods can be used to verify squareness of the structure for proper installation of the panels.

METHOD "A" - One method for checking the roof for squareness is to measure diagonally across one slope of the roof from similar points at the ridge and eave and obtain the same dimension.

METHOD "B" - The 3-4-5 triangle system may also be used. To use this system, measure a point from the corner along the edge of the roof at a module of three (3). Measure a point from the same corner along another edge at a module of four (4). By measuring diagonally between the two points established, the dimension should be exactly a module of five (5) to have a square corner. Multiple uses of this system may be required to determine building squareness. If the endwall cannot be made square, the roof system cannot be installed as shown in these instructions.

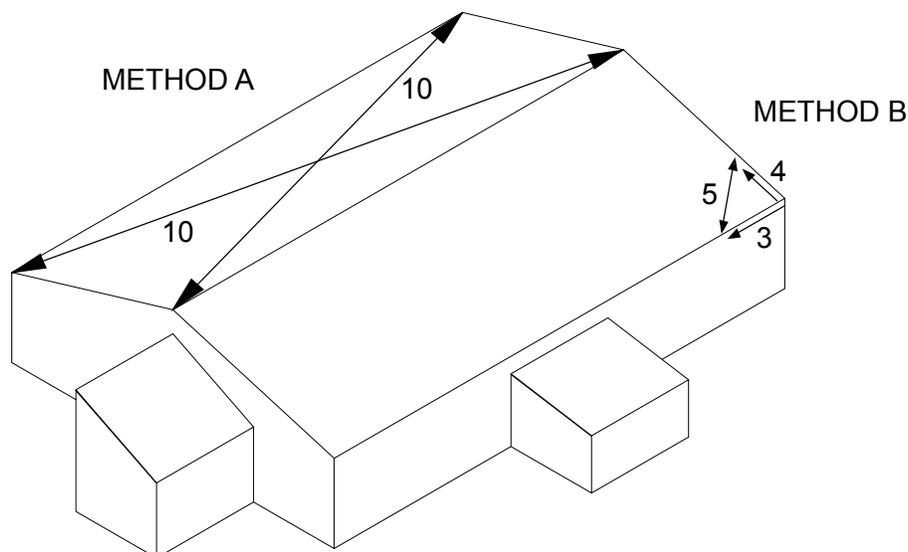

FIELD CUTTING

Tin snips or a "nibbler" type electric tool are recommended for field cutting metal panels. Cutting the steel generates slivers or metal chips. These slivers and metal chips must be immediately removed from the panels because they will damage the finish and shorten the life of the product.

One method of preventing this problem is to flip the panels over when cutting. This allows the slivers and metal chips to be brushed from the back side and avoids damaging the paint on the top side of the panels.

When cutting metal panels and flashings, goggles must be worn for eye protection.


CAUTION
All product surfaces should be free of debris at all times. Installed surfaces should be wiped clean at the end of each work period. Never cut panels over metal surfaces. Metal shavings will rust on the surface, voiding the warranty.

TOUCH-UP PAINT

All painted panels and flashings have a factory applied baked on finish. Handling and installing panels may result in some small scratches or nicks to the paint finish. Touch-up paint is available in matching colors from Metal Sales. It is recommended that a small brush be used to apply touch-up paint to those areas that are in need of repair. Touch-up paint does not have the superior chalk and fade resistance of the factory applied paint finish and will normally discolor at an accelerated rate. Aerosol paint should not be used because of the overspray that may occur.



SPRAY PAINT

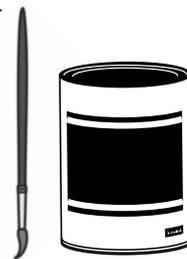

TOUCH-UP PAINT


VENTILATION

Proper design and installation of vapor barriers and ventilation systems are important to prevent condensation and the resulting problems of moisture damage and loss of insulation efficiency.


Condensation occurs when moisture laden air comes in contact with a surface temperature equal to or below the dew point of the air. This phenomenon creates problems that are not unique with metal buildings; these problems are common to all types of construction.


The underside of the metal roof on a typical metal building (no attic) should be protected from condensation by insulating with a faced insulation. This should reduce the potential of condensation forming on the underside of the panels.


On buildings that have an attic space or are being retrofitted with a metal roofing system, vents should be placed at both the eave and peak of the roof in order to prevent a buildup of moisture (humidity) in the attic space.

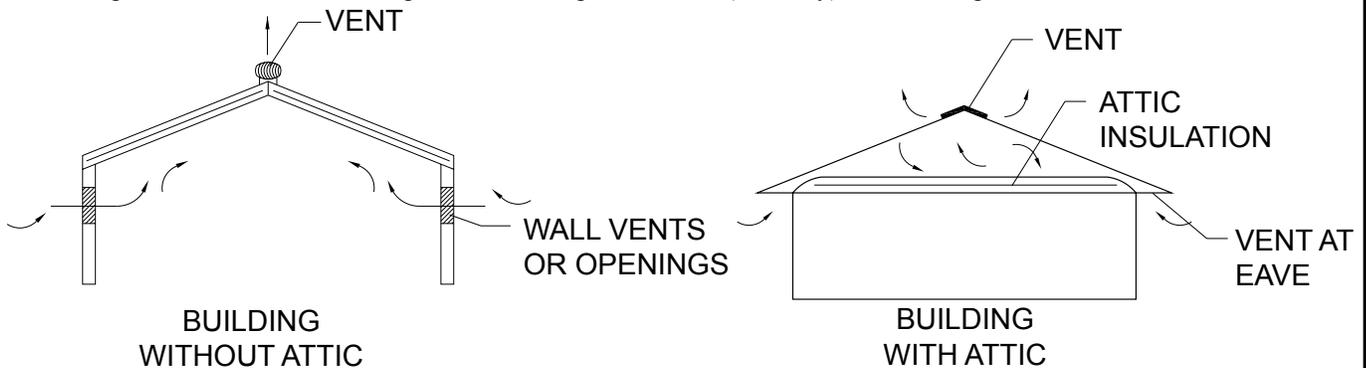

POP RIVET	SIZE	TYPE	FINISH	APPLICATION
	1/8" x 3/16"	A	Unpainted	Flashing to Panel, Flashing to Flashing
	1/8" x 3/16"	A	Painted	Flashing to Panel, Flashing to Flashing

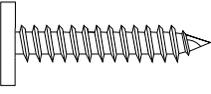PANCAKE HEAD WOODSCREW	SIZE	TYPE	FINISH	APPLICATION
	#10-12 x 1"	A	Plated	Panel or Flashing to wood substructure

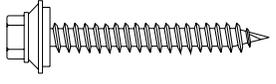
WOODSCREW	SIZE	TYPE	FINISH	APPLICATION
	#9-15 x 1"	A	Painted	Panel or Flashing to wood substructure
	#9-15 x 1 1/2"	A	Painted	
	#9-15 x 2"	A	Painted	

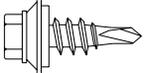STITCH SCREW	SIZE	TYPE	FINISH	APPLICATION
	#1/4 - 14 x 7/8"	Stitch	Painted	Flashing to Panel, Flashing to Flashing, Panel Sidelap

PANEL


Length - Minimum factory cut length is 5'-0" on panels. Panels over 45'-0" require additional consideration in packaging, shipping, and erection. Please consult Metal Sales for recommendations.

There are two critical measurements involving metal panels: the length of panel overhang required at the eave, and the peak end. In each case a certain measurement is required. Check each measurement to ensure panel placement gives you the distance required at the eave, and peak condition. In most cases any variance can be taken out at the eave or peak ends.

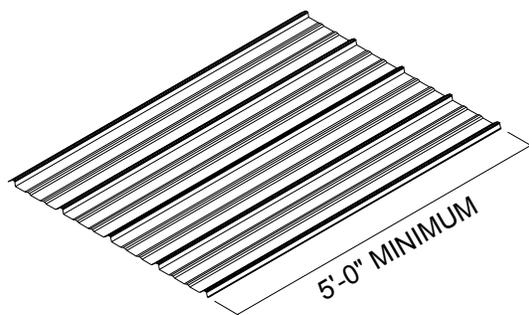

INSTALLATION OVERVIEW

- ◆ As shown below with the number designations, install panel against the prevailing wind. Installing Wall Panels first then Roof Panels
- ◆ To minimize corrosion, siding panels should not be installed all the way to the ground.
- ◆ Siding panels should lap over the foundations or splash boards at least three inches.
- ◆ Make sure panels are square and plumb, to assure straight and proper alignment of the entire row of panels.
- ◆ For areas with high wind considerations, closer fastener spacing may be required.
- ◆ It is necessary to attach a temporary guide to the foundation to use as an alignment guide when installing siding panels.
- ◆ Siphon groove side of panel must be overlapped with the non siphon groove side of the adjacent panel (if applicable).

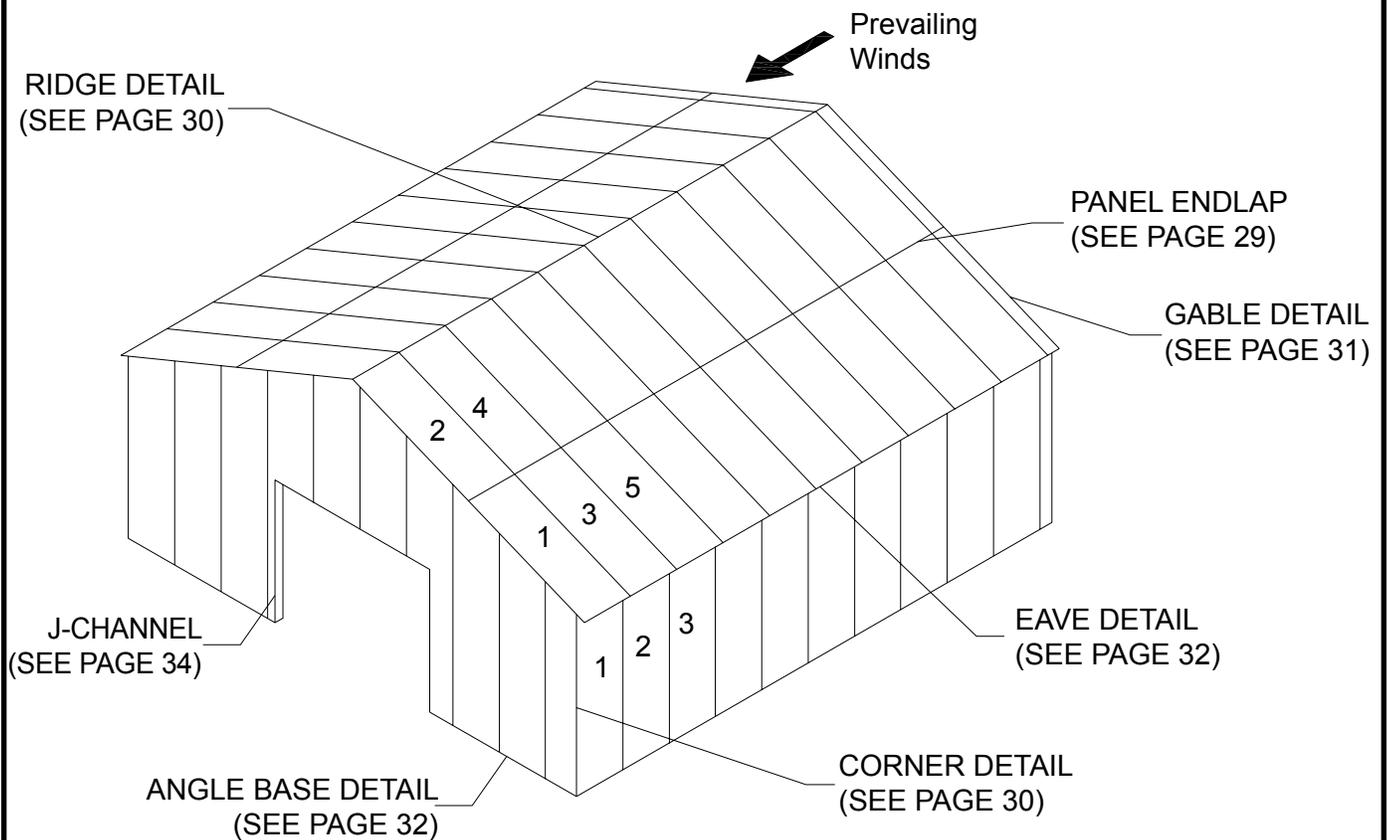


NOTE: -Eave Molding, Gutter and Valley Flashings must first be installed before panel installation can begin.
-Panels can be installed going from either left to right or right to left / looking from eave to peak.

INSTALLING INSIDE CLOSURES

**STEP
1**


1. Apply a row of Tape Sealant across the top leg of the Eave Molding along the width of the building.
2. Align and place Inside Closures over the Tape Sealant. It is critical that Inside Closures are square to building as this will control the alignment of the panels. (See page 24 to check building square).
3. Apply a row of Tape Sealant across the top of the Inside Closure (Not shown for clarity).

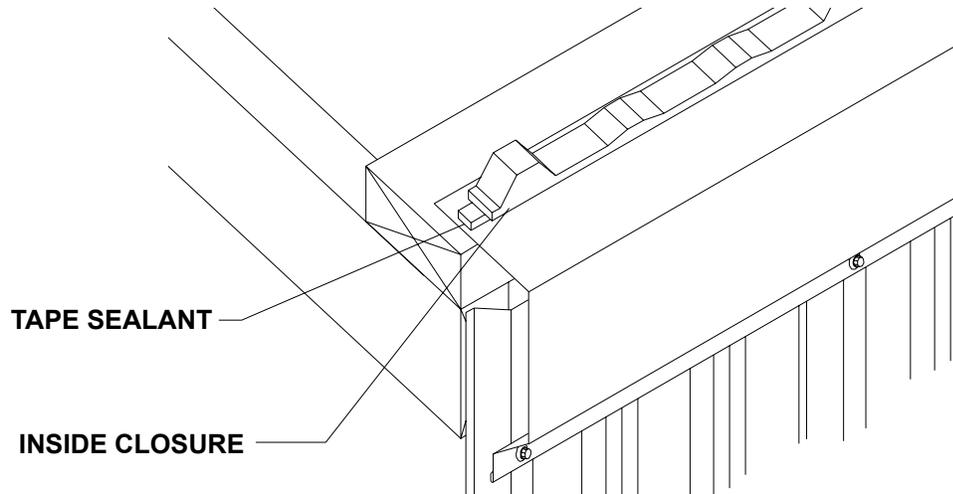

INSTALLING FIRST PANEL

**STEP
2**


1. Install the first panel over the Inside Closure allowing desired overhang. Make sure the panel is square to the eave and rake.
2. Fasten through panel, closure, and sealants into decking with appropriate amount of fasteners to meet local building code. (See fastening patterns on pages 13 and 14). Fasteners must penetrate closure and sealant.
3. After securing panel at eave, repeat the fastening pattern at all panel support locations.

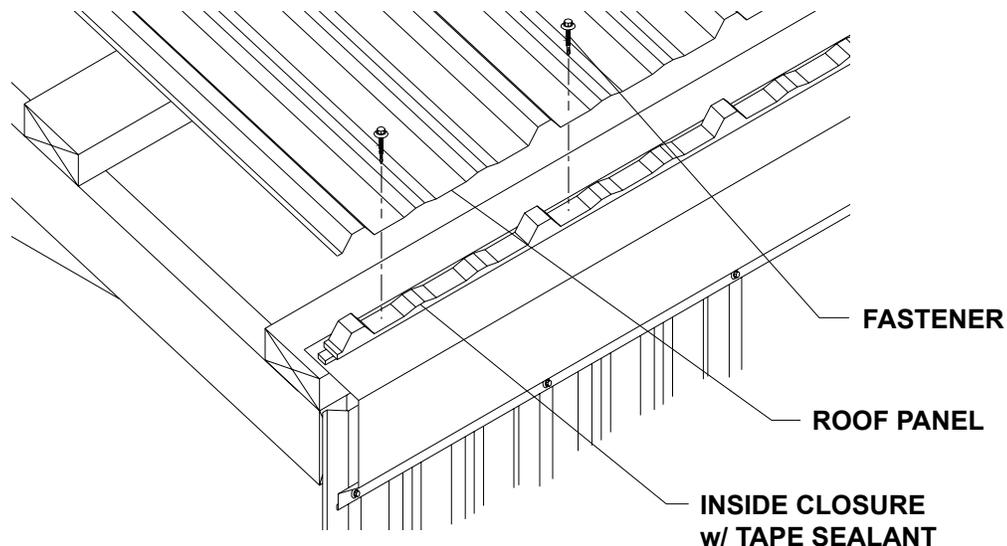

INSTALLING ENDLAP PANEL (IF REQUIRED)

**STEP
3**


1. Apply a row of Tape Sealant across and over the ribs of the eave panel about 3" from panel end.
2. Install the ridge panel over the eave panel and Tape Sealant with a 6" Endlap. **Fasten through both panels and Tape Sealant into support with appropriate amount of fasteners to meet local building code. (See fastening patterns on pages 13 and 14). Fasteners must penetrate sealant.**
3. After securing panel, repeat the fastening pattern at all panel support locations.

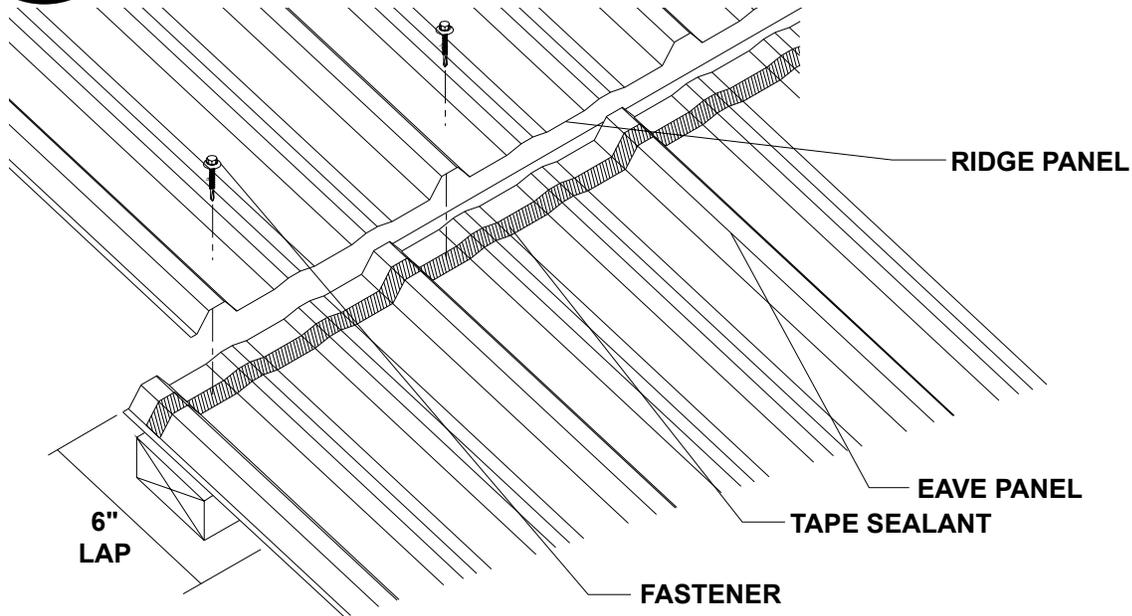

INSTALLING SIDELAP PANEL


**STEP
4**

1. Place the lapping seam of the second panel on top of previously installed panel so that panel ends are flush at eave (See below).
2. **Fasten through panel, closure, and Tape Sealant into support with appropriate amount of fasteners to meet local building code. (See fastening patterns on pages 13 and 14). Fasteners must penetrate closure and sealant.**
3. After securing panel, repeat the fastening pattern at all panel support locations.

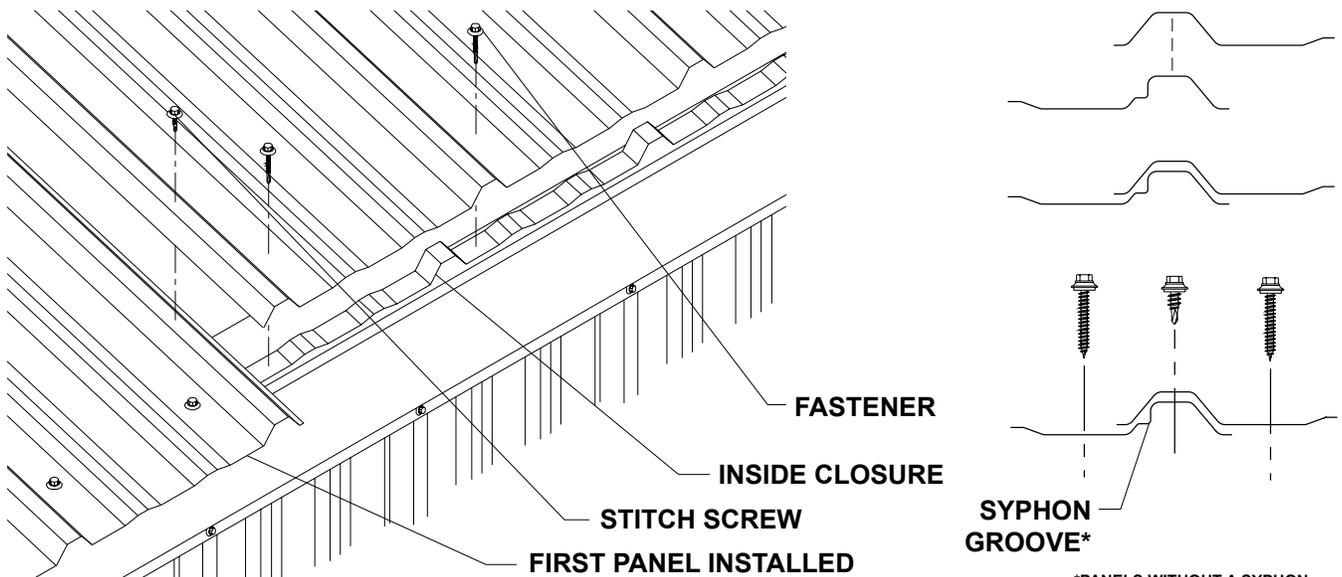


*PANELS WITHOUT A SYPHON GROOVE REQUIRE TAPE SEALANT IN THE SIDELAP

14" UNIVERSAL RIDGE DETAIL

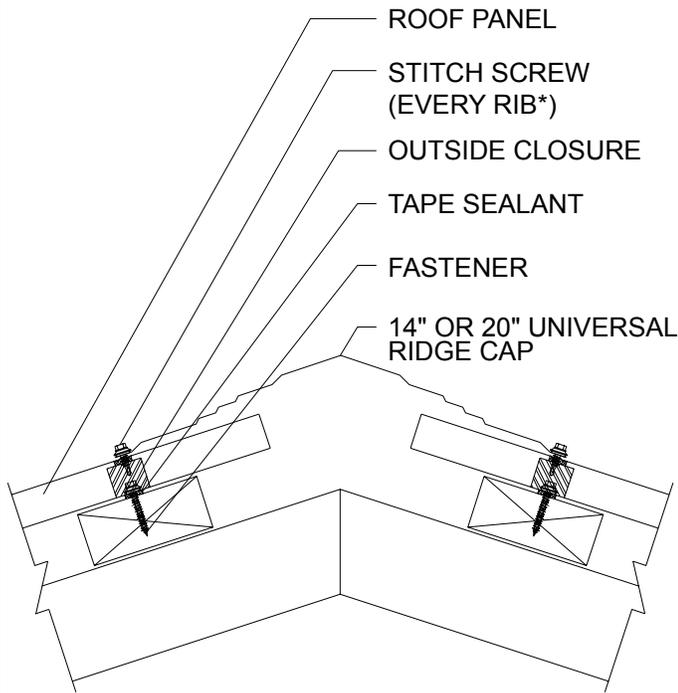


* FASTENER SPACING TO BE 8" - 12" O.C.

LOW PROFILE RIDGE VENT DETAIL

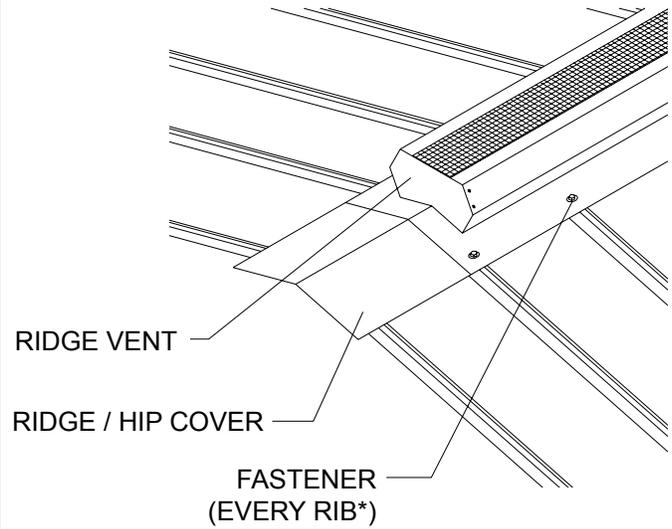


* FASTENER SPACING TO BE 8" - 12" O.C.


OUTSIDE CORNER DETAIL

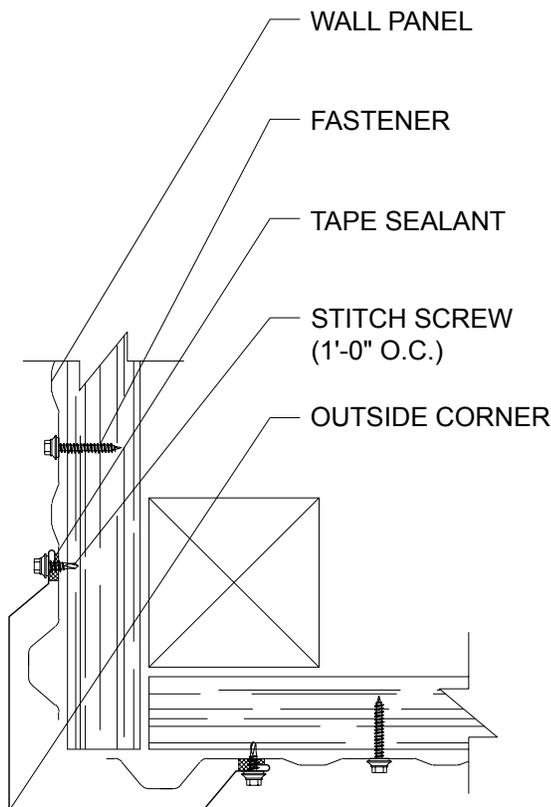

INSIDE CORNER DETAIL

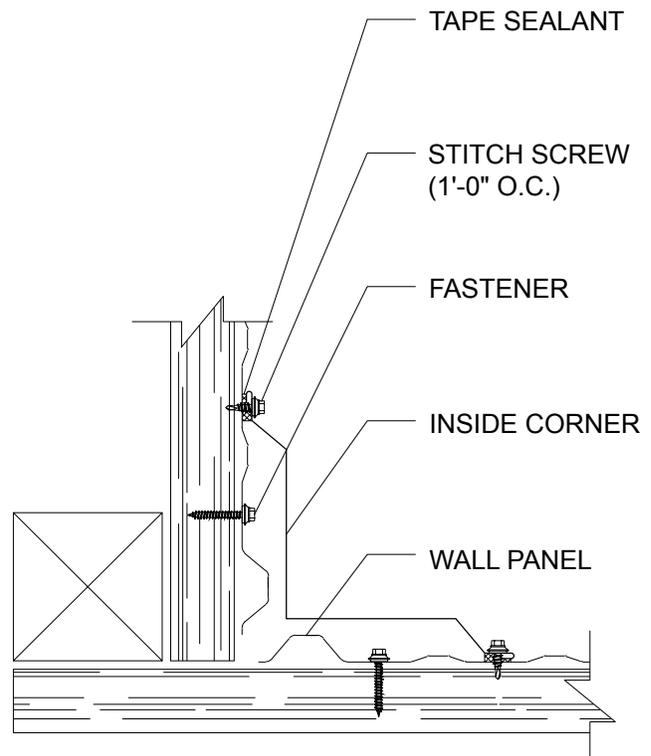


GABLE TRIM DETAIL

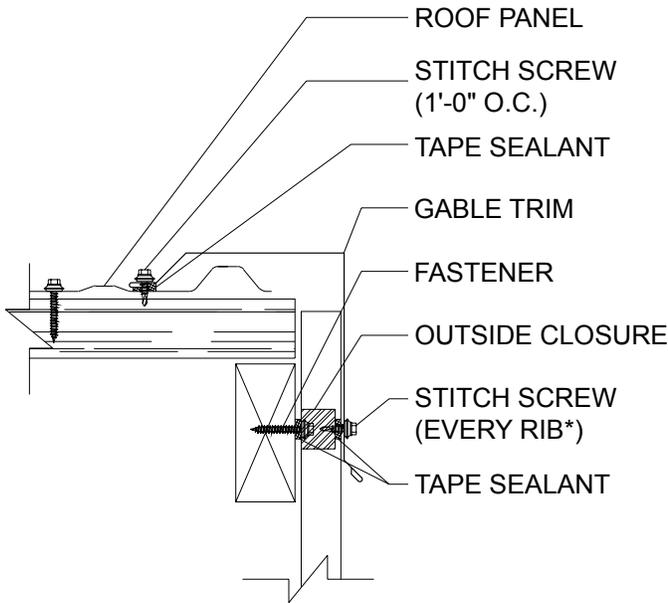


* FASTENER SPACING TO BE 8" - 12" O.C.

RAKE TRIM DETAIL

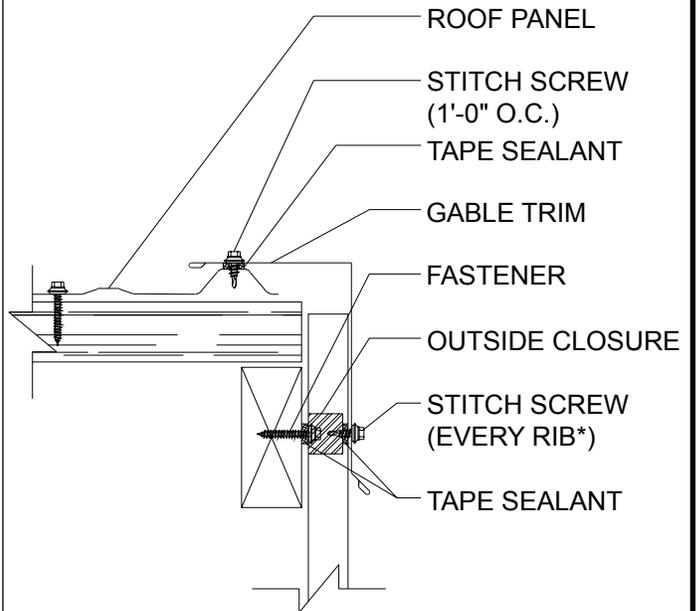


* FASTENER SPACING TO BE 8" - 12" O.C.

UNIVERSAL SIDEWALL DETAIL

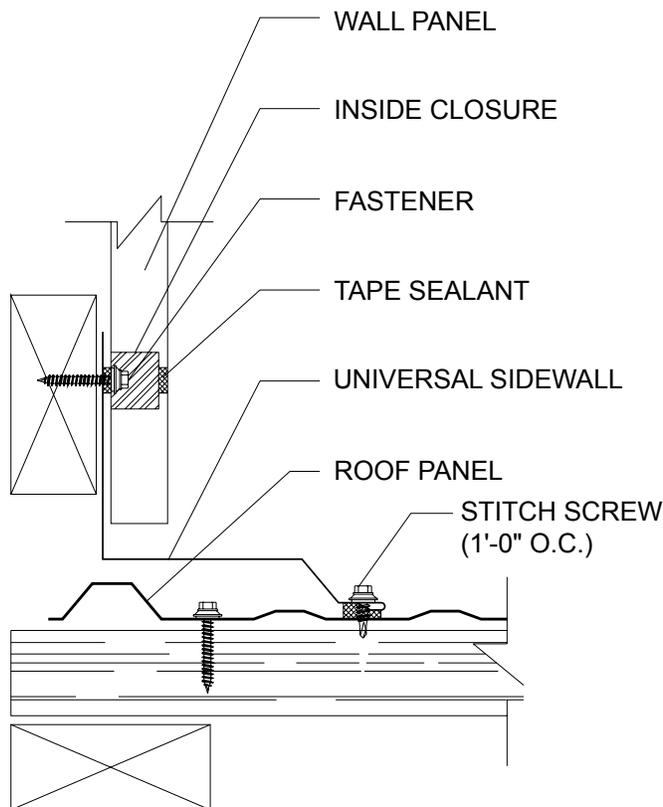


UNIVERSAL ENDWALL DETAIL

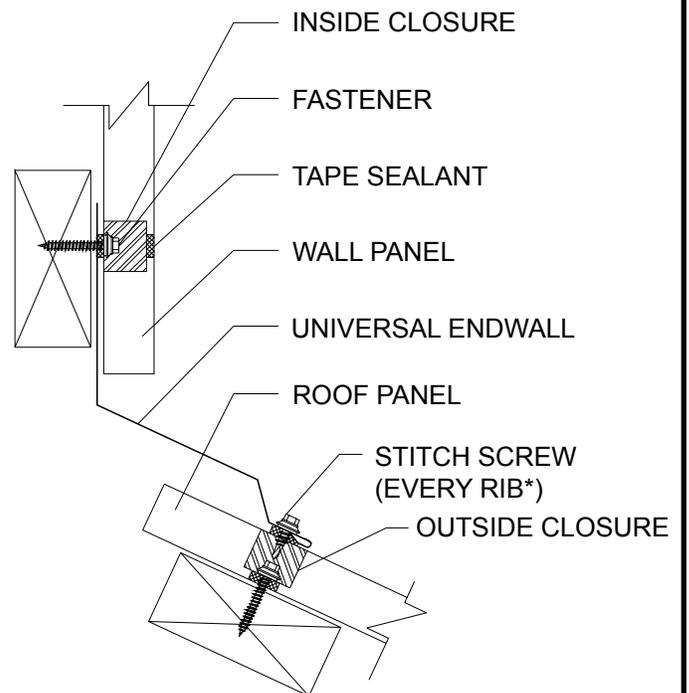


* FASTENER SPACING TO BE 8" - 12" O.C.

EAVE MOLDING DETAIL

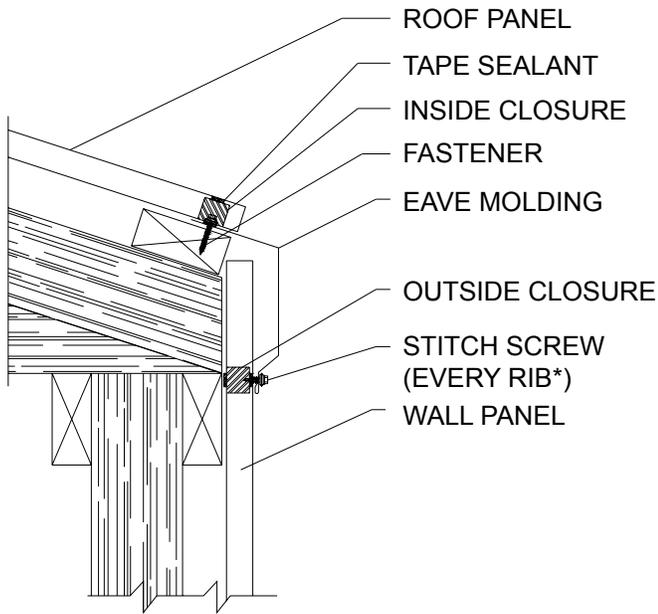


* FASTENER SPACING TO BE 8" - 12" O.C.

UNIVERSAL GAMBREL DETAIL

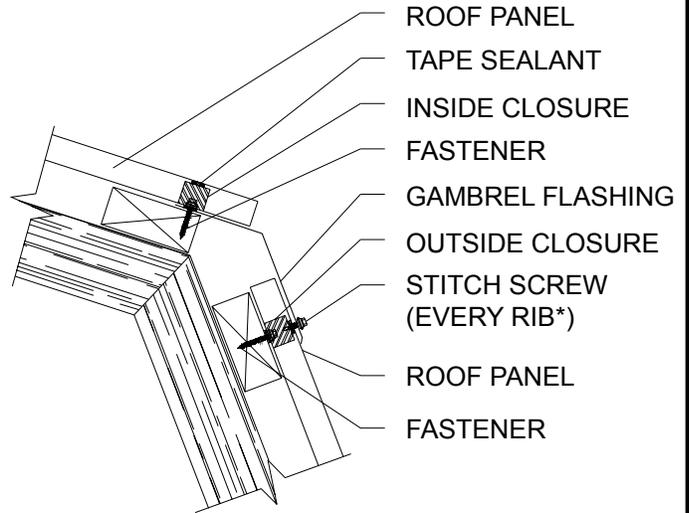


* FASTENER SPACING TO BE 8" - 12" O.C.


ANGLE BASE DETAIL

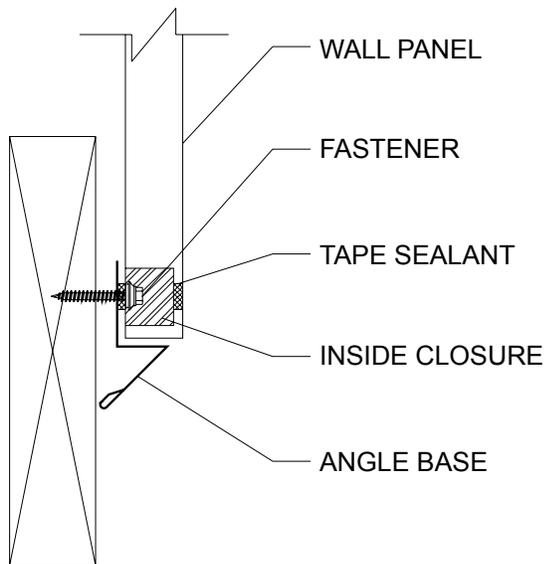


DOUBLE ANGLE DETAIL

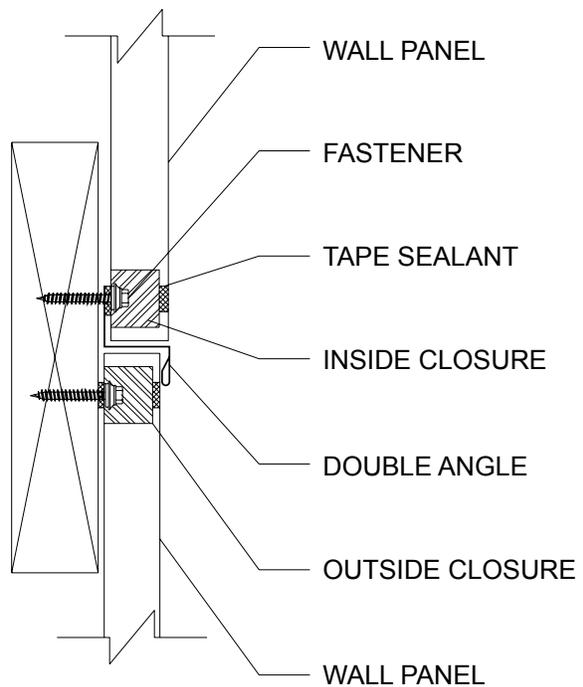


DRIP CAP DETAIL

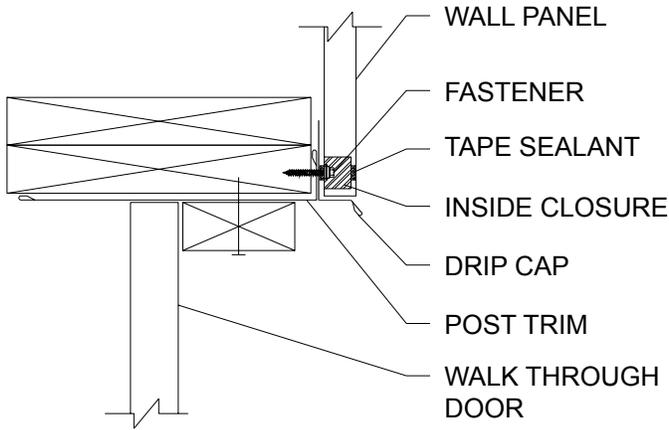


BASE MOLDING DETAIL

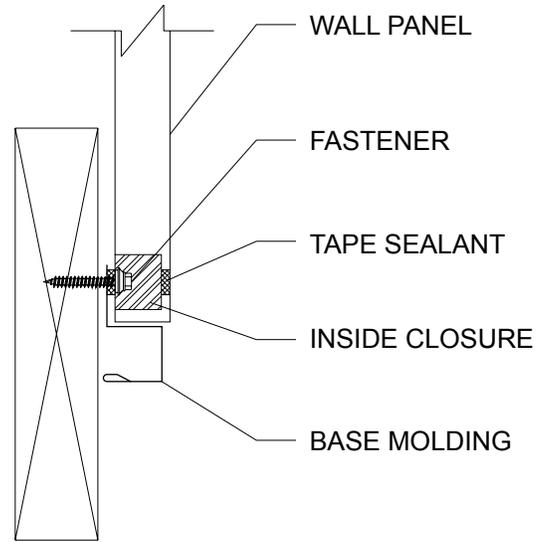


CANNONBALL TRACK COVER DETAIL

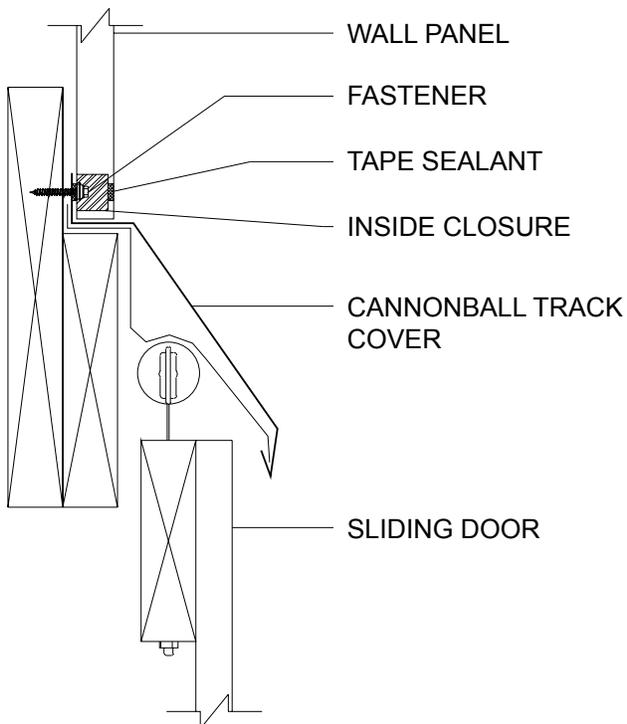


NATIONAL TRACK COVER DETAIL

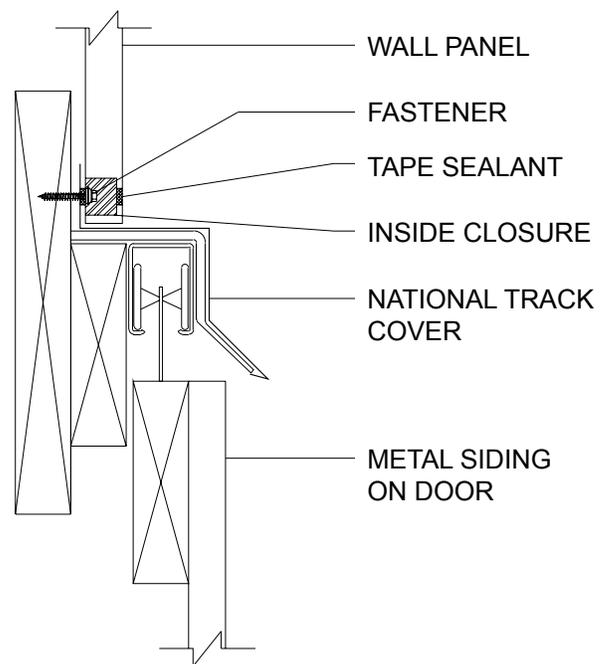


DOOR JAMB DETAIL

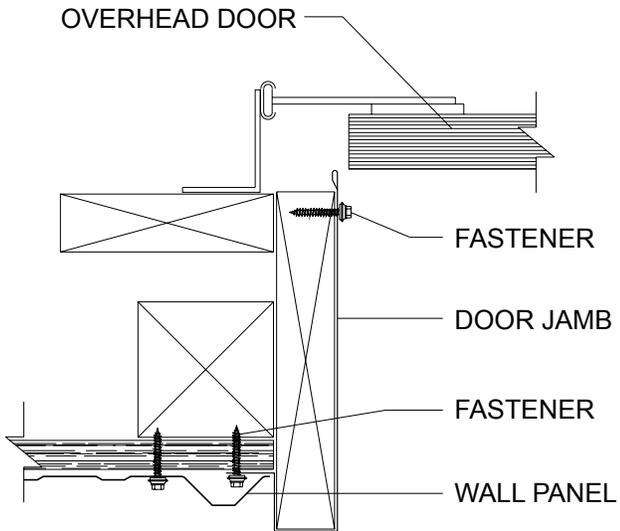


MINI-ANGLE / U-FLASHING DETAIL

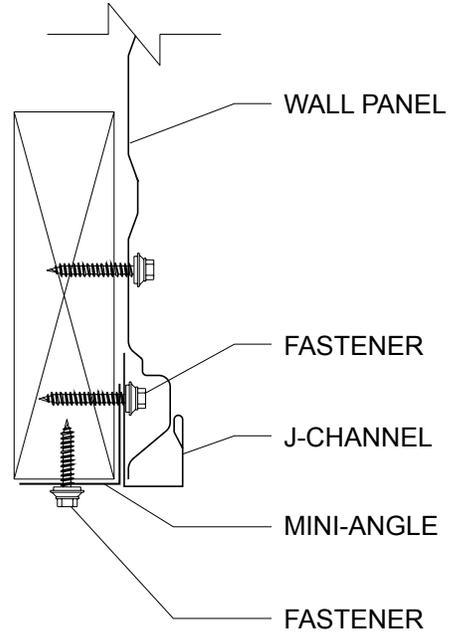


POST TRIM DETAIL

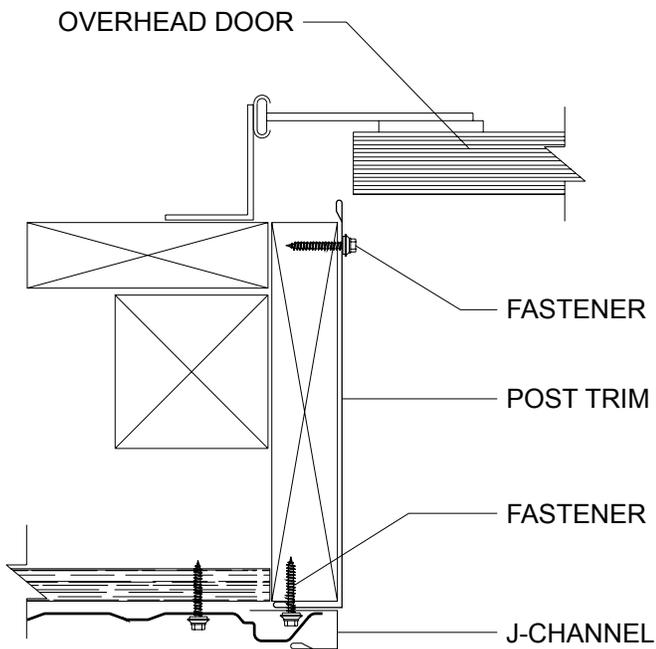


DOOR POST TRIM DETAIL

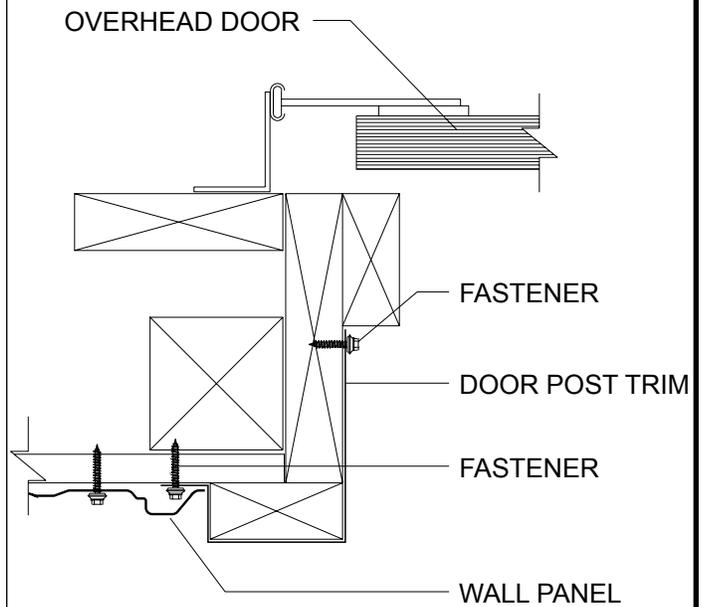

OVERHEAD DOOR TRIM DETAIL

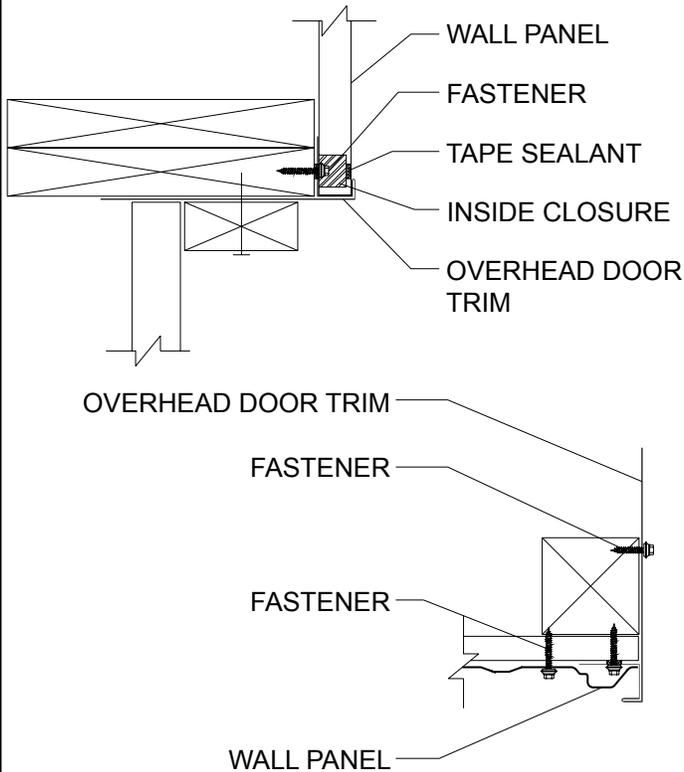


SOFFIT DETAIL

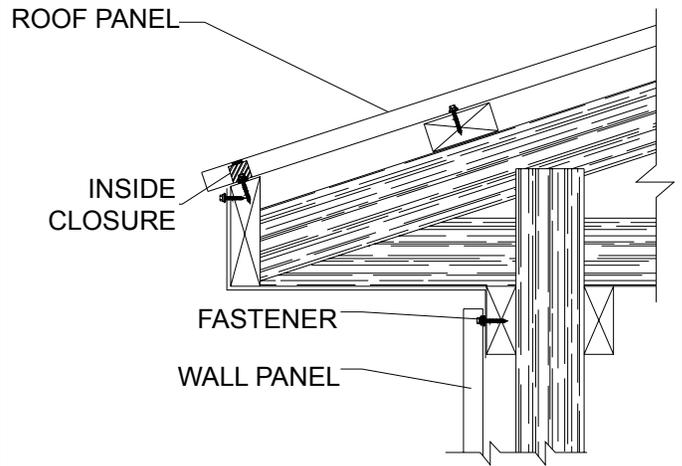


* FASTENER SPACING TO BE 8" - 12" O.C.

12" SOFFIT DETAIL

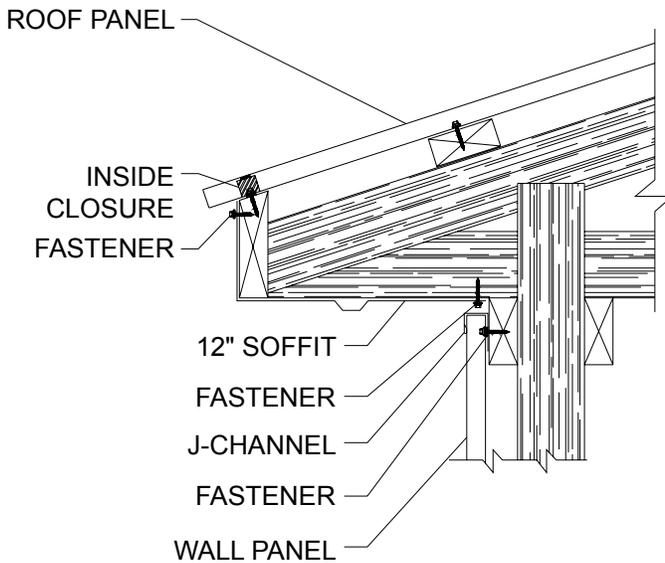


24" SOFFIT DETAIL

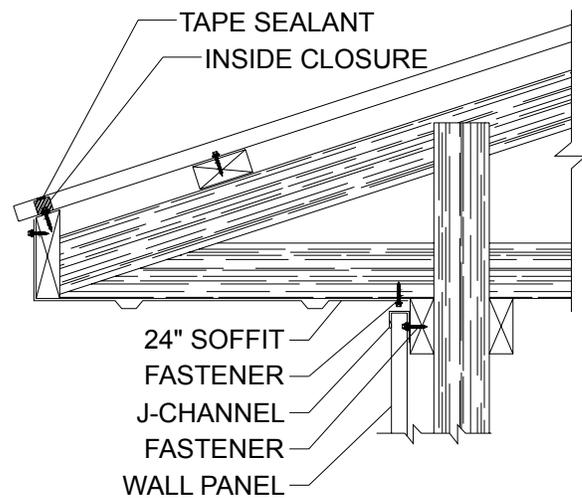

INSTALLATION OVERVIEW

- ◆ As shown below with the number designations, install panel against the prevailing wind.
- ◆ Make sure panels are square and plumb, to assure straight and proper alignment of the entire row of panels.
- ◆ For areas with high wind considerations, closer fastener spacing may be required.
- ◆ It is necessary to attach a temporary guide to the foundation to use as an alignment guide when installing siding panels.
- ◆ Siphon groove side of panel must be overlapped with the non-siphon groove side of the adjacent panel (if applicable).

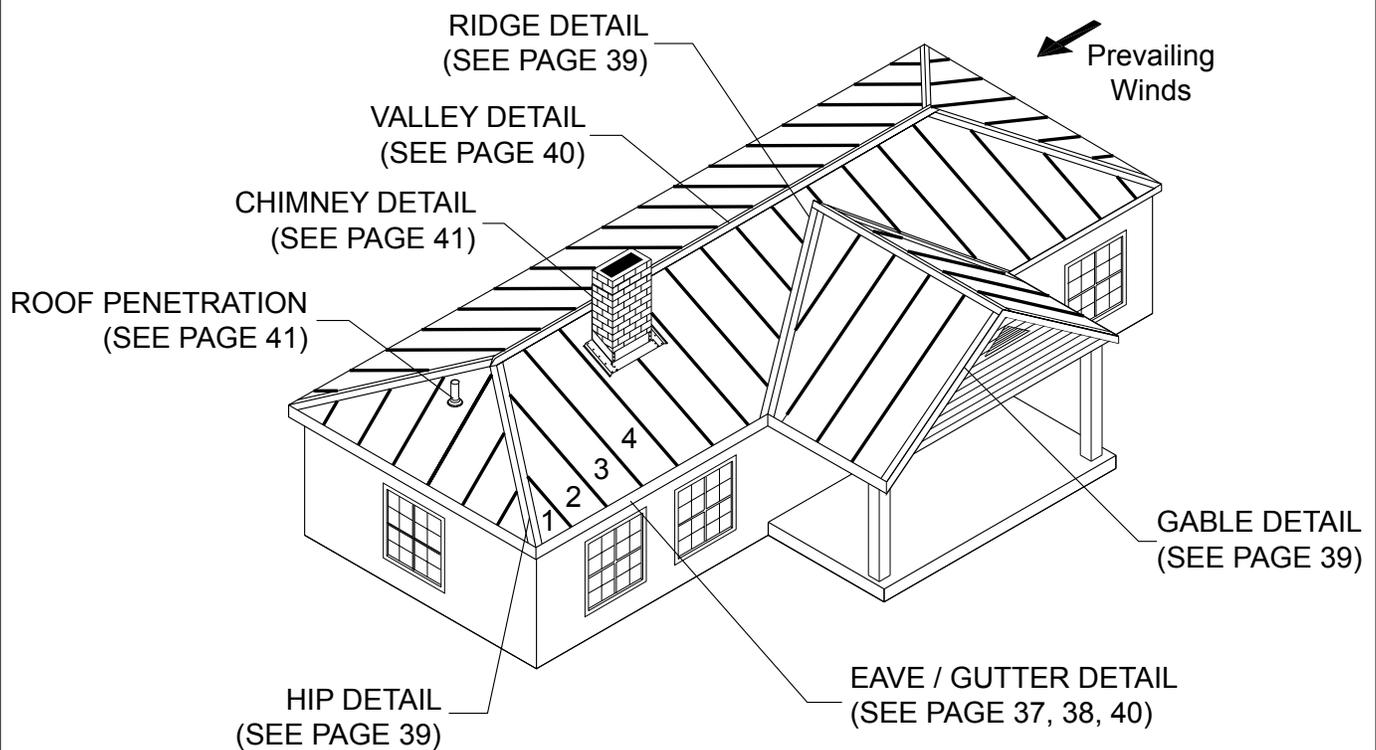


NOTE: -Eave Molding, Gutter and Valley Flashings must first be installed before panel installation can begin.
-Panels can be installed going from either left to right or right to left / looking from eave to peak.

INSTALLING INSIDE CLOSURES

**STEP
1**


1. Apply a row of Tape Sealant across the top leg of the Eave Molding along the width of the building.
2. Align and place Inside Closures over the Tape Sealant. It is critical that Inside Closures are square to building as this will control the alignment of the panels. (See page 24 to check building square).
3. Apply a row of Tape Sealant across the top of the Inside Closure (Not shown for clarity).

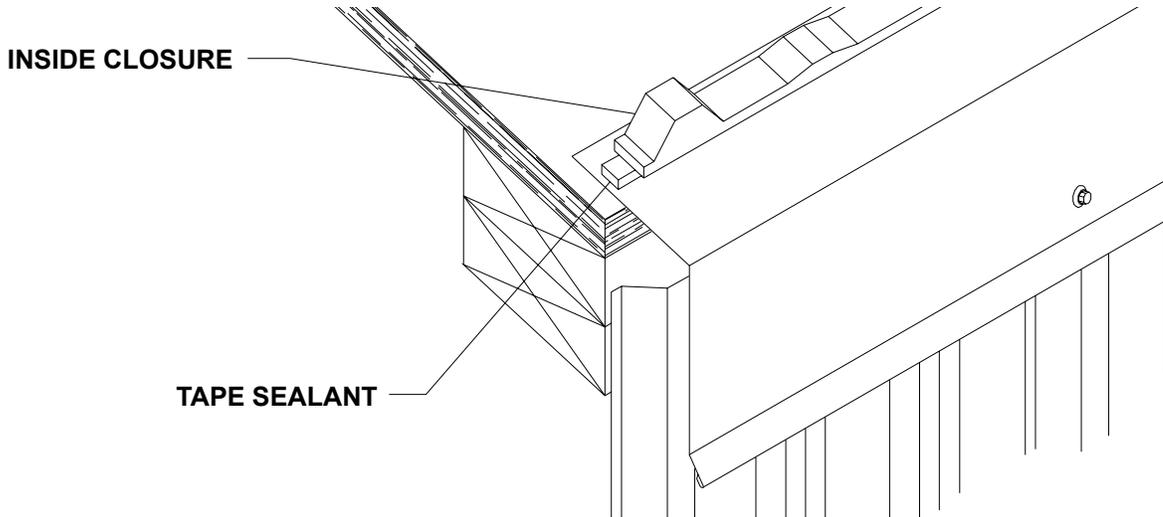

INSTALLING FIRST PANEL

**STEP
2**


1. Install the first panel over the Inside Closure to allow for desired overhang. Make sure the panel is square to the eave and rake.
2. Fasten through panel, closure, and sealants into decking with appropriate amount of fasteners to meet local building code. (See fastening patterns on pages 13 and 14). Fasteners must penetrate closure and sealant.
3. After securing panel at eave, repeat the fastening pattern at the appropriate spacing to meet local building codes.

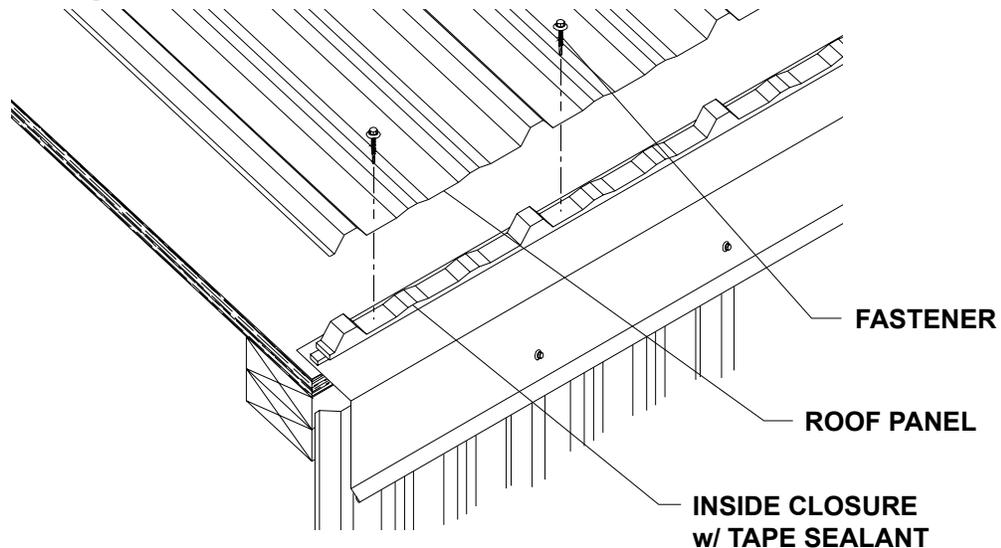

INSTALLING SECOND PANEL

**STEP
3**



1. Apply a row of Tape Sealant across and over the ribs of the first panel about 3" from panel end.
2. Install the second panel over the first panel and Tape Sealant with a 6" Endlap. **Fasten through both panels and Tape Sealant into support with appropriate amount of fasteners to meet local building code. (See fastening patterns on pages 13 and 14). Fasteners must penetrate sealant.**
3. After securing panel at eave, repeat the fastening pattern at the appropriate spacing to meet local building codes.

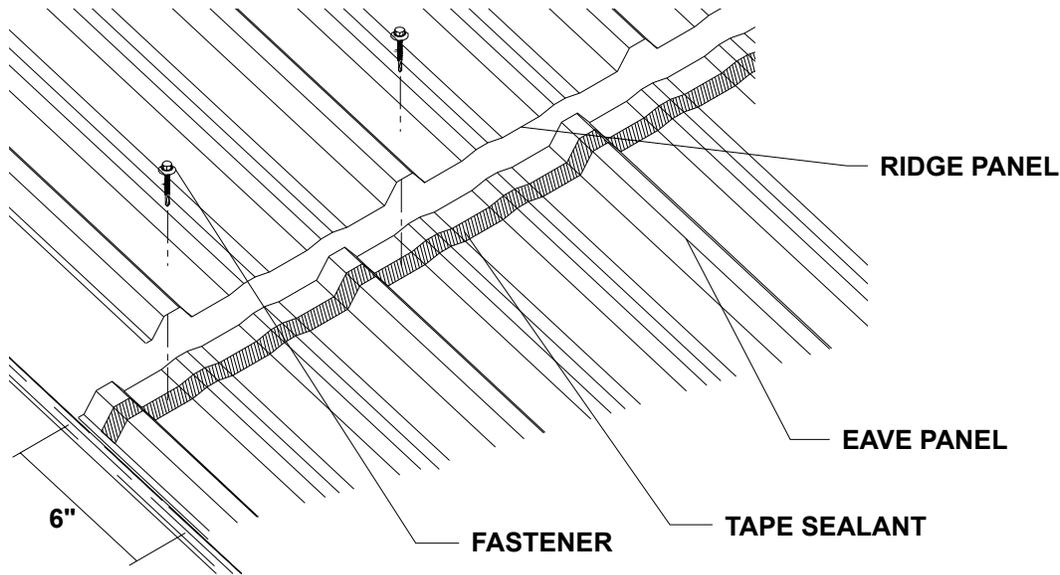

INSTALLING SECOND EAVE PANEL


**STEP
4**

1. Place the lapping seam of the second panel on top of previously installed panel so that panel ends are flush at eave (See below).
2. **Fasten through panel, closure, and Tape Sealant into support with appropriate amount of fasteners to meet local building code. (See fastening patterns on pages 13 and 14). Fasteners must penetrate closure and sealant.**
3. After securing panel at eave, repeat the fastening pattern at the appropriate spacing to meet local building codes.

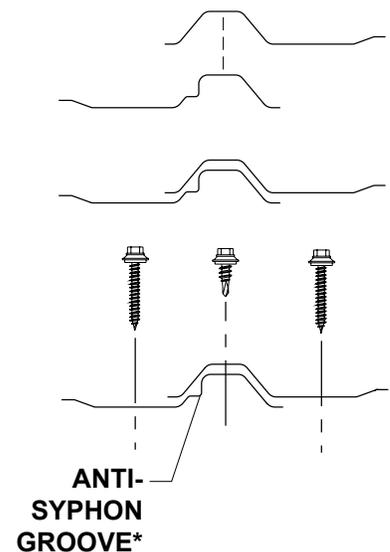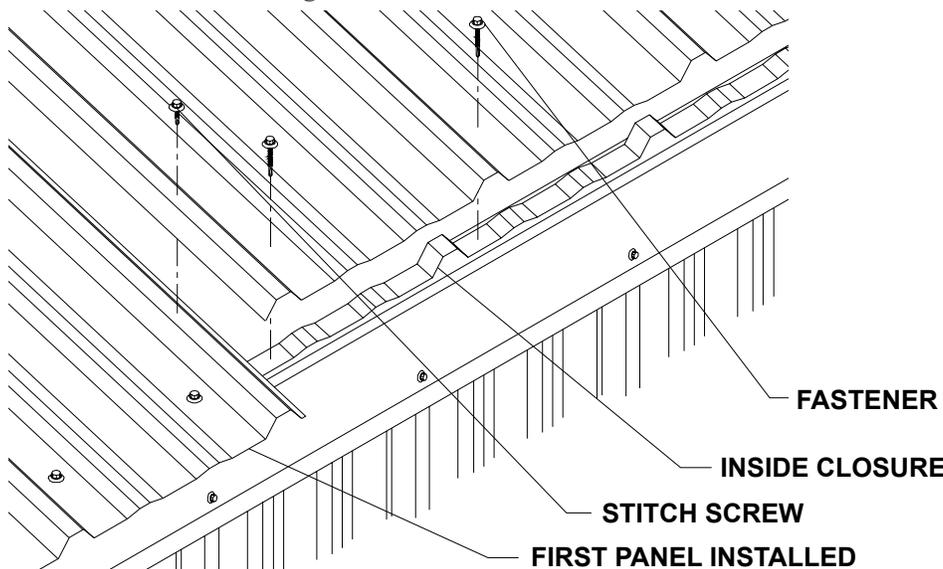


*PANELS WITHOUT AN ANTI-SYPHON GROOVE REQUIRE TAPE SEALANT IN THE SIDELAP.

14" UNIVERSAL RIDGE DETAIL

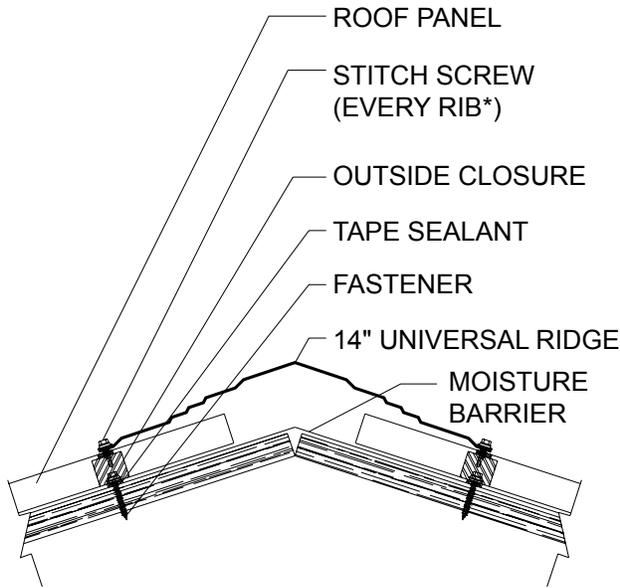


* FASTENER SPACING TO BE 8" - 12" O.C.

RIDGE / HIP COVER DETAIL

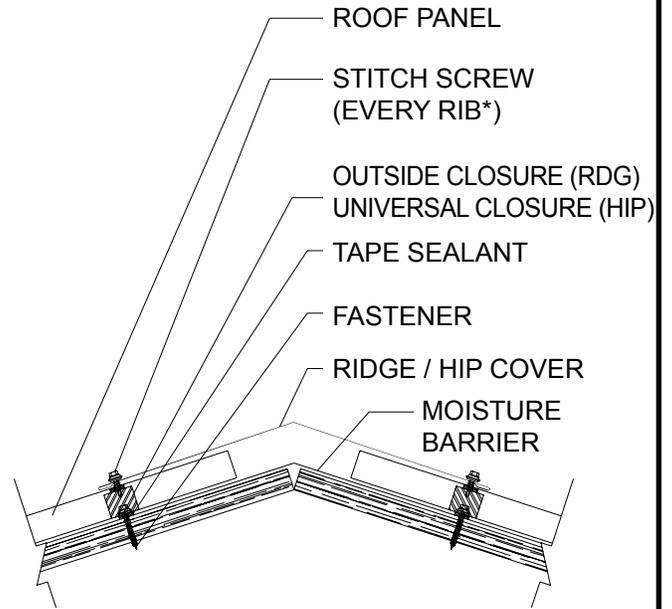


* FASTENER SPACING TO BE 8" - 12" O.C.

VENTED RIDGE DETAIL

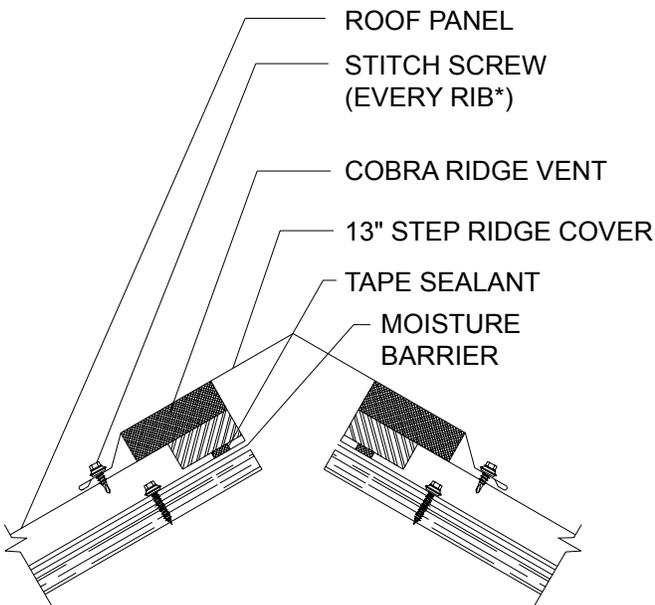


* FASTENER SPACING TO BE 8" - 12" O.C.

GABLE TRIM DETAIL

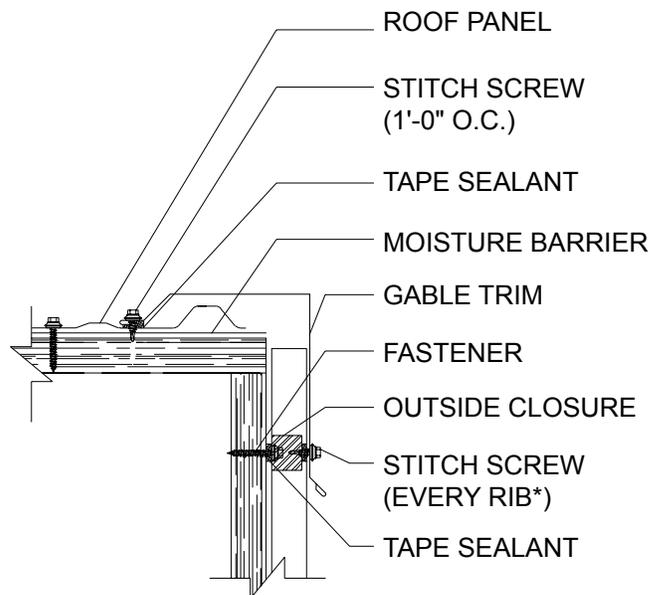


* FASTENER SPACING TO BE 8" - 12" O.C.


EAVE DETAIL

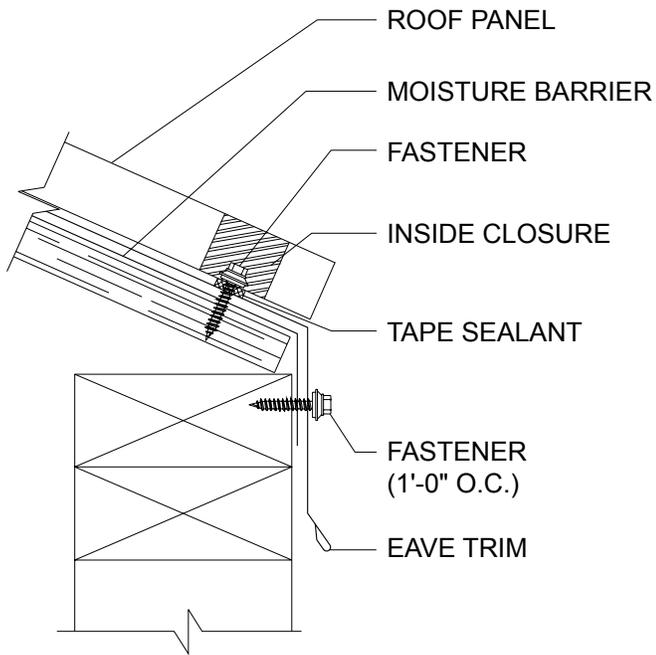


GUTTER DETAIL

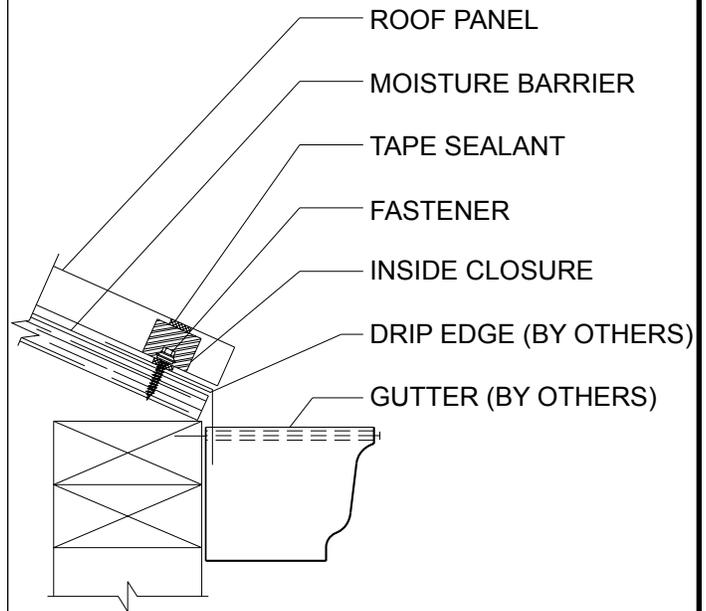

VALLEY DETAIL


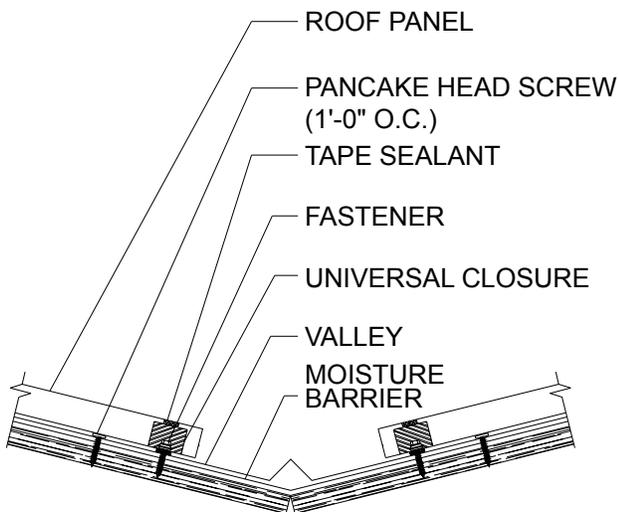


PITCH BREAK DETAIL


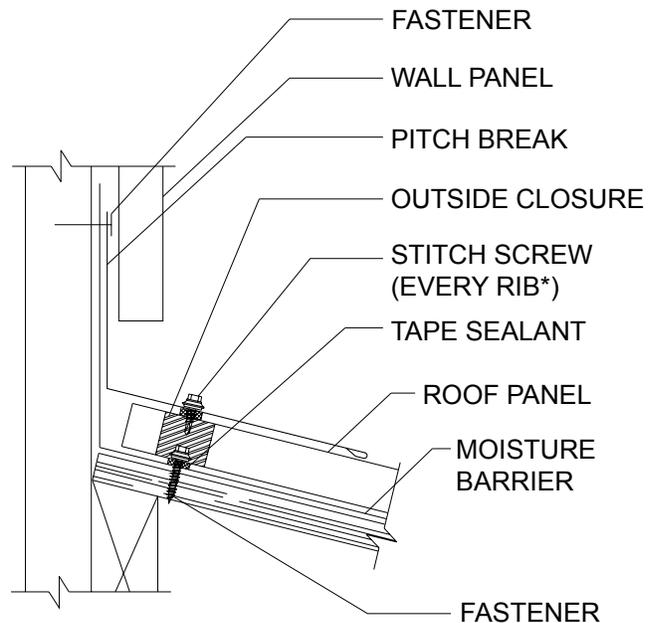


* FASTENER SPACING TO BE 8" - 12" O.C.

CHIMNEY / CRICKET DETAIL

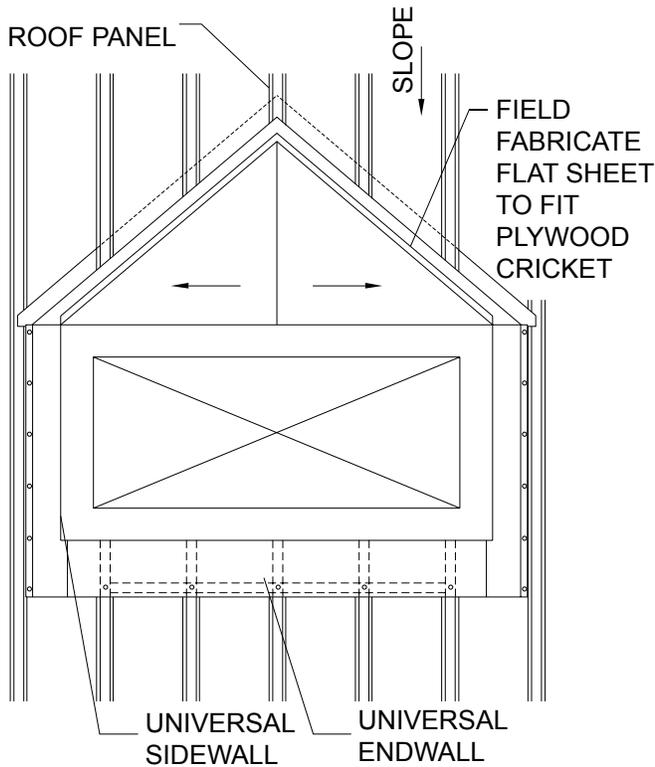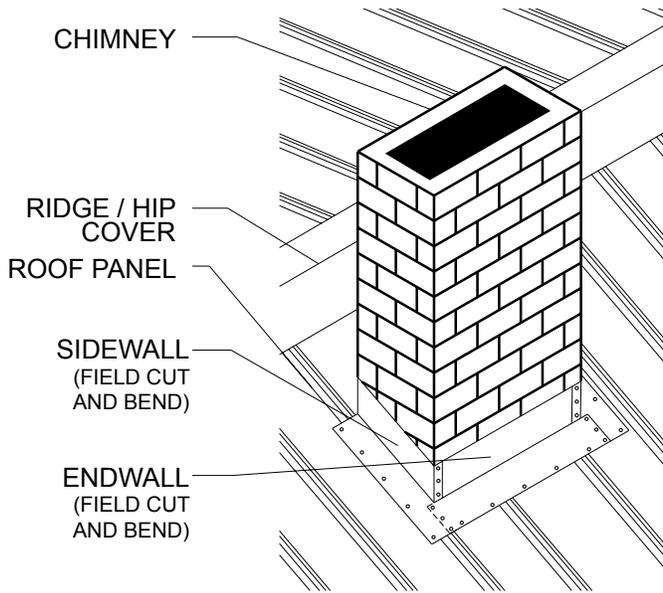

ROOF PENETRATION DETAIL

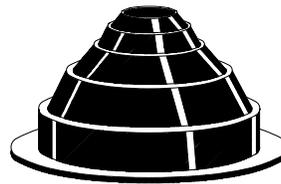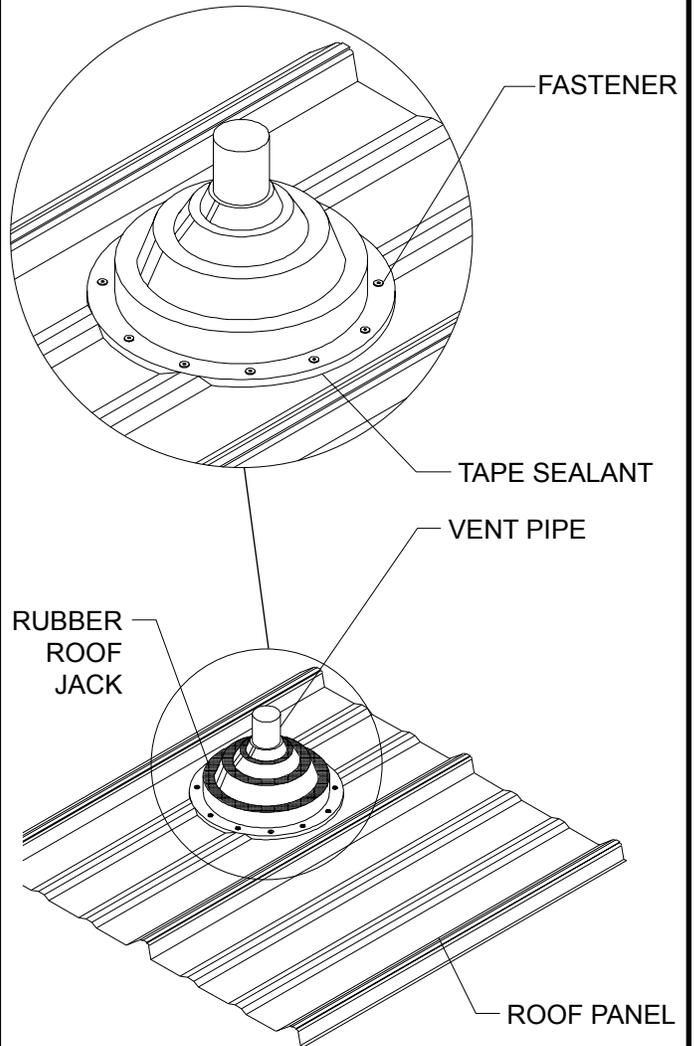

AVAILABLE SIZES

- MINI (1/4" TO 1 1/8" O.D. PIPE)
- #2 (1 3/4" TO 3" O.D. PIPE)
- #4 (3" TO 6" O.D. PIPE)
- #6 (6" TO 9" O.D. PIPE)
- #8 (7" TO 13" O.D. PIPE)

Though factory applied prepainted finishes are very durable and will last many years, eventually it may be desirable to thoroughly clean or repaint them.


Dirt pickup may cause apparent discoloration of the paint when it has been exposed in some dirt-laden environments for long periods of time. In areas of strong sunlight, slight chalking may cause some change in appearance. A good cleaning will often restore the appearance of these buildings and render repainting unnecessary. An occasional light cleaning will help maintain a good appearance.

In many cases, simply washing the building with plain water using a hose or pressure sprayer will be adequate. In areas where heavy dirt deposits dull the surface, a cloth or soft bristle brush and solution of water and detergent ($\frac{1}{3}$ cup of laundry detergent per gallon of water for example) may be used. This should be followed by an adequate rinse of water. Do not use wire brushes, abrasives, or cleaning tools which will damage the coating surface.

Mildew may occur in areas subject to high humidity but is not normally a problem due to the high inherent mildew resistance of the baked finish that is used. To remove mildew along with the dirt, the following solution is recommended.

- $\frac{1}{3}$ cup detergent (Tide® or equivalent)
- $\frac{2}{3}$ cup trisodium phosphate (Solex® or equivalent)
- 1 quart of 5% sodium hypochlorite solution (Clorox® or equivalent)
- 3 quarts of water


Strong solvents and abrasive type cleaners should be avoided. Most organic solvents are flammable and toxic and must be handled accordingly. When using a solvent, consult maintenance professionals and label instructions for proper handling and disposal of washings. If required, a mild solvent such as mineral spirits can be used to remove caulking compounds, oil, grease, tars, wax, and similar substances. Use a cloth dampened with mineral spirits and apply only to areas which are contaminated. Follow up the use of this mild solvent with detergent cleaning and rinsing.

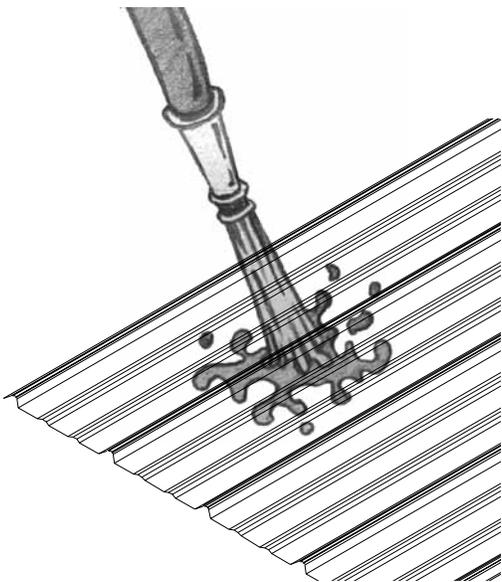

**HOSE OR PRESSURE SPRAY
FOR ADEQUATE CLEANING**



**DO NOT USE A
WIRE BRUSH**

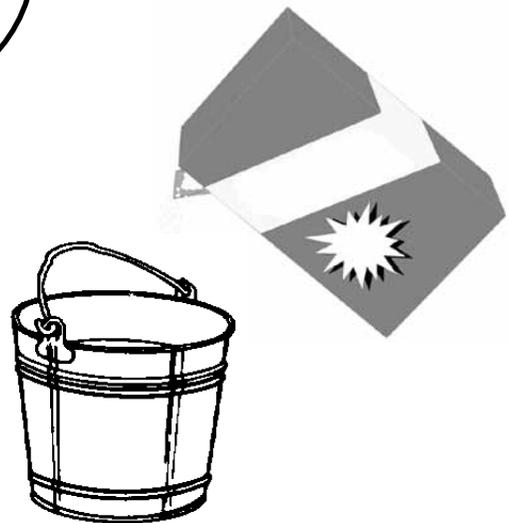

**USE MILD DETERGENT AND WATER
FOR HEAVY DIRT DEPOSITS**

