

INSTALLATION INSTRUCTIONS FOR MODEL SP737 BY:



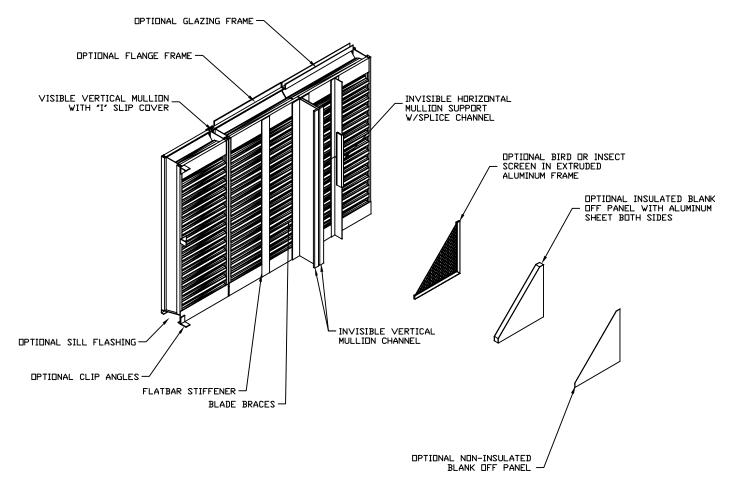


- READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION
- USE THESE INSTRUCTIONS IN CONJUNCTION WITH INDUSTRIAL LOUVERS SHOP DRAWINGS

STEP 1

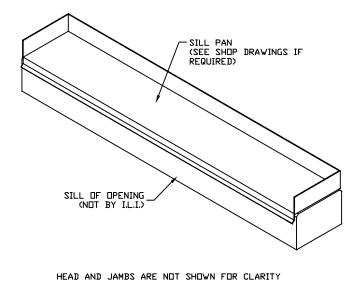

INSTALLING SILL FLASHING (IF REQUIRED)

- 1. LOCATE SILL PAN PER SHOP DRAWINGS.
- ATTACH: APPLY CAULK (NOT BY I.L.I.) TO SILL OF OPENING SET SILL PAN IN CAULK.

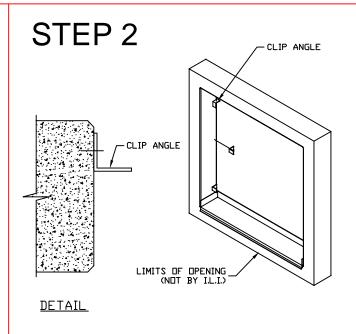


INSTALLING CLIP ANGLES


- REFER TO SHOP DRAWINGS FOR SIZE AND DETAILS OF CLIP ANGLES.
- 2. MEASURE SET BACK PLACEMENT OF CLIP ANGLES , AND DRILL HOLES INTO WALL.
- ATTACH CLIP ANGLES TO WALL. (ALL ANCHORS TO SURROUNDING CONDITIONS ARE NOT SUPPLIED BY I.L.I.)



INSTALLING LOUVER

- 1. PLACE LOUVER SECTION INTO OPENING.
- SHIM AROUND LOUVER TO CREATE PROPER DISTANCE FROM SURROUNDING CONDITIONS. (SEE SHOP DRAWINGS FOR DETAILS)
- ONCE PROPER PLACEMENT IS ACHIEVED. USE HOLES IN CLIP ANGLES TO DRILL PILOT HOLES IN JAMB, HEAD AND SILL.
- 4. FASTEN CLIP ANGLES TO LOUVERS WITH FASTENERS AS PROVIDED BY I.L.I.

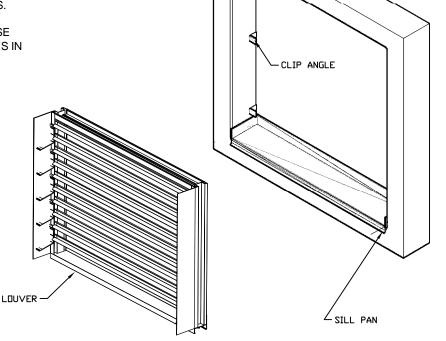


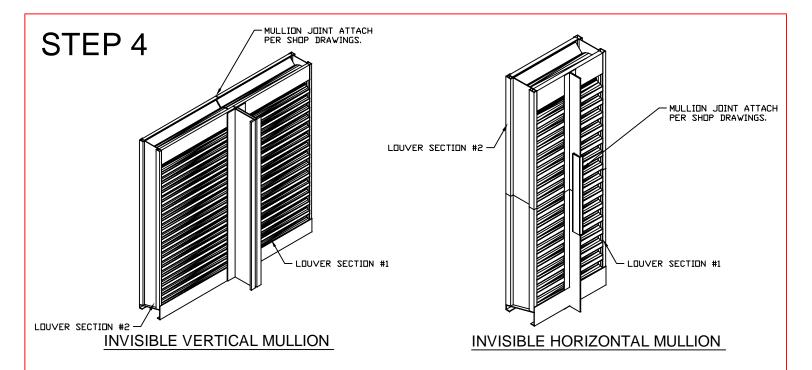


INSTALLING MULTI-SECTION LOUVERS

- 1. IF LOUVER IS SINGLE SECTION SKIP TO STEP 5.
- 2. IF LOUVER IS MULTI-SECTION INSTALL SECTION #1 AS PER STEP 1-3.
- 3. PUT SECTION #2 IN OPENING FOLLOWING STEPS 1-3. MAKING SURE SECTION # 1 ALIGNS WITH SECTION #2.
- 4. ATTACH MULLION JOINT PER SHOP DRAWINGS.
- 5. CONTINUE PROCESS UNTIL ALL SECTIONS ARE INSTALLED.

STEP 5

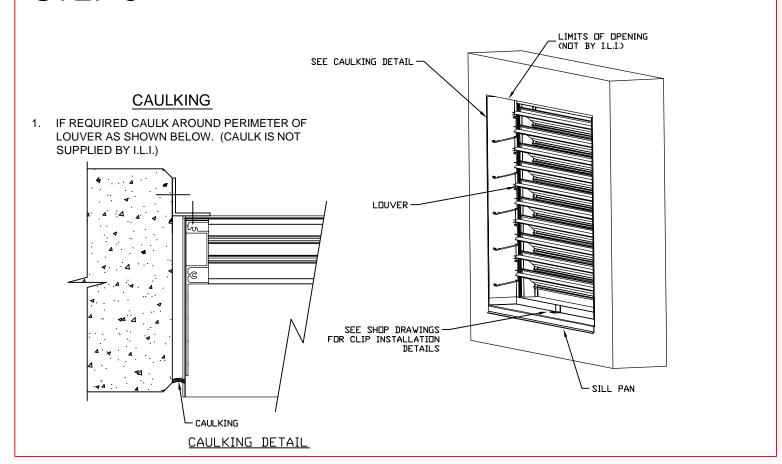


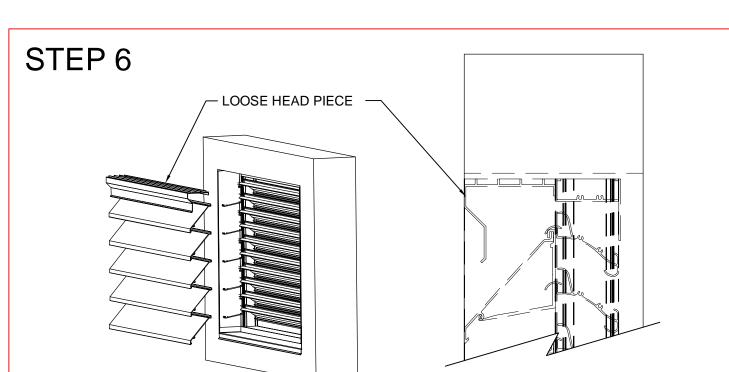


INSTALLING LOOSE HEAD PIECE

- PLACE LOOSE HEAD PIECE INTO THE TOP OF THE ROUGH OPEINING MAKING SURE TO PUSH BACK AGAINST THE LOUVER AND UP AGAINST THE HEAD OF THE ROUGH OPENING.
- 2. ANCHOR PART INTO SURROUNDNIG CONDITIONS (ALL ANCHORS TO SURROUNDING CONDITIONS ARE NOT SUPPLIED BY I.L.I.).

STEP 7

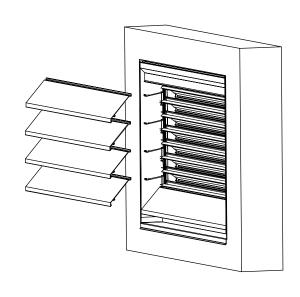

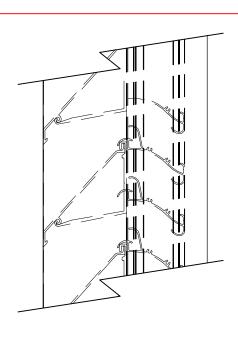

INSTALLING BLADES

1. SNAP BLADES INTO POSITION STARTING FROM THE BOTTOM AND WORKING TO THE TOP