


# Floating Wall Shelves

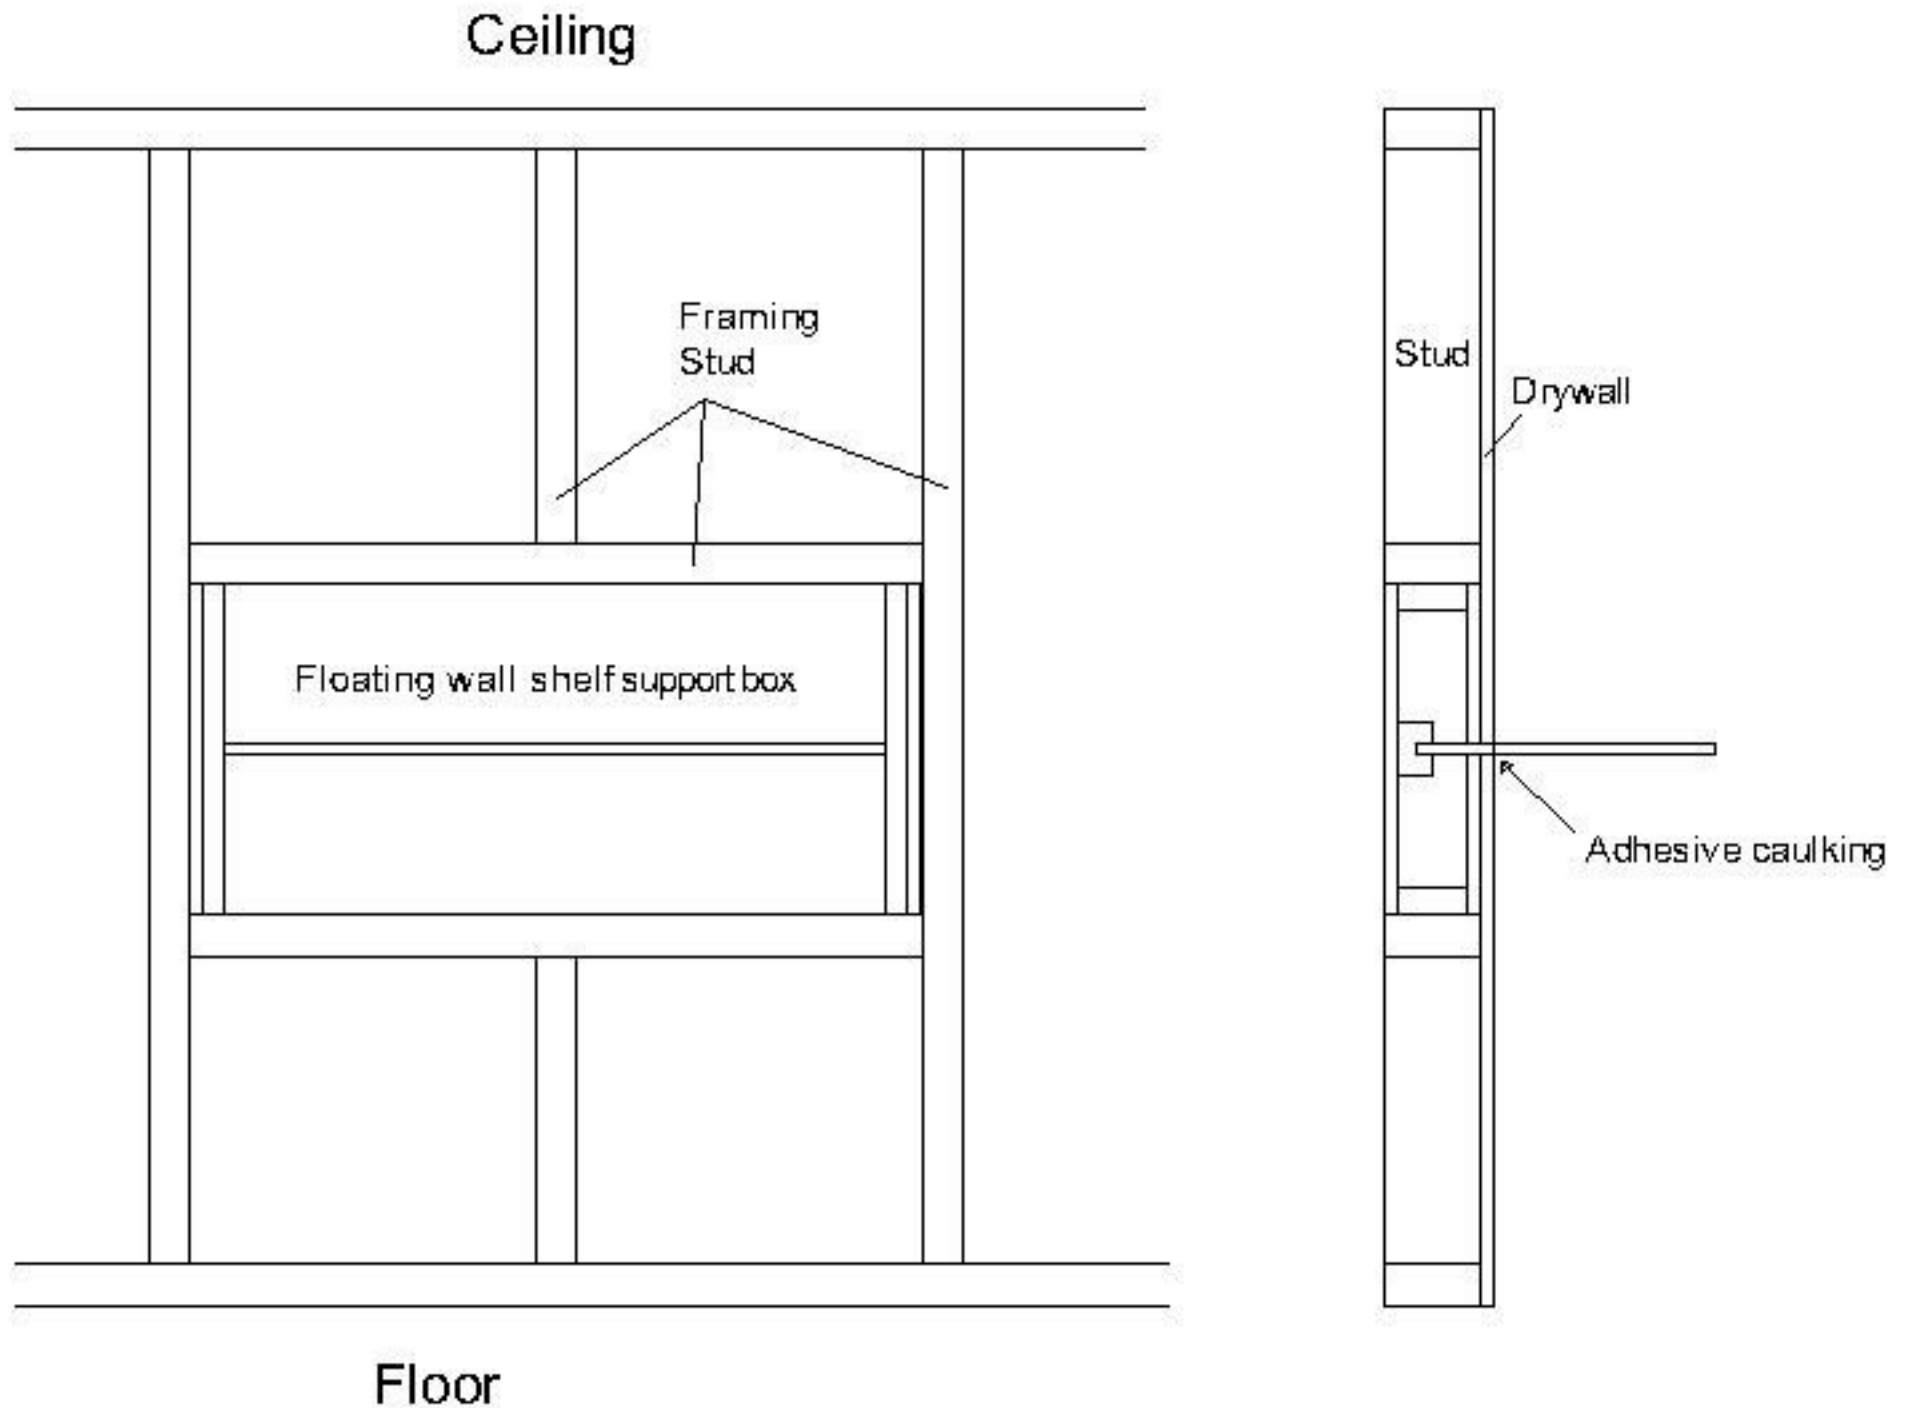

## Installation Instructions:

- The support box must be fastened with screws to your framing (Minimum of four screws on either side)
- Install drywall and cut slot open for glass installation.
- Test-fit the glass shelf. If it fits then clean any dust inside the slot.
- Before installing the glass shelf apply some amount of adhesive caulking inside the slot then insert the glass shelf all the way in the slot. If necessary you may shim the glass shelf with wood shim to level the shelf.
- Fill the gaps and holes with adhesive caulking.
- Wipe the excess caulking with a clean sponge. Let dry for 48 hours before use.
- If walls are to be covered with ceramic tiles, glass tiles or mirrors leave 1/8" gap between glass shelf and your tiles/mirrors

**No sharp objects like tiles/mirrors should be touching the glass shelves.**

PSUM BEAR

3000  
IND. CITY  
MEM. 1918

RESISTANCE DIRECTOR



CORNER  
WALL

CAVITIES

