


# Clickeze® Window Top Treatments

---

---

## KELSEY

- ▶ 14" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included

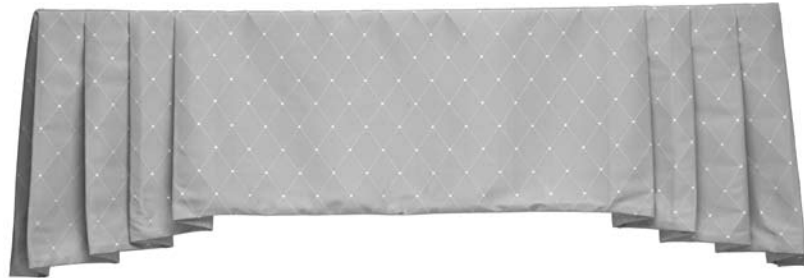


## SHEFFIELD

- ▶ 14" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Bottom band with contrasting fabric
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included



## INVERTED BOX PLEAT

- ▶ 14" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Bottom band with contrasting fabric
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included

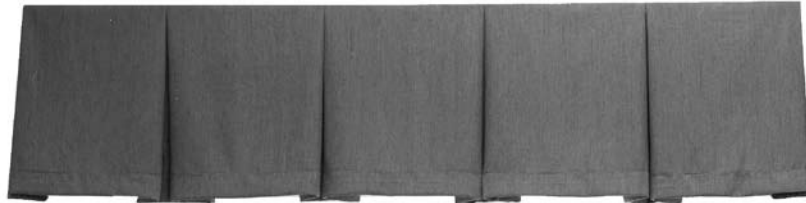

## SWAG/CASCADE

- ▶ 19" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Single or double styles available
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included



Single Style Shown



IPC.605/Rev.3

P.O. Box 406 · Muskego, Wisconsin 53150 USA  
inprocorp.com  
Nationwide 800.222.5556/Fax 888.715.8407  
International Sales 262.679.5521/Fax 262.679.5524

**INPRO**  
**CLICKEZE**  
Privacy Systems/Soft Goods

# Clickeze Window Top Treatments

## Suggested Specifications

---

### PART 1 - GENERAL

#### 1.01 SUMMARY

##### A. Top Treatment

#### 1.02 SECTION INCLUDES

##### A. Top Treatment

#### 1.03 REFERENCES

##### A. National Fire Protection Association (NFPA)

#### 1.04 SYSTEM DESCRIPTION

##### A. Performance Requirements: Provide top treatment fabrics that conform to the following requirements of regulatory agencies and the quality control of Clickeze, InPro Corporation.

##### 1. Fire Performance Characteristics: Provide top treatment fabrics that conform with NFPA 701, Fire Tests or Flame and Resistant Textiles and Films.

#### 1.05 SUBMITTALS

##### A. Product Data: Manufacturer's printed product data for each type of top treatment board specified.

##### B. Fabric Samples: Swatch cards of fabric samples illustrating fabric color and weave.

##### C. Manufacturer's Care Instruction: Printed care instructions for each top treatment board.

#### 1.06 DELIVERY, STORAGE AND HANDLING

##### A. Deliver materials in unopened factory packaging to the jobsite.

##### B. Inspect materials at delivery to assure that specified products have been received.

##### C. Store in original packaging in a climate controlled location away from direct sunlight.

#### 1.07 PROJECT CONDITIONS

##### A. Environmental Requirements: Products must be installed in an interior climate controlled environment.

#### 1.08 WARRANTY

##### A. Standard Clickeze Limited Warranty against material and manufacturing defects.

### PART 2 - PRODUCTS

#### 2.01 MANUFACTURER

##### A. Acceptable Manufacturer Clickeze, InPro Corporation, PO Box 406 Muskego, WI 53150 USA; Telephone: 800.222.5556, Fax: 888.715.8407, www.inprocorp.com

##### B. Substitutions: Not permitted

##### C. Provide all top treatment boards from a single source.

#### 2.02 MATERIALS

##### A. Top treatment

##### 1. Fabric: Provide 100% polyester fabric that is flame retardant.

#### 2.03 FINISH AND COLOR

##### A. Top Treatment Fabric: Select solid or patterned fabric from manufacturer's standard selection.

#### 2.04 FABRICATION

##### A. Top Treatment

##### 1. Provide Kelsey Top Treatment to width required for window.

##### a. Top treatment shall have a 14" drop at the center.

##### b. Returns shall be 3", 6" or 8".

##### c. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

##### d. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

##### 2. Provide Sheffield Top Treatment to width required for window.

##### a. Top treatment shall have a 14" drop at the center.

##### b. Returns shall be 3", 6" or 8".

##### c. Bottom band shall have contrasting fabric.

##### d. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

##### e. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

##### 3. Provide Inverted Box Pleat Top Treatment to width required for window.

##### a. Top treatment shall have a 14" drop at the center.

##### b. Returns shall be 3", 6" or 8".

##### c. Bottom band shall have contrasting fabric.

##### d. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

##### e. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

##### 4. Provide Swag Cascade Top Treatment to width required for window.

##### a. Top treatment shall have a 19" drop at the center.

##### b. Top Treatment shall have a single or double swag.

##### c. Returns shall be 3", 6" or 8".

##### d. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

##### e. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

### PART 3 - EXECUTION

#### 3.01 EXAMINATION

##### A. Examine areas and conditions in which the top treatment will be installed.

##### 1. Complete all finishing operations, including painting, before beginning installation of cubicle tracking system materials.

##### 2. Verify that surfaces and above ceiling supports are ready to receive work.

#### 3.02 PREPARATION

##### A. General: Prior to installation, clean substrate to remove dust, debris, and loose particles.

#### 3.03 INSTALLATION

##### A. General: Locate the top treatment as indicated on the approved detail drawing for the appropriate substrate and in compliance with the installation instructions.

#### 3.04 CLEANING

##### A. At completion of the installation, remove any debris and clean surfaces in accordance with the Clickeze clean-up and maintenance instructions.

