



HORIZONTAL BLINDS SPECIAL OPTIONS AND POCKET INSTALLATIONS

Top-lock Cord Lock

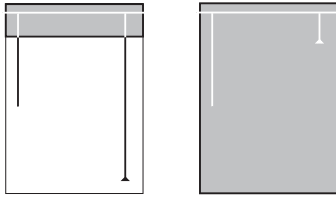

- Locks blind in fully raised position only
- Provides uniform exterior appearance
- Ring pull with 4" controls optional
- Telescopic pole optional
- Available on S3000™, Classics™, CustoMiser® and Micro

Tilt Limiter

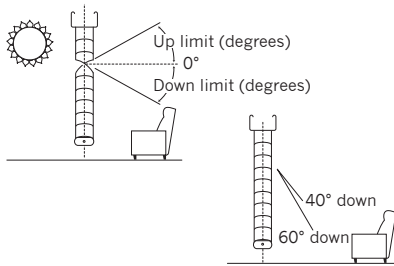


- Uniform exterior appearance
- Reduces thermal stress
- Up/down settings are nominally 0°, 20°, 40°, 60° and 80° (or any combination of these angles)
- Can be field adjusted
- Available on S3000™, Classics™, CustoMiser® and Micro

Turn Clips

Clip length is required and must be specified

Typical Recessed Channel
(Supplied by others)

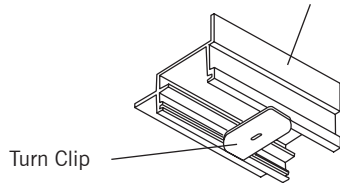


- Used in extruded blind pockets
- Clips lock into extruded aluminum channel
- Slotted for easy installation and removal
- Color coordinated and custom sized
- Classics™ blind minimum inside dimension is 1-5/8" x 1-1/4"
- CustoMiser® blind minimum inside dimension is 1-1/8" x 1-1/4"
- Design guidelines for extruded pockets available upon request


Pocket Brackets

Reveal Bracket: Optional (Two-Part Assembly)

Top Mount




Bottom Loading



- Two-piece bracket for pocket installation
- Minimum pocket width is 3" (additional width required as pocket depth increases)
- Available for Classics™ only
- Stacking height = Blind drop x .035 + 2"

Top Mounted
Pocket Bracket
(for bottom loading of blind)

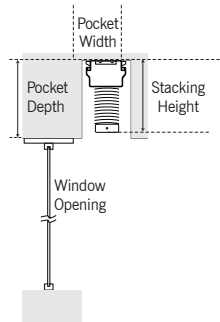

Stack Height Schedule

Blind Drop	Stacking Height	Blind Drop	Stacking Height
30	3	150	7½
60	4	180	9
90	5	210	10
120	6½	240	11

$$\text{Stacking Height} = [\text{Blind Drop} \times 0.035] + 2"$$