



WallSource™ New Construction Box

INSTALLATION INSTRUCTIONS


In Stud Construction

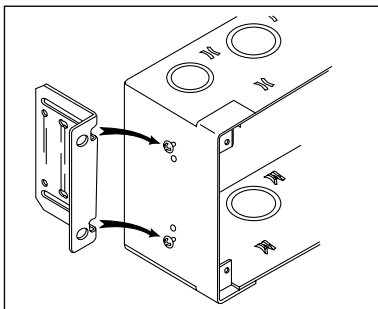


1. Install mounting brackets, included with WSA42-4.

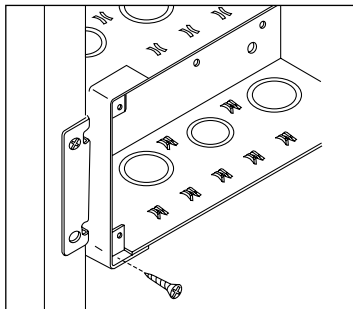


2. Attach to stud.

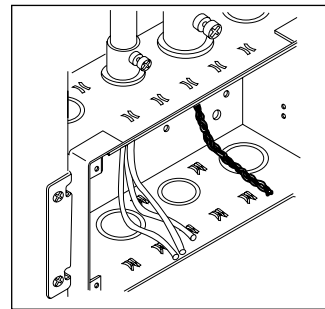


3. Pull wire and cable.

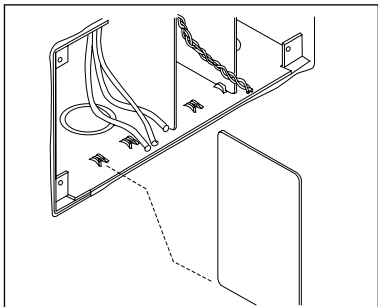


4. Install divider(s).

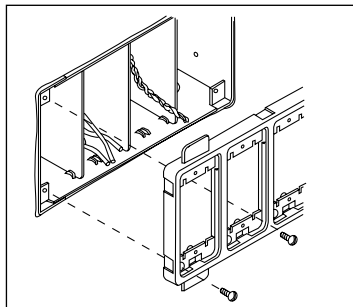

5. Install self-levelling WSA07-4 device mounting bracket.

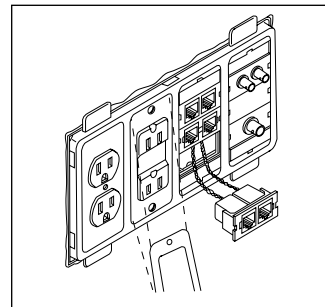


6. Mount devices.

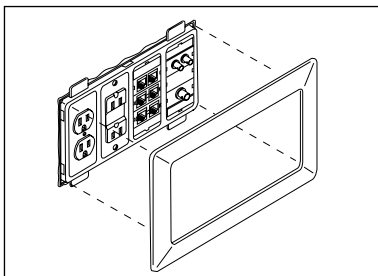


7. Snap on trim ring, included with WSA07-4.

For Retrofit Applications in Stud Construction:

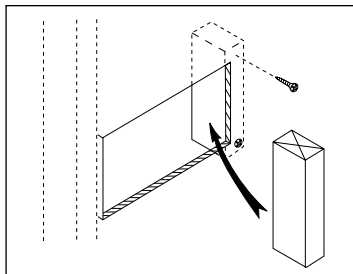

1. Cut opening in wall.
Install WSA42-4.

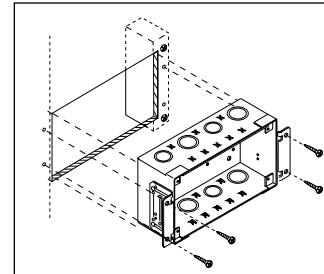

2. Attach brackets to studs.
Continue with Step 3.