

Florestone Tub / Shower Features

QUALITY YOU CAN TRUST.

Since 1947, Florestone Products Company has built a reputation based on product quality, ease of installation and reliability. Today we serve contractors, engineers, specifiers, architects and builders with products, service and distribution nationwide. The manufacturing methods, craftsmanship and attention to detail of Florestone Fiberglass Showers are second to none.

WIDE VARIETY OF SIZES AND STYLES.

We offer a wide choice of models, sizes, and styles. The "tile back" look gives you another decorative option.



FLORESTONE PRODUCTS CO., INC.

2851 Falcon Drive • Madera, CA 93637
T. 559.661.4171 • T. 800.446.8827
F. 559.661.2070 • florestone.com

FACTORY INSTALLED OPTIONAL HYDROMASSAGE SYSTEMS.

Florestone Tub/Showers are available with full-therapy jet action hydromassage systems, creating a complete body-surround therapy massage action, soothing away body aches and tension. Fittings are available in matching PVC colors, chrome or polished brass finishes.

OPTIONAL GRAB BARS.

In most applications Florestone Products can mount additional grab bars to its line of tub/showers. Drawings are required.

COLORS

Standard: White

OPTIONAL MANUFACTURERS' MATCH COLORS

AMERICAN STANDARD

Bone	Light Mink	Spring
Candlelight	Loganberry	Sterling Silver
Daydream	Rain Forest	Shell
Fawn Beige	Rhapsody Blue	Warm White

ELJER

Classic Grey	Peach Bisque	Twilight Blue
Dusty Rose	Platinum	Verde
Glacier Blue	Ruby	Zinfandel
Island Sea	Sage	
Natural	Sandlewood	

KOHLER

Almond	Innocent Blush	Teal Tender Grey
Biscuit	Jersey Cream	Thunder Grey
Chamois	Mexican Sand	Timberline
Country Grey	Merlot	Wild Rose
Desert Bloom	Seafoam Green	
Ice Grey	Skylight	

For other colors, call for availability and price.

Florestone Tub / Showers Installation Instructions

**FLORESTONE
TUB / SHOWERS
SHOULD BE
INSTALLED BY A
PROFESSIONAL PLUMBING
CONTRACTOR.**

FRAMING

Complete two sides of the squared and framed pocket according to dimensional drawings




**Dimensions may vary $\pm 1/4$ " inch-
check unit before installation.**

Some Florestone units are too large to pass through doorways. Make sure the unit is in the installation area before framing is completed.

*Note on Code Compliance:

Since local codes and regulations vary, Florestone Products will not be responsible for code compliance. Please check with your local city and county building departments for specific regulations or restrictions before ordering.

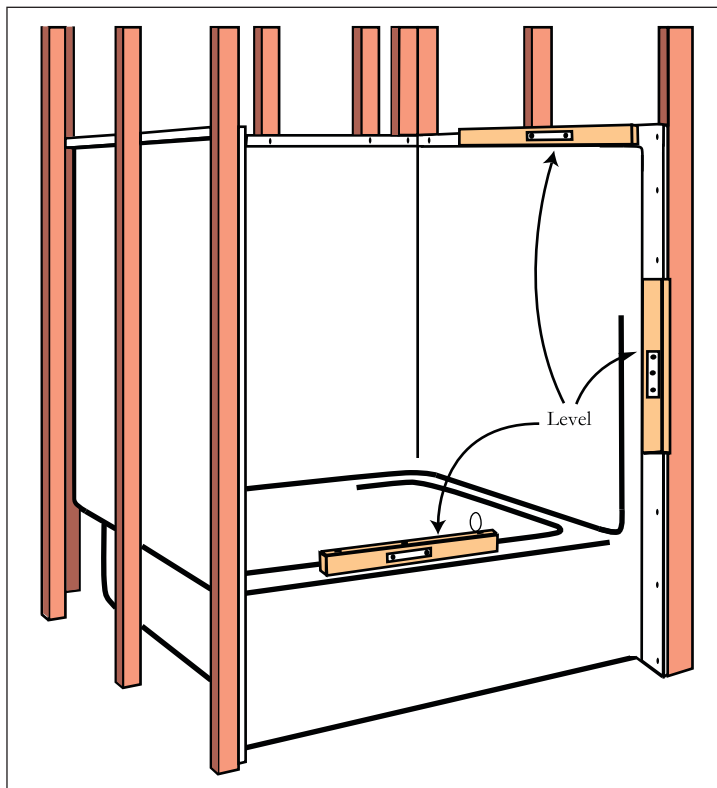

SETTING SHOWER / BATH UNIT

Install unit into position with front apron firmly on the floor. Use a level (3/4 min.) on the offset of front and side faces. Level top ledge of dam. Plumb and level shim if necessary. Mortar or plaster base is recommended.

SECURE UNIT

Fasten back and sidewall flanges to studs with large-headed #6 galvanized nails. Use #12 sheet metal screws for installation into steel studs.

ROUGH PLUMBING

Rough plumbing must extend above sub-floor or slab 1". Lay out accurate location of valves and, working from unfinished side of unit, drill 9/16" holes. From finished side of unit enlarge holes with a hole saw. For large openings use a saber saw. Because the one-piece construction eliminates the possibility of reaching over the tub end to connect the drain and overflow, unit should be located to provide access through the walls to make connections. Check for leaks before installing drywall and closing off plumbing access. With fire rated walls, finished wall board must be in place before units are installed.

CAULK

Caulk all openings around valves and outlets with a silicone caulking.

CLEANING

Clean up with liquid detergent and warm water.

AVOID USING ABRASIVE CLEANERS.

They may scratch and dull the surface of the unit.