


INSTALLATION GUIDE

POWERFOIL[®] X2.0

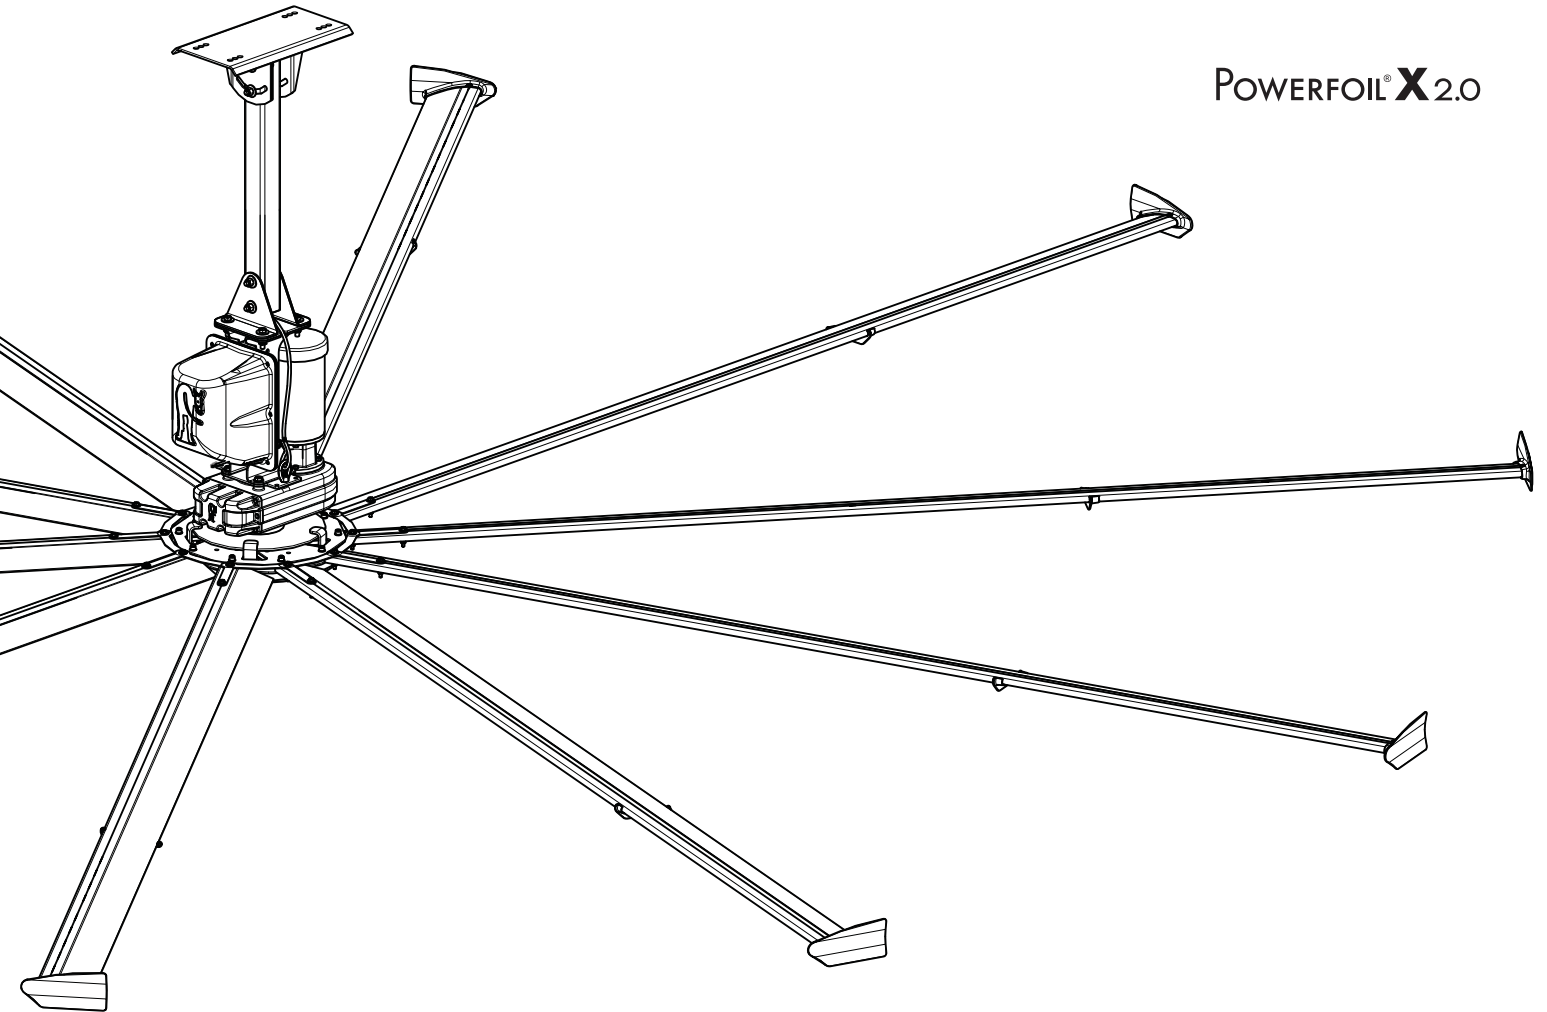

Installation Checklist

Do you have the appropriate mount to accommodate your roof pitch? If you are uncertain or feel you have the incorrect mount for your building structure, please contact Customer Service at 1-877-BIG-FANS.

Did a structural engineer approve the mounting structure? See page 8 for Big Ass Fans-approved mounting structures.

Are you familiar with the function and use of the safety cable? See page 20 for information on properly securing the safety cable.

Will the fan be installed so that the airfoils are at least 10 ft (3.05 m) above the floor?

Will the fan be installed so that the airfoils have at least 2 ft (0.61 m) of clearance from obstructions?

Will the fan be installed so that it is not subjected to high winds such as from an HVAC system or near a large garage door? If the fan is mounted at the same level or higher than a diffuser, the winglets must be at a distance that is at least 1x the measure of the fan's diameter. If the fan is mounted at the same height or below a diffuser, the winglets must be at a distance that is at least 2x the measure of the fan's diameter.

Will the distance between multiple fans be at least 2.5x the fans' diameter when measured from the centers of the fans.

If installing the fan on an I-beam, ensure the upper yoke is the correct size. See page 12 for more information on installing the fan to an I-beam.


If you ordered multiple fans, did you keep the parts for each fan together? It is critical that the airfoils be properly matched with the motor unit.

Do you have the correct power circuit for the fan controller? See pages 2–3 for information concerning power requirements for the fan controller.

Customer Service: 1-877-BIG-FANS
(International: 1-859-233-1271)

Installation Guide

8'-24' Powerfoil® X2.0 10'-24' Powerfoil® X2.0Plus

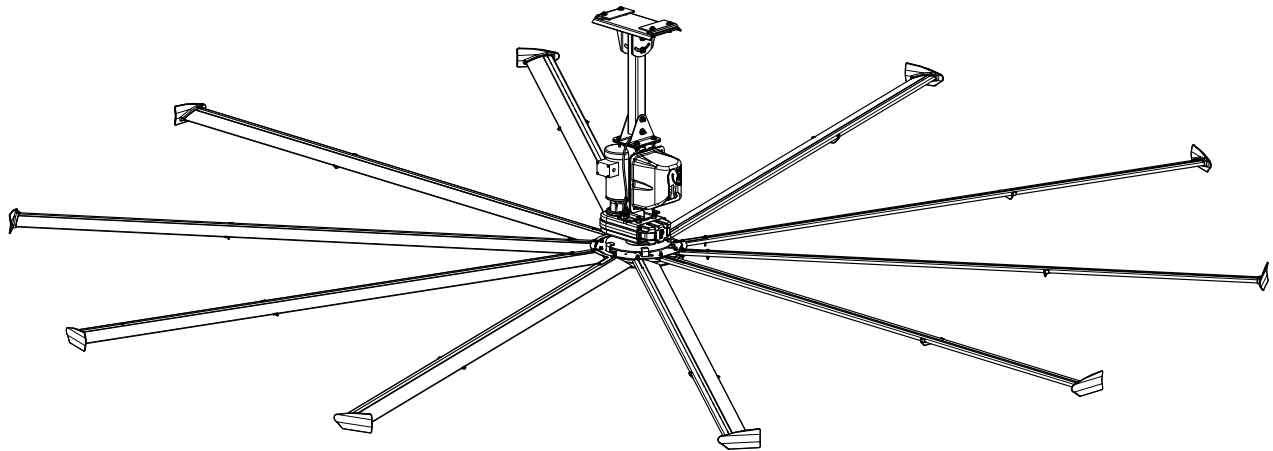

Installation Guide:
Oct. 2013
Rev. H



This product was manufactured in a plant whose Management System is certified as being in conformity with ISO 9001:2008.



3128438

Conforms to ANSI/UL STD 507: Electric Fans
Certified to CAN/CSA C22.2 No.113: Fans & Ventilators

Contact Information

Manufacturing
2425 Merchant Street
Lexington, KY 40511
1-877-BIG-FANS
www.bigassfans.com

Customer Service
2348 Innovation Drive
Lexington, KY 40511
1-877-BIG-FANS
www.bigassfans.com

Warranty Returns
800 Winchester Road
Lexington, KY 40505
1-877-BIG-FANS
www.bigassfans.com

Australia Office
Unit 4, 5 McPhall Road
Coomera QLD 4209
(07) 550 0690
www.bigassfans.com.au

EU Authorized Representative
A L U R A G R O U P
Zwolsestraat 156
2587 WB The Hague,
The Netherlands
Ph.: +31 70 250 0353

Powerfoil X2.0 and the Powerfoil X2.0 logo are trademarks of Delta T Corporation, registered in the United States and/or other countries. All other trademarks used herein are the properties of their respective owners. No part of this document may be reproduced or translated into a different language without the prior written consent of Big Ass Fan Company. The information contained in this document is subject to change without notice. For the most up-to-date information, see the online Powerfoil X2.0 Installation Guide at www.bigassfans.com.

May be covered by one or more of the following United States Patents: 6244821; 6589016; 6817835; 6939108; 7252478; 7284960; D607988; D587799; 7654798; D642674; 7934907; 8079823; D635237; D641075; D650893; D642674; 8075273; D650893; 8147182; 8147204; 8152453; and other patents pending.



IMPORTANT SAFETY INSTRUCTIONS READ AND SAVE THESE INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

WARNING: Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

WARNING: Big Ass Fans must be installed with Big Ass Fan-supplied controllers. Other parts cannot be substituted.

CAUTION: The installation of a Big Ass Fan must be in accordance with the requirements specified in this installation manual and with any additional requirements set forth by the National Electric Code (NEC), ANSI/NFPA 70-2011, and all local codes. Code compliance is ultimately YOUR responsibility! Failure to comply with these codes could result in personal injury or property damage.

WARNING: The fan controllers contain high voltage capacitors which take time to discharge after removal of mains supply. Before servicing the fan controller, ensure isolation of mains supply from line inputs at the controller. Wait three minutes for capacitors to discharge to safe voltage levels. Failure to do so may result in personal injury or death. Note: Darkened display LEDs are not an indication of safe voltage levels.

CAUTION: Exercise caution and common sense when powering the fan. Do not connect the fan to a damaged or hazardous power source. Do not attempt to resolve electrical malfunctions or failures on your own. Contact Big Ass Fans at 1-877-BIG-FANS if you have any questions regarding the electrical installation of this fan.

CAUTION: When service or replacement of a component in the fan requires the removal or disconnection of a safety device, the safety device is to be reinstalled or remounted as previously installed.

WARNING: Risk of fire, electric shock, or injury to persons during cleaning and user-maintenance! Disconnect the fan from the power supply before servicing.

CAUTION: Do not bend the airfoils when installing or servicing the fan. Do not insert foreign objects between rotating airfoils.

WARNING: Stay alert, watch what you are doing, and use common sense when installing fans. Do not install fans if tired or under the influence of drugs, alcohol, or medication. A moment of inattention while installing fans may result in serious personal injury.

CAUTION: Installation and electrical wiring must be done by qualified person(s) in accordance with all codes and standards.

CAUTION: When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

CAUTION: Use this fan only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.

CAUTION: The installation of this fan requires the use of some power tools. Follow the safety procedures found in the owner's manual for each of these tools and do not use them for purposes other than those intended by the manufacturer.

CAUTION: The Big Ass Fans product warranty will not cover equipment damage or failure caused by improper installation.

CAUTION: Do not operate fan with damaged cord or plug. Return fan to authorized service facility for examination or repair.

WARNING: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a responsible person. Children should be supervised to ensure that they do not play with the appliance.

Leave this installation guide with the owner of the fan after installation.

ATTENTION: If installing the fan in the United States, the fan must be installed per the following National Fire Protection Association (NFPA) guidelines:

- The fan must be centered approximately between four adjacent sprinklers.
- The vertical distance from the fan to the sprinkler deflector must be at least 3 ft (91.4 cm).
- The fan must be interlocked to shut down immediately upon receiving a waterflow signal from the alarm system.



IMPORTANTES CONSIGNES DE SÉCURITÉ LIRE ET CONSERVER CES INSTRUCTIONS

AVERTISSEMENT : POUR RÉDUIRE LE RISQUE D'INCENDIE, D'ÉLECTROCUTION, ET DE BLESSURES GRAVES, RESPECTEZ LES CONSIGNES SUIVANTES :

AVERTISSEMENT : Avant de réparer ou de nettoyer l'appareil, coupez le courant au niveau du panneau de service et verrouillez le dispositif de sectionnement pour éviter une mise en marche accidentelle. Lorsque le dispositif de sectionnement ne peut être verrouillé, fixer un dispositif d'avertissement en évidence, comme une étiquette, sur le panneau de service.

AVERTISSEMENT : Les ventilateurs Big Ass doivent être installés avec les régulateurs fournis par Big Ass. Les autres pièces ne peuvent pas être remplacées.

AVERTISSEMENT : l'installation de ce ventilateur doit être faite en conformité avec les exigences spécifiées dans ce manuel d'installation et toute exigence supplémentaire énoncée par le code national d'électricité américain (NEC), ANSI/NFPA 70-2011, et tous les codes locaux. Au bout du compte, le respect du code est votre responsabilité !

AVERTISSEMENT : Les régulateurs de ventilation contiennent des condensateurs à haute tension qui prennent le temps de se décharger après la coupure de l'alimentation secteur. Avant de réparer le régulateur de ventilation, assurer l'isolation de l'alimentation secteur des entrées de ligne du régulateur. Attendre trois minutes pour que les condensateurs se déchargent à des niveaux de tension non dangereux. Ne pas le faire peut entraîner des blessures ou la mort. Remarque : Les LED d'affichage de couleur sombre ne sont pas une indication des niveaux de tension non dangereux.

ATTENTION : Faites preuve de prudence et de bon sens lors de la mise en marche du ventilateur. Ne pas brancher le ventilateur à une source d'alimentation endommagée ou dangereuse. Ne pas tenter de résoudre de vous-même des dysfonctionnements ou pannes électriques. Contactez Big Ass Fans au 1-877-BIG-FANS si vous avez des questions concernant l'installation électrique de ce ventilateur.

ATTENTION : Lorsque le service ou le remplacement d'un composant du ventilateur exige le retrait ou la déconnexion d'un dispositif de sécurité, le dispositif de sécurité doit être réinstallé ou remonté comme précédemment installé.

AVERTISSEMENT : Risque d'incendie, d'électrocution ou de blessures lors du nettoyage et de la réparation ! Déconnecter de l'alimentation avant d'effectuer l'entretien.

AVERTISSEMENT : Ne pas plier les hélices lors de l'installation ou de la réparation du ventilateur. Ne pas insérer d'objets étrangers entre les hélices tournantes du ventilateur.

AVERTISSEMENT : Restez vigilant et utilisez votre bon sens lors de l'installation du ventilateur. Ne pas installer des ventilateurs si vous êtes fatigué ou sous l'influence de drogues, d'alcool ou de médicaments. Un moment d'inattention lors de l'installation de ventilateurs peut entraîner des blessures graves.

ATTENTION : L'installation et le câblage électrique doivent être effectués par une ou des personnes qualifiées en conformité avec tous les codes et normes applicables.

ATTENTION : Lorsque vous coupez ou percez le plafond, ne pas endommager les fils électriques et autres utilitaires cachés.

ATTENTION : N'utilisez ce ventilateur que de la manière prévue par le fabricant.

ATTENTION : L'installation de ce ventilateur nécessite l'utilisation de certains outils électriques. Suivez les consignes de sécurité figurant dans le manuel du propriétaire pour chacun de ces outils et de ne pas les utiliser à d'autres fins que celles prévues par le fabricant.

ATTENTION : La garantie du produit ne couvre pas l'endommagement de l'équipement ou le non fonctionnement causé par une mauvaise installation ou une mauvaise manipulation.

ATTENTION: Ne faites pas marcher de fan avec la corde nue ou la prise de courant. Débarrassez-vous du fan ou du retour à la facilité de service autorisée pour l'examen ou la réparation.

ATTENTION : Ce ventilateur n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales limitées, ou ayant un manque d'expérience et de connaissances, à moins qu'elles n'aient observées ou qu'elles aient reçu des instructions concernant l'utilisation du ventilateur par une personne responsable de leur sécurité. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec le ventilateur.

Laissez ce guide d'installation avec le propriétaire du ventilateur après l'installation.



ATTENTION : Le ventilateur doit être installé selon les directives de la National Fire Protection Association (NFPA) suivants :

- Le ventilateur doit être centré approximativement entre quatre gicleurs adjacents.
- The vertical distance from the fan to the sprinkler deflector must be at least 3 ft (91.4 cm).
- Le ventilateur doit être enclenché pour fermer immédiatement à la réception d'un signal de débit de l'eau provenant du système d'alarme.

Mounting Reference Guide



The following is intended as a reference guide for Powerfoil®X2.0 and Powerfoil®X2.0Plus fan mounting methods. See the referenced pages for complete fan installation and operating instructions. Consult a structural engineer to determine which mounting method best suits your building structure.

I-Beam

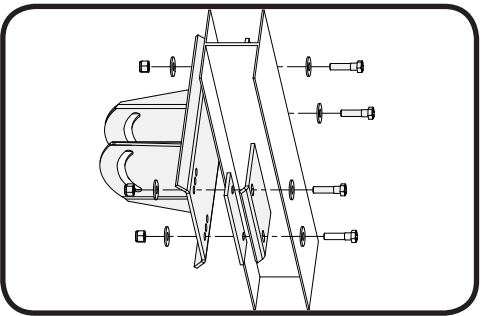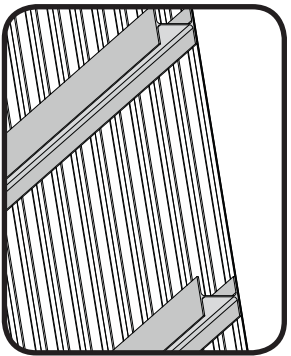



See page 12 for mounting instructions.

Bar Joists

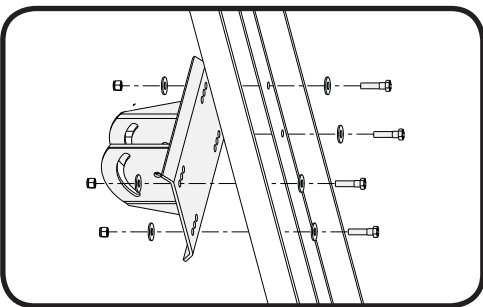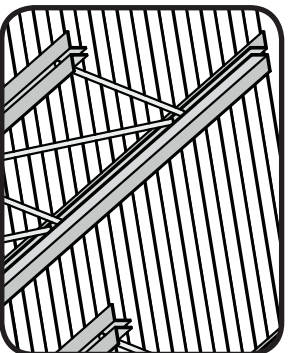



See page 14 for mounting instructions.

Z-Purlins

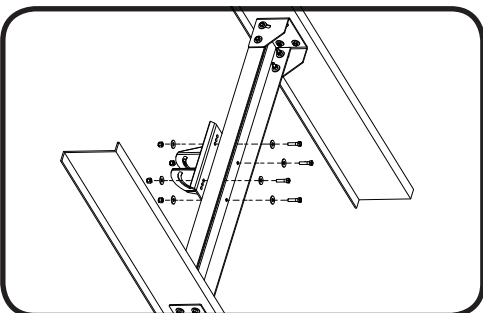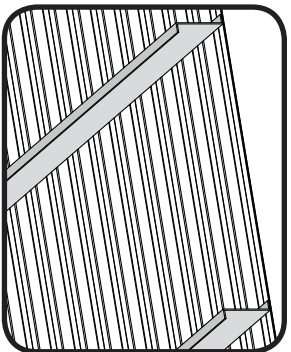



See complete instructions included with the Z-Purlin Installation Kit.

Solid Beam

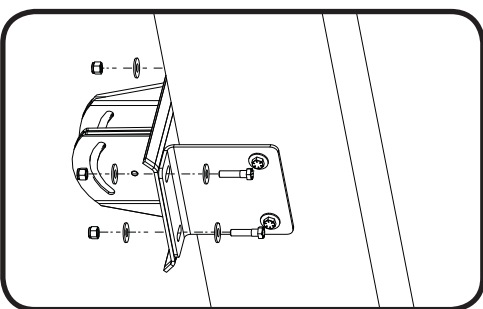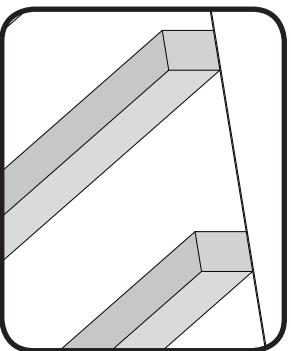

See complete instructions included with the L-Bracket Installation Kit.

I-Beam (Angled)

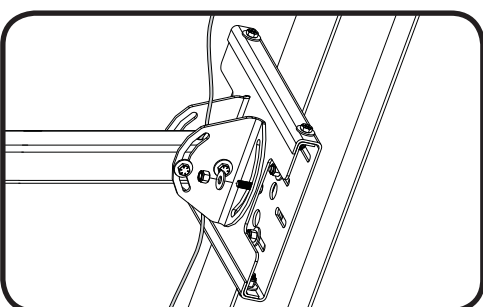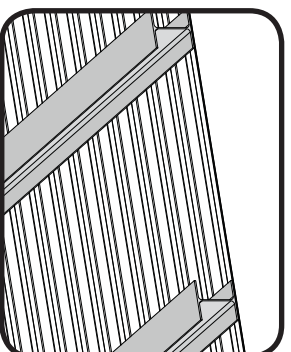

See complete instructions included with the Compound Angle Mount Installation Kit.

Contents

Introduction	Safety Instructions.....	ii
	Mounting Reference Guide.....	iv
	Thank You.....	1
	About Big Ass Fans.....	1
	About this Fan.....	2
Pre-Installation	What's in the Box.....	4
	Parts and Hardware.....	5
	Tools Needed.....	6
	Understanding Roof Pitch.....	6
	Fan Diagram.....	7
	Preparing the Work Site.....	8
	Understanding Airflow Patterns.....	10
Mounting Structure: I-Beam	1. Measure I-Beam Width.....	12
	2. Attach Upper Yoke (to I-Beam).....	13
Mounting Structure: Bar Joists	1. Select Proper Angle Irons.....	14
	2. Pre-drill Angle Irons.....	15
	3. Secure Angle Irons (span is longer than 8 ft).....	15
	4a. Fasten Single Angle Irons to Roof Structure.....	16
	4b. Fasten Double Angle Irons to Roof Structure.....	17
	5a. Attach Upper Yoke (to Angle Irons).....	18
	5b. Attach Main Fan Unit (to Angle Irons).....	19
Hanging the Fan	1. Attach Extension Tube (to Upper Yoke).....	20
	2. Secure Upper Safety Cable.....	20
	3. Attach Lower Yoke (to Extension Tube).....	21
	4. Attach Main Fan Unit (to Lower Yoke).....	21
	5. Confirm Orientation.....	21
Installing Guy Wires	1. Attach Locking Carabiner to Main Fan Unit.....	22
	2. Attach Beam Clamp.....	22
	3. Route Guy Wire through Gripple®.....	24
	4. Install Remaining Guy Wires.....	24
Installing Airfoils	1. Attach Winglets to Airfoils.....	25
	2. Position Airfoils.....	25
	3. Attach Airfoils to Hub.....	26
Installing Hub Cover	Secure Hub Cover.....	27
Electrical Installation	Safety Guidelines.....	28
	Mounting the Wall Controller.....	30
	Delta Secondary.....	31
	Branch Circuit Protection.....	32
	Wiring: Fan Controller (200V–250V Single-Phase, 1 HP).....	33
	Wiring: Fan Controller (200V–250V Single-Phase, 2 HP).....	34
	Wiring: Fan Controller (200V–250V Three-Phase, 1 HP & 2 HP).....	35
	Wiring: Fan Controller (400V–480V Three-Phase, 1 HP & 2 HP).....	36
	Wiring: Fan Controller (575V–600V Three-Phase, 1HP & 2 HP).....	37
	Wiring: Fan Controller with EMI/RFI Filter.....	38
	Wiring: Fan Controller with Line Reactor.....	39
	Daisy Chaining.....	40
	Basic Distributed I/O Interface; LOCAL Control.....	42
	Basic Distributed I/O Interface; EXTERNAL Control.....	43
	Wiring: Fire Signal Relay (E Series).....	44
	Wiring: Fire Signal Relay (M Series).....	45
	Interfacing with Basic Timers, Thermostats, and Other Equipment.....	46

Contents (cont.)

Wall Controller Operation	Understanding Wall Control Operation.....	47
	Starting, Stopping, and Direction Control.....	47
	Changing the Fan Speed.....	47
	Cycling through the LED Display Modes.....	48
	Toggling the Fan's Command Source.....	48
	Understanding and Clearing Fan Faults.....	49
	Programming and Parameter Changes.....	49
	Locking and Unlocking Procedures.....	50
Operating the Fan	Heating Season.....	52
	Cooling Season.....	52
Preventive Maintenance	Annual Preventive Maintenance.....	53
	General Preventive Maintenance.....	53
	Annual Maintenance Checklist.....	55
Troubleshooting	Cutting the Extension Tube.....	57
	General Troubleshooting.....	57
	E Series Fan Error Codes.....	58
	M Series Fan Error Codes.....	60
Warranty Return Instructions	Return Instructions.....	62
	Warranty Claim Form Instructions.....	63
	Warranty Claim Form.....	65
	Responsibility Agreement.....	66
Big Ass Fan Certified Installers	Check-In Procedure.....	67
	Close-Out Procedure.....	69

Introduction

1

Thank you and congratulations on your purchase of a Big Ass Fan, an efficient and cost-effective way to stay cool in the summer and warm in the winter. The revolutionary design of our fans combines the best of both form and function to bring power performance and a sleek look to any setting. More importantly, you have purchased a product that is backed by extensive research, thorough testing, and quality manufacturing. We're ready to answer any questions or comments at 1-877-BIG-FANS or visit our Web site at www.bigassfans.com.

Who we are and what we do

Big Ass Fans has been the preeminent manufacturer of large-diameter, low-speed fans since 1999. With a worldwide presence and located in beautiful Lexington, KY, we research, design, and manufacture the most effective air movement solutions on the market. Our never-ending commitment to quality and innovation keeps us at the leading edge of a burgeoning industry. With an eye to helping customers satisfy their needs, and a strong sense of corporate responsibility to the community, Big Ass Fans has redefined the way business is done.



Introduction (cont.)

Powerfoil® X2.0 Plus specifications

Fan size	Motor size HP (kW)	Controller rated HP (kW)	Minimum required supply circuit size	Nominal output voltage, 3Φ ¹	Maximum full load motor current (as programmed) ²	Max RPM	Airfoil length	Suggested distance from ceiling ³
10 ft (3 m)	1.0 (0.75)	1.0 (0.75)	15A @ 200–250V 1Φ 10A @ 200–250V 3Φ 10A @ 400–480V 3Φ 10A @ 575–600V 3Φ	240V 240V 480V 600V	6.7–7.4A 3.9–4.3A 1.9–2.3A 1.3–1.4A	115 RPM	49.5 in (1.26 m)	5 ft (1.5 m)
12 ft (3.6 m)	1.5 (1.1)	1.5 (1.1)	25A @ 200–250V 1Φ 15A @ 200–250V 3Φ 10A @ 400–480V 3Φ 10A @ 575–600V 3Φ	240V 240V 480V 600V	9.2–9.7A 5.3–5.6A 2.5–3.0A 2.0–2.1A	95 RPM	61.5 in (1.56 m)	6 ft (1.8 m)
14 ft (4.3 m)	1.5 (1.1)	1.5 (1.1)	25A @ 200–250V 1Φ 15A @ 200–250V 3Φ 10A @ 400–480V 3Φ 10A @ 575–600V 3Φ	240V 240V 480V 600V	9.2–9.7A 5.3–5.6A 2.5–3.0A 2.0–2.1A	95 RPM	73.5 in (1.87 m)	6 ft (1.8 m)
16 ft (4.9 m)	1.5 (1.1)	1.5 (1.1)	25A @ 200–250V 1Φ 15A @ 200–250V 3Φ 10A @ 400–480V 3Φ 10A @ 575–600V 3Φ	240V 240V 480V 600V	9.2–9.7A 5.3–5.6A 2.5–3.0A 2.0–2.1A	77 RPM	85.5 in (2.17 m)	7 ft (2.1 m)
18 ft (5.5 m)	2.0 (1.5)	2.0 (1.5)	25A @ 200–250V 1Φ 15A @ 200–250V 3Φ 10A @ 400–480V 3Φ 10A @ 575–600V 3Φ	240V 240V 480V 600V	9.2–9.7A 5.3–5.6A 2.5–3.0A 2.0–2.1A	70 RPM	97.5 in (2.48 m)	7 ft (2.1 m)
20 ft (6.1 m)	2.0 (1.5)	2.0 (1.5)	25A @ 200–250V 1Φ 15A @ 200–250V 3Φ 10A @ 400–480V 3Φ 10A @ 575–600V 3Φ	240V 240V 480V 600V	11.4–12.1A 6.6–7.0A 3.0–3.6A 2.7–2.8A	58 RPM	109.5 in (2.78 m)	8 ft (2.4 m)
24 ft (7.3 m)	2.0 (1.5)	2.0 (1.5)	25A @ 200–250V 1Φ 15A @ 200–250V 3Φ 10A @ 400–480V 3Φ 10A @ 575–600V 3Φ	240V 240V 480V 600V	11.4–12.1A 6.6–7.0A 3.0–3.6A 2.7–2.8A	48 RPM	133.5 in (3.39 m)	8 ft (2.4 m)

- Output voltage will not exceed Input voltage, with the exception of 120V models. All controllers produce 3Φ output power, regardless of input phase.
- This value may vary due to input voltage conditions.
- The distance of the fan from the ceiling should be measured from the top of the winglets to the ceiling.

Notes:

- Remote wall interface (150-ft CAT5 cable included).
- Optional EMI/RFI filter (p. 38): 200–250V 3Φ 400–480V 3Φ
22RF9P5AL 22RF5P7AL
- All models are suitable for Class A environments up to 100 m (328 ft) and Class B environments up to 5 m (16 ft).

⚠ CAUTION: Big Ass Fans requires that the Powerfoil X2.0 Plus fan be supplied from one of the following types of transformers:

575V–600V models: 575V/330V Wye secondary (neutral not utilized)

400V–480V models: 480V/277V Wye secondary (neutral not utilized)

200V–250V models: 208V/120V Wye secondary (neutral not utilized)

240V/120V Delta secondary (Wild/High Phase B)

Integration into any other power distribution scheme may result in improper fan operation or premature hardware failure! See page 28 for more information.

⚠ ATTENTION : La société Big Ass Fans exige que le ventilateur Powerfoil X2.0 soit alimenté par un des types de transformateurs suivants:

Modèles 575 V – 600 V : Secondaire en étoile 575 V / 330 V (neutre non utilisé)

Modèles 400 V – 480 V : Secondaire en étoile 480 V / 277 V (neutre non utilisé)

Modèles 200 V – 250 V : Secondaire en étoile 208 V / 120 V (neutre non utilisé)

Secondaire triphasé 240 V / 120 V (phase B haute tension)

L'intégration dans tout autre schéma d'alimentation peut entraîner un mauvais fonctionnement du ventilateur ou une défaillance prématurée du matériel. Voir page 28 pour plus de détails.

4


Pre-Installation

What's in the box

If you ordered multiple fans, be sure to keep the components of each fan together. The fans each have differently rated components that are not interchangeable.

The fan is shipped in multiple boxes. The large box contains the main fan unit, upper yoke (with beam clips and spacers), lower yoke, extension tube with attached safety cable (if 3 ft or shorter in length), winglets, hub cover, wall control, and hardware. The long box contains the airfoils. If the extension tube is 4 ft or longer, it will also be shipped in a separate box. All accessories are shipped in separate boxes. This installation guide should remain with the owner of the fan.

Note: Dashed lines indicate internal boxes. The drawings below are not to scale.

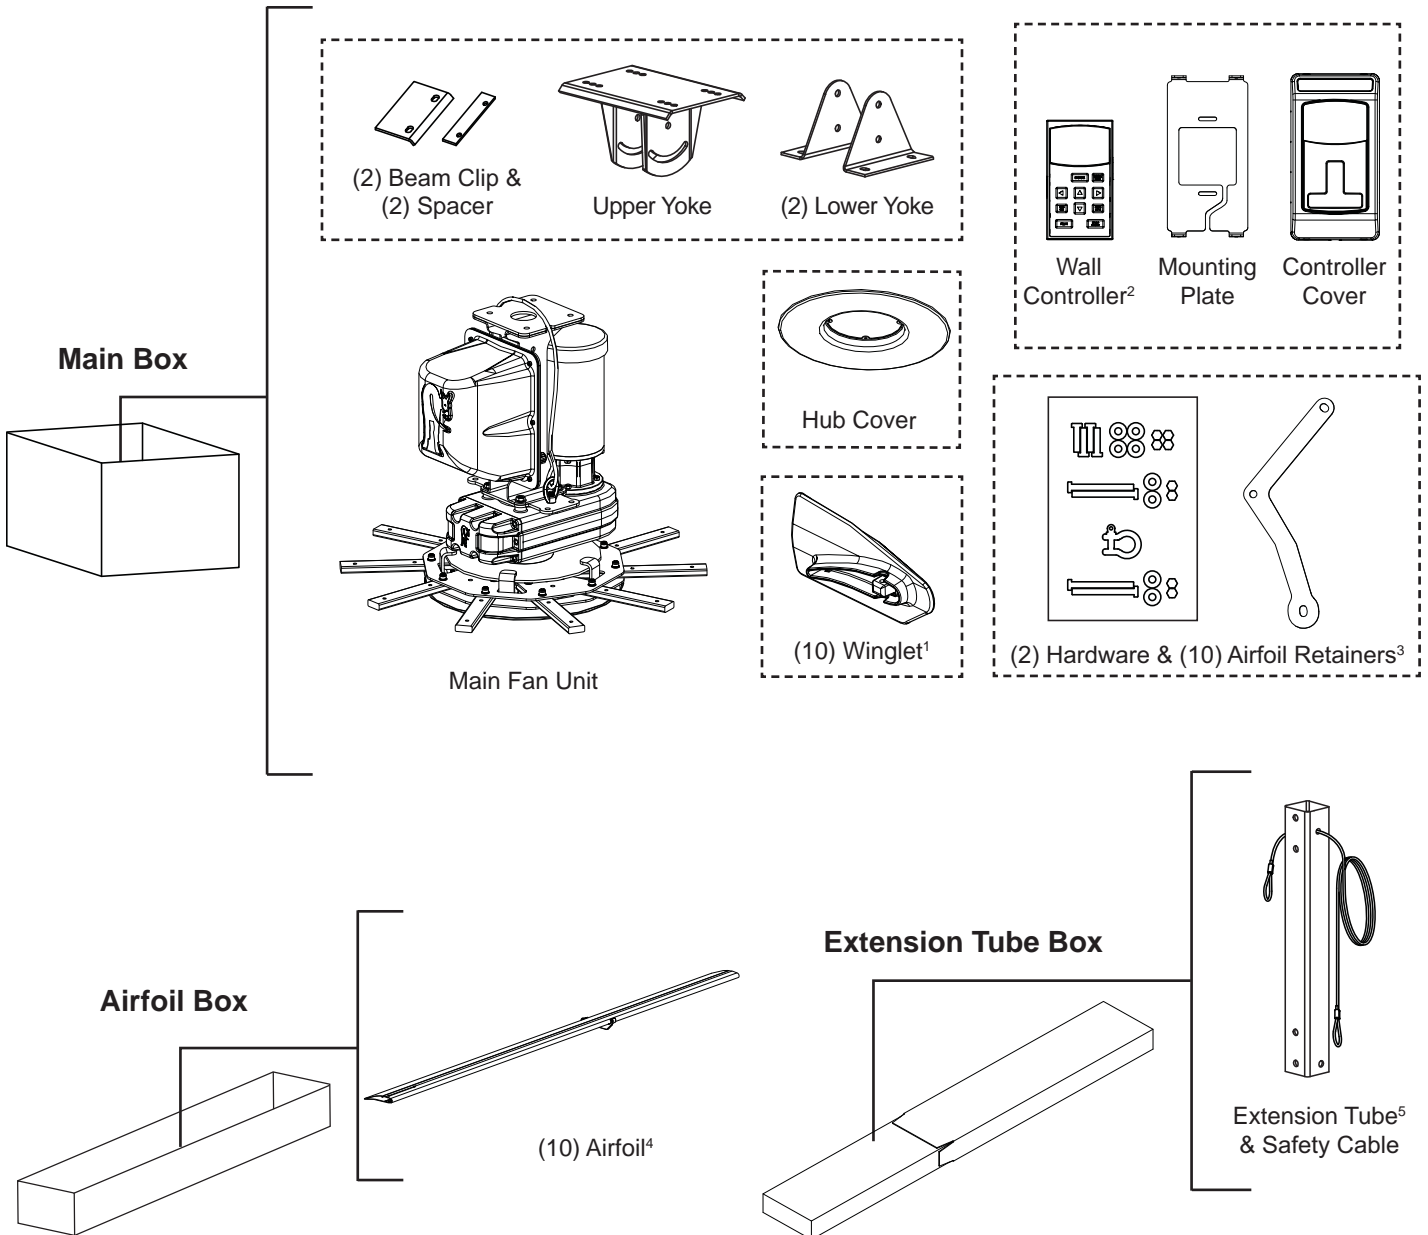









1. Powerfoil® winglet shown. Powerfoil or PowerfoilPlus winglets are available. Winglet hardware is packed in the winglet box.
2. A data cable for connecting the wall controller to the fan controller is included with the wall controller (not shown).
3. This installation guide is also packaged in the box with the hardware and airfoil retainers. If your order includes yokes and an extension tube, square washers will also be packaged in this box. Square washers are needed only if you are mounting the fan to angle irons. The number of square washers needed depends on the number of angle irons that will be used.
4. Do not attempt to remove or adjust the AirFence™. The position is set at the factory.
5. The safety cable is attached to the extension tube. If the extension tube is 4 ft or longer, it will be shipped in a separate box. Guy wires (if ordered) are bagged separately in the main box.

Pre-Installation (cont.)






Parts and hardware

Note: The drawings below are not to scale. No hardware substitutions are acceptable.

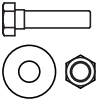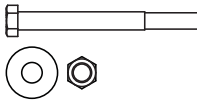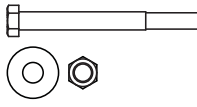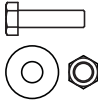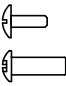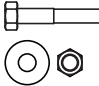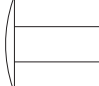
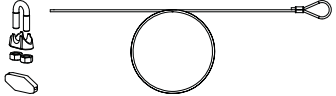

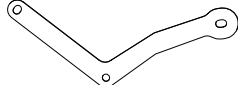
Hardware¹

			
Upper Yoke Hardware (4) 1/2-13 x 2" GR 8 Bolt (8) 1/2" Flat Washer (4) 1/2-13 Nylock Nut	Extension Tube Hardware (2) 1/2-13 x 4-1/2" GR 8 Bolt (4) 1/2" Flat Washer (2) 1/2-13 Nylock Nut	Lower Yoke Hardware (2) 1/2-13 x 4-1/2" GR 8 Bolt (4) 1/2" Flat Washer (2) 1/2-13 Nylock Nut	Main Fan Unit Hardware (4) 1/2-13 x 1 3/4" GR 8 Bolt (8) 1/2" Flat Washer (4) 1/2-13 Nylock Nut
			
Winglet Hardware (10) 10-24 x 1/2" Bolt (10) 10-24 x 3/4" Barrel	Airfoil Hardware (20) 5/16-18 x 2" GR 8 Bolt (40) 5/16" Flat Washer (20) 5/16-18 Nylock Nut	Hub Cover Hardware (4) 1/4" Plastic Rivet	Guy Wire Hardware² (4) Locking Carabiner (4) 1/4" Beam Clamp (4) 1/4-20 x 1" Eyebolt (4) 1/4-20 Hex Nut (4) Gripper® (4) Guy Wire (16) Wire Rope Clip

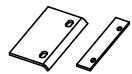
Mounting

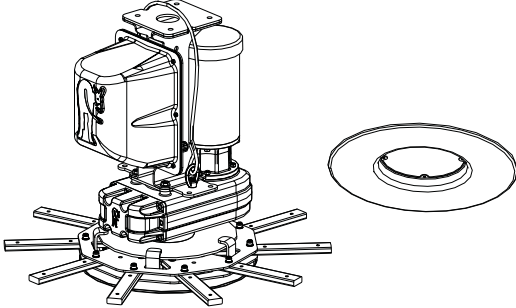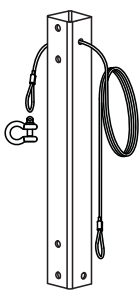		
(2) Beam Clip & Spacer	Upper Yoke ³	(2) Lower Yoke
		
Main Fan Unit & Hub Cover	Extension Tube, Safety Cable ⁶ , & Shackle ⁷	

Airfoils

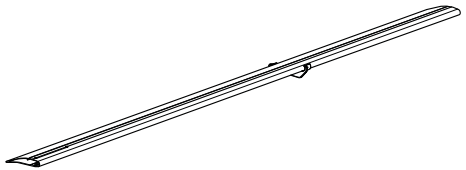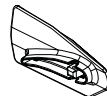	
(10) Airfoils ⁴	
	or 
(10) Powerfoil® Winglets ⁵	(10) Powerfoil®Plus Winglets ⁵
	
(10) Airfoil Retainers	

Electrical

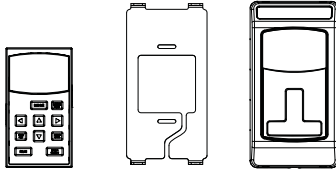
Wall Controller ⁸ , Mounting Plate, & Controller Cover

1. If your order includes yokes and an extension tube, square washers will be included in your hardware. Square washers are needed only if you are mounting the fan to angle irons. The number of square washers needed depends on the number of angle irons that will be used.
2. Guy wires are designed to constrain fan's lateral movement and are only included in some fan packages. Big Ass Fans recommends using guy wires if the fan's extension tube is 4 ft or longer, if the fan is exposed to high winds or similar conditions, or if the fan is close to any building fixtures. Guy Wire hardware is bagged separately from hardware boards.
3. Ensure you have the correct upper yoke for your mounting method. The upper yoke may differ from the illustration.
4. An AirFence™ is installed on midsection of each airfoil. Check each airfoil to ensure the AirFence is properly secured. Do not attempt to remove or adjust the AirFence.
5. Powerfoil winglets are standard. PowerfoilPlus winglets are only included if ordered.
6. Safety cable is attached to extension tube.
7. Shackle included on hardware boards.
8. A data cable for connecting the wall controller to the fan controller is included with the wall controller (not shown).

6

Pre-Installation (cont.)

Tools needed

Big Ass Fans recommends gathering the following tools prior to beginning installation.

Mechanical installation
Standard wrench set
Standard socket set with ratchet
Torque wrench capable of 40 ft·lb (54.2 N·m)
Phillips and flat head screwdriver
Standard allen wrench set


Electrical installation
Phillips and flat head screwdriver
1/4" nut driver
5/16" nut driver
Pair of #10 to #14AWG strippers
Pair of medium channel locks
Multimeter

Understanding roof pitch


Before beginning installation, confirm that you have the appropriate mount for your roof pitch.

To ensure the fan is properly mounted, the fan must always hang plumb to the ground and the yoke must be installed using the bolt holes at the widest locations possible. To accommodate building structures on which the standard upper yoke does not allow the fan to properly orient itself, the 90-Degree Offset mount should be purchased.


The example below shows one situation in which the 90-Degree Offset mount must be used so that the fan hangs plumb to the ground and the widest stance for the upper yoke is ensured. If you are uncertain of your roof pitch or do not have the correct mount to properly hang your fan, consult a structural engineer or contact Big Ass Fans Customer Service at 1-877-BIG-FANS.

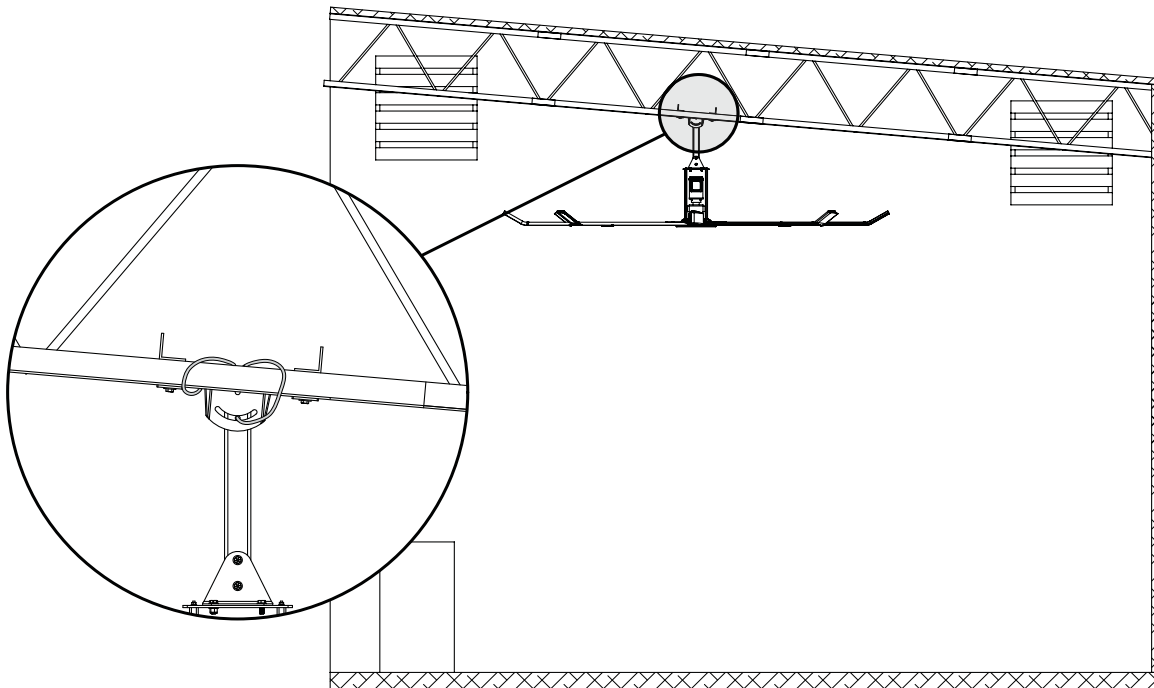

Standard Upper Yoke

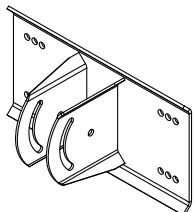


90-Degree Offset Mount

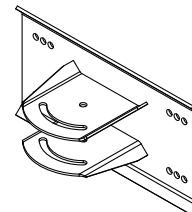

Fan diagram

- A. Safety Cable.** A redundant safety feature that secures the fan to the mounting structure.
- B. Upper Yoke.** Secures the fan to the mounting structure and allows the fan to adjust its center of gravity.
- C. Extension Tube.** Extends the fan from the ceiling.
- D. Lower Yoke.** Connects the main fan assembly to the extension tube.
- E. VFD Enclosure.** Contains the variable-frequency drive.
- F. Gearbox.** NitroSeal Drive™ custom gearbox for increased durability and cooler operation.
- G. Motor.** See pages 2–3 for more information.
- H. Hub.** Secures the airfoils to the gearbox output shaft.
- I. Airfoil.** Provides air movement. The unique, patented design provides efficient and effective air movement.
- J. AirFence™.** Improves the performance of the fan.
- K. Winglet (Powerfoil® [shown] or Powerfoil®Plus).** Improves the efficiency and performance of the fan.

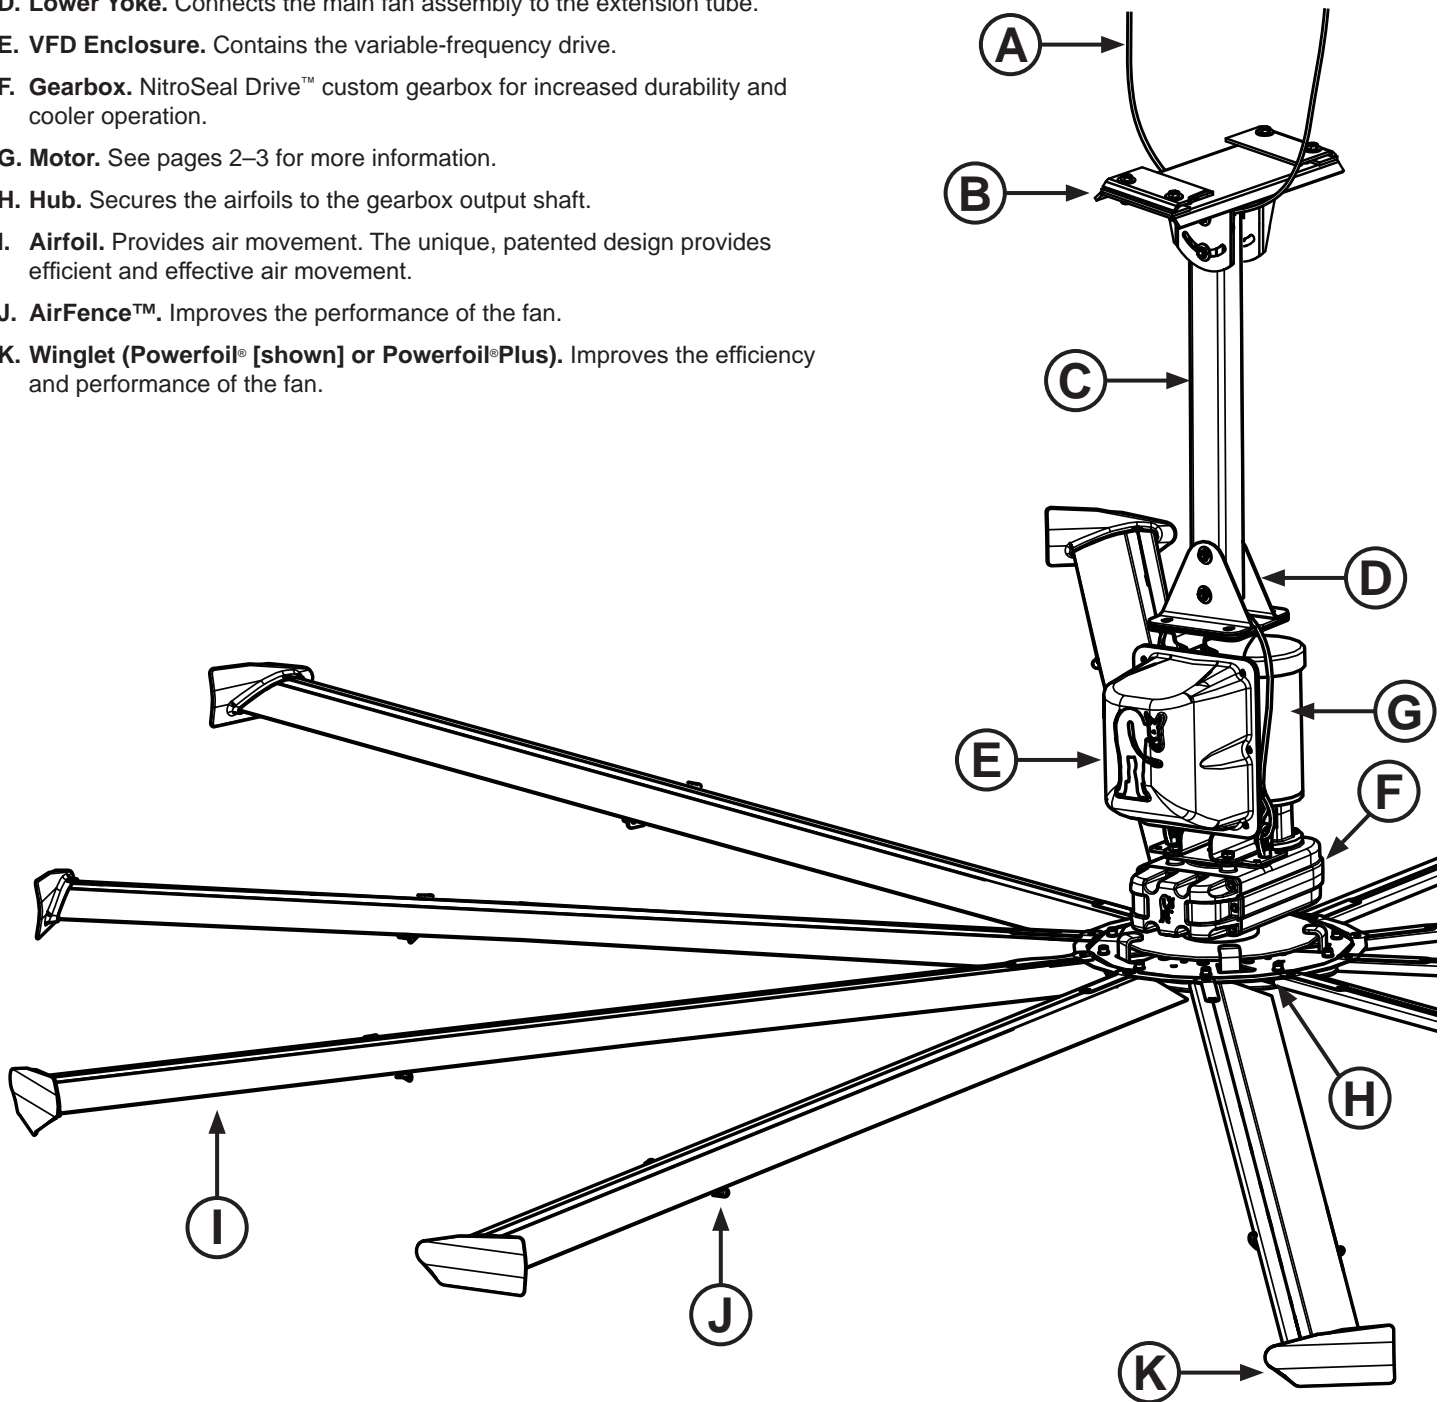

8


Pre-Installation (cont.)

Preparing the work site

Before beginning installation, review the mechanical and electrical installation guidelines below.


Mechanical installation

- A 24-ft (7.3-m) Powerfoil®X2.0 fan weighs, at maximum, 500 lbs (227 kg). A suitable means for lifting the weight of the fan, such as a scissor lift, and at least two (2) installation personnel will be required.
- Big Ass Fans can only be mounted to an I-beam or angle irons. If mounting to an I-beam, the I-beam must be part of the existing building structure. Do not mount the fan to a single purlin, truss, or bar joist. Consult a structural engineer for installation methods not covered in the guide.

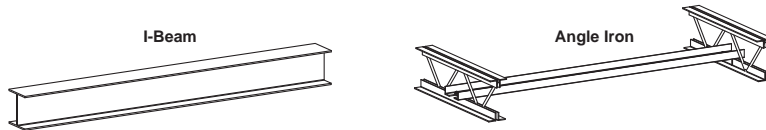


- The mounting structure must be able to withstand the torque forces generated by the fan. A 24-ft fan generates nearly 300 ft-lb (406.7 N-m) of torque during operation.
- Fans mounted on fabricated I-beams, which are common in steel buildings, could cause the beam to flex and the fan to move significantly during operation. If this flexing causes a clearance problem, we suggest installing the I-Beam Stabilizer kit.
- If the fan's extension tube is 4 ft (1.2 m) or longer or if the mounting structure requires it, the fan's lateral movement must be secured using guy wires. If the fan is close to any building fixtures it is recommended to secure the fan with guy wires as a safety measure.
- Adhere to the safety requirements in the table below when selecting where to mount the fan.

Safety requirement	Minimum distances
Clearance	≥2 ft from all fan parts. The fan installation area must be free of obstructions such as lights, cables, sprinklers, or other building structure. See the tables on pp. 2–3 for recommended minimum ceiling clearances.
Blade height	≥10 ft above the floor
HVAC equipment	≥1x fan diameter if above diffuser. ≥2x fan diameter if below diffuser. Refer to the illustration below.
Fan spacing	2.5x fan diameter, center-to-center
Radiant/IR heaters	See the manufacturer's requirements for the minimum clearance to combustibles.

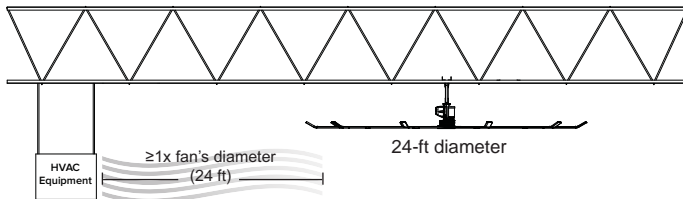

If the fan is mounted at the same level or higher than a diffuser, the winglets must be at a distance that is at least 1x the measure of the fan's diameter.

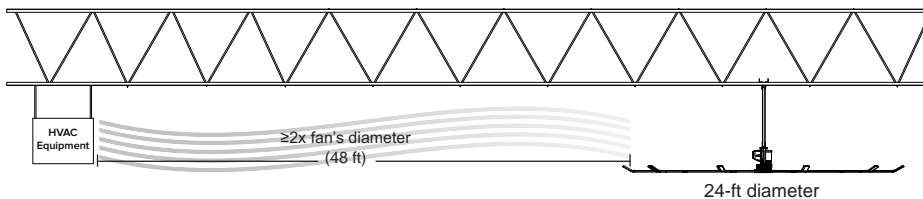

If the fan is mounted below a diffuser, the winglets must be at a distance that is at least 2x the measure of the fan's diameter.

Electrical installation

- To reduce the risk of electric shock, wiring should be performed by a qualified electrician! Incorrect assembly can cause electric shock or damage the motor and the controller!
- Installation of a Big Ass Fan must be in accordance with the National Electrical Code (NEC), ANSI/NFPA 70-2011, and local codes.
- AC supply feeds for one fan controller may share the same conduit with AC supply feeds for one or more controllers.
- All unused conductors that share a conduit with the AC supply feeds must be grounded on both ends.
- If required, a local disconnect should be installed per NEC and all local codes.
- Refer to specifications on pages 2–3 for appropriate circuit requirements.
- Each fan requires dedicated branch circuit protection.
- To avoid damage to the VFD and fan controller, test the VFD and fan controller with a test cable before wiring the CAT 5 cable!
- To use the test cable, complete all mechanical installation steps except for airfoil installation, and ensure electrical power is available. Use the provided test cable to connect the VFD to the wall controller. Start, stop, and change fan speed as described on page 47.


Préparation du lieu de travail

Avant de procéder à la pose, bien lire les directives concernant l'installation mécanique et électrique ci-dessous.


Installation mécanique

- Un ventilateur Powerfoil®X2.0 de 7,3 m pèse au maximum 227 kg. Il est nécessaire d'utiliser un dispositif adapté pour soulever le ventilateur (p. ex. une table élévatrice à ciseaux) et au moins deux installateurs.
- Les ventilateurs Big Ass ne peuvent être suspendus qu'à une poutre en I ou à des cornières. Si le ventilateur est suspendu à une poutre en I, celle-ci doit faire partie de la structure existante du bâtiment. Ne pas suspendre le ventilateur à une seule panne, ferme ou poutrelle. Consulter un ingénieur en construction pour des méthodes d'installation non couvertes dans ce guide.
- La structure de montage doit être capable de supporter les forces de rotation générées par le ventilateur. Un ventilateur de 7,3 m en fonctionnement génère près de 406,7 N·m de couple de rotation.
- Les ventilateurs montés sur des poutres en I usinées, qui sont courantes dans les bâtiments à ossature d'acier, peuvent faire fléchir la poutre et bouger de manière importante en cours de fonctionnement. Si ce fléchissement cause un problème de dégagement, nous vous suggérons d'installer le kit de stabilisation pour poutre en I.
- Si le tube de rallonge du ventilateur mesure 1,2 m ou plus, ou si la structure de montage l'exige, le ventilateur doit être maintenu à l'aide de câbles de retenue pour empêcher tout mouvement latéral. Si le ventilateur se trouve à proximité d'équipements, il est recommandé de le maintenir à l'aide de câbles de retenue par mesure de précaution.
- Respecter les consignes de sécurité du tableau ci-dessous pour choisir l'endroit où monter le ventilateur.

Exigence de sécurité	Distances minimales
Espace libre	≥ 0,6 m de toutes les autres parties du ventilateur. La zone de montage du ventilateur doit être exempte de tout obstacle : lampes, câbles, sprinklers ou autres structures du bâtiment.
Hauteur des pales	≥ 3 m au-dessus du sol
Matériel de CVCA	≥ 1 fois le diamètre du ventilateur si au même niveau que le diffuseur ou au-dessus. ≥ 2 fois le diamètre du ventilateur si au-dessous du diffuseur. Se reporter à l'illustration ci-dessous.
Espacement des ventilateurs	2,5 fois le diamètre du ventilateur (entre axes)
Radiateurs à rayonnement/ infrarouge	Se reporter aux exigences du fabricant pour le minimum d'espace libre des matériaux combustibles.

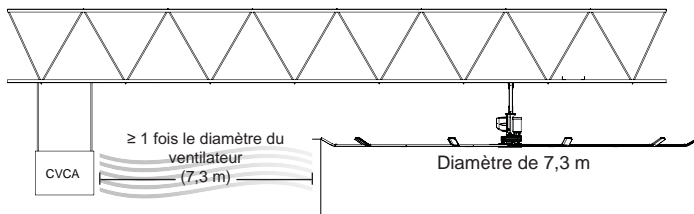

Si le ventilateur est monté au même niveau que le diffuseur ou au-dessus, les ailettes doivent se trouver à une distance au moins égale à une fois le diamètre du ventilateur.

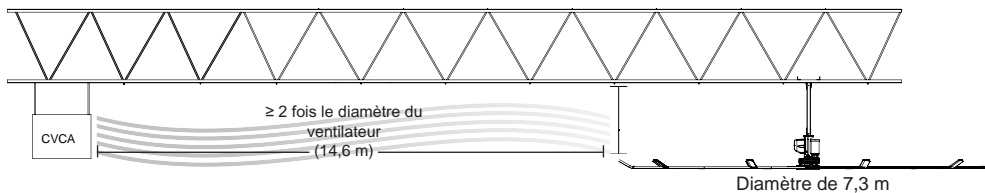

Si le ventilateur est monté sous le diffuseur, les ailettes doivent se trouver à une distance au moins égale à deux fois le diamètre du ventilateur.

Installation électrique

- Pour réduire les risques de choc électrique, le câblage doit être réalisé par un électricien qualifié. Tout défaut de montage peut provoquer un choc électrique ou endommager le moteur ou le régulateur.
- L'installation d'un ventilateur Big Ass doit se faire conformément au code national d'électricité américain (NEC), à l'ANSI/NFPA 70-2011 et aux codes locaux.
- Les alimentations AC pour un régulateur de ventilateur peuvent partager le même conduit que les alimentations AC pour un ou plusieurs régulateurs.
- Tous les conducteurs non utilisés partageant un conduit avec les alimentations AC doivent être mis à la terre aux deux extrémités.
- Le cas échéant, un sectionneur local doit être installé conformément au NEC (code national d'électricité américain) et à tous les codes locaux.
- Se reporter aux spécifications des pages 2 et 3 pour les exigences concernant les circuits appropriés.
- Chaque ventilateur exige une protection de circuit de dérivation dédiée.
- Pour éviter d'endommager le variateur de fréquence et le régulateur du ventilateur, tester le variateur et le régulateur avec un câble de test avant de brancher le câble CAT 5.
- Pour utiliser le câble de test, après que l'installation mécanique du ventilateur est achevée (moins l'installation des profils d'ailes) et que celui-ci est alimenté en courant électrique, installer le câble de test fourni pour brancher le boîtier du variateur de fréquence au régulateur mural. Mettre le ventilateur en marche, l'arrêter et en changer la vitesse comme indiqué page 47.


10

Pre-Installation (cont.)


Understanding airflow patterns

Airflow in an open area


The airflow moves from the fan toward the floor. Once airflow hits the floor, it moves outward in all directions. The deflection of air off the floor is called a "floor jet."

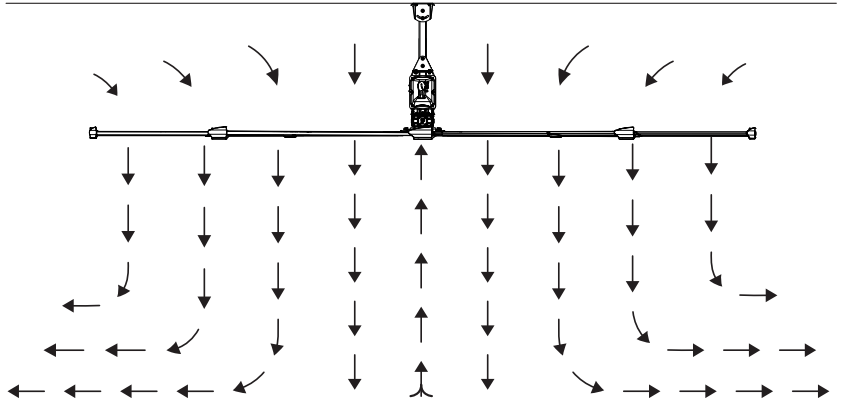**Airflow in an enclosed area**


The floor jet radiates outward until it reaches the walls, which deflect the jet upward. After it hits the ceiling, the upward flow is directed inward to the low pressure area above the fan where it is then pulled down toward the floor. This creates a convection-like air current that gathers momentum. Once this current is established, the fan begins to move air outside of the current, escalating its cooling effects.

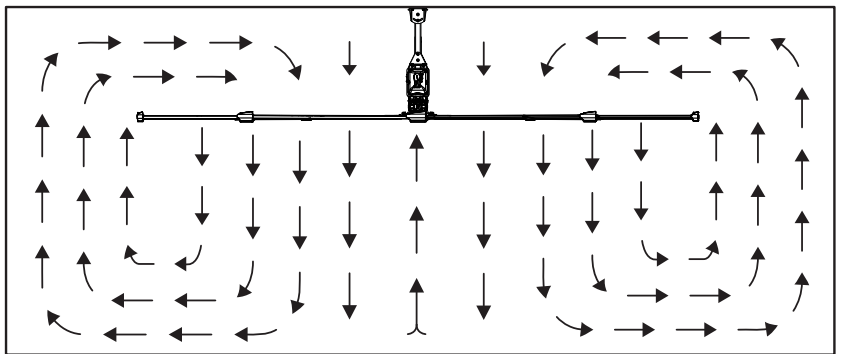**Airflow with multiple fans**


Where there are multiple fans appropriately spaced, the expanding jets of adjacent fans meet to create a pressure zone. The pressure zone acts like a wall, causing each fan to behave like a single enclosed fan. Typically, a single fan's performance will increase when working in conjunction with other fans.

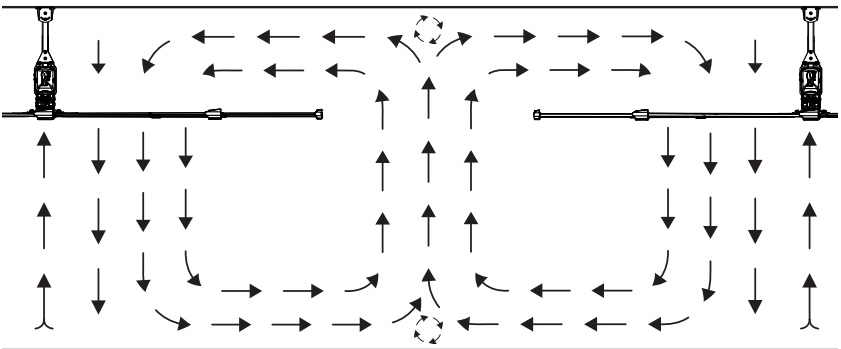**Airflow with streamlined obstruction**

Obstructions on the floor tend to block the horizontally moving air. Thin or streamlined obstructions do not block much airflow, regardless of size. The air tends to flow smoothly around these obstructions, losing little momentum, and leaving only a small stagnant area behind the obstruction.

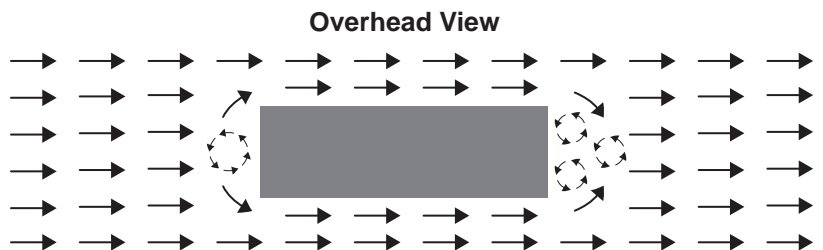
**Airflow with wide, blunt obstruction**

A wide, blunt, or flat-faced obstruction forces airflow to change direction, turning it upward and outward. There is a stagnant area behind these obstructions that is wider and higher than the obstructions themselves.

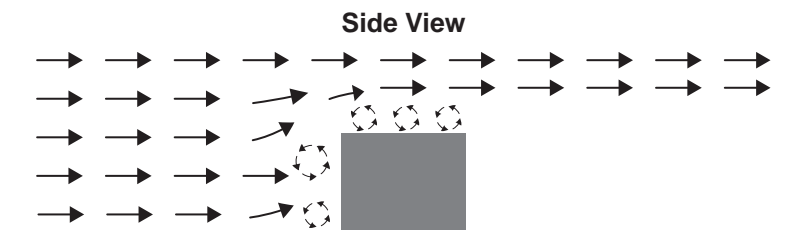

Powerfoil® X2.0Plus

The PowerfoilPlus winglet creates a jet of air that flows outward at a 45° angle, passing over floor obstructions and delivering airflow in a much broader pattern. When planning fan placement, consider the Powerfoil X2.0Plus fan's larger coverage area. *Note: PowerfoilPlus winglets are optional and may not be included in your fan order.*

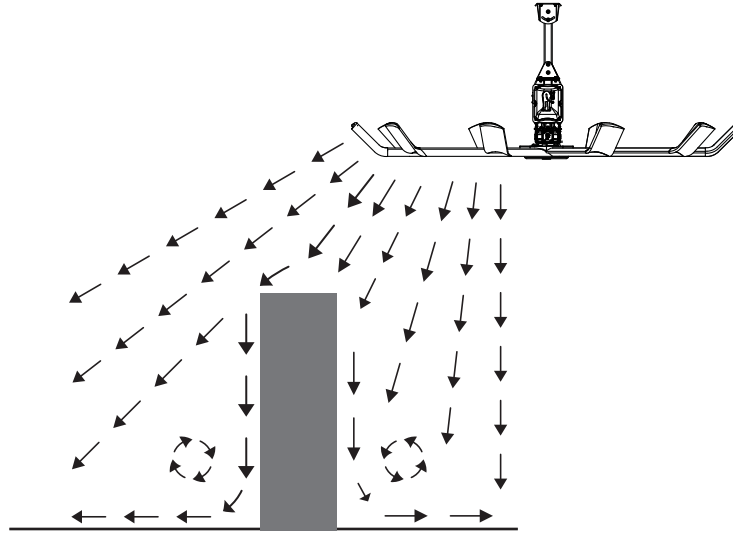

Tips

Below are some techniques that can make a dramatic difference in congested areas of your facility. Treat air like water, and scoop, direct, and channel it to where it is needed most. *Note: Powerfoil X2.0Plus fans deliver air from a much higher angle, resolving many of the issues outlined below.*

- Make sure people are not hidden behind structures that would block airflow. This may seem obvious, but work areas are routinely blocked by shelving, crates, and machinery.
- Position large obstructions so that their smallest profiles are perpendicular to the direction of air movement. For example, a sheet metal press brake might have five times the frontal area if it is facing the airflow rather than if it is turned sideways.
- Wherever possible, position welding curtains, partitions, sheet materials, etc., to scoop air into the work area rather than deflect it.
- Take advantage of the air moving near the floor by creating ground level openings in your work area. It is better to have a work area blocked by materials stacked to the ceiling with an opening below than to have low stacks 3 ft (0.9 m) to 6 ft (1.8 m) high sitting on the floor.

12

Mounting Structure: I-Beam

Big Ass Fans can only be hung from an I-beam or bar joists. See page 14 for bar joist mounting instructions. Consult a structural engineer for installation methods not covered in this manual.

- ⚠ WARNING:** The fan should not be installed unless the structure on which the fan is to be mounted is of sound construction, undamaged, and capable of supporting the loads of the fan and its method of mounting. A structural engineer should verify that the structure is adequate prior to fan installation. Verifying the stability of the mounting structure is the sole responsibility of the customer and/or end user, and Big Ass Fans hereby expressly disclaims any liability arising therefrom, or arising from the use of any materials or hardware other than those supplied by Big Ass Fans or otherwise specified in these installation instructions.
- ⚠ CAUTION:** It is not recommended to mount a Big Ass Fan to a fabricated I-beam. The I-beam on which the fan will mount must be part of the existing building structure. Do not direct mount the fan to an I-beam.
- ⚠ CAUTION:** Install the spacers only if the thickness of the I-beam flange exceeds 3/8" (1 cm). The mounting holes on the spacer are closer to one edge than the other. Make sure this edge of the spacer is facing the I-beam.
- ⚠ CAUTION:** Before beginning installation, confirm that you have the appropriate mount for your roof pitch.
- ⚠ WARNING:** Ensure there are no persons below the fan during installation.
- ⚠ AVERTISSEMENT :** Le ventilateur ne doit pas être installé à moins que la structure sur laquelle le ventilateur doit être monté soit une construction solide, intacte, et capable de supporter les charges du ventilateur et sa méthode de montage. Un ingénieur en structure doit vérifier que la structure est adéquate avant d'installer le ventilateur. Vérifier la stabilité de la structure de montage est de la seule responsabilité du client et/ou de l'utilisateur final, et Big Ass Fans décline expressément toute responsabilité en découlant ou résultant de l'utilisation de tout matériel ou du matériel autres que ceux fournis par Big Ass Fans ou autrement spécifié dans les instructions d'installation.
- ⚠ ATTENTION :** Il n'est pas recommandé de monter un ventilateur Big Ass sur une poutre en I. La poutre en I sur laquelle le ventilateur sera monté doit faire partie de la structure du bâtiment existant. Ne pas monter le ventilateur directement sur une poutre en I.
- ⚠ ATTENTION :** N'installez les entretoises que si l'épaisseur de la bride de poutre en I est supérieure à 3/8 " (1 cm). Les trous de fixation sur la pièce d'écartement sont plus proches d'un bord que de l'autre. Assurez-vous que ce bord de l'entretoise fasse face à la poutre en I.
- ⚠ ATTENTION :** Avant de commencer l'installation, vérifiez que vous disposez d'un montage approprié pour votre pente du toit.
- ⚠ ATTENTION :** S'assurer qu'il n'y a aucune personne au-dessous du ventilateur lors de l'installation.

1. Measure I-beam width

Measure the flange width of the I-beam from which the fan will be hung. Select the upper yoke mounting holes that match the flange width of the I-beam.

Small Upper Yoke 13-3/4" (349 mm) x 10" (258 mm)			Large Upper Yoke 18-1/2" (470 mm) x 10" (258 mm)	
I-beam flange width	Upper yoke mounting holes		I-beam flange width	Upper yoke mounting holes
5" (127 mm) to 6-5/8" (168 mm)	Inner holes	9-7/8" (250 mm) to 11-3/8" (289 mm)	Inner holes	
>6-5/8" (168 mm) to 8-1/4" (210 mm)	Middle holes	>11-3/8" (289 mm) to 13" (330 mm)	Middle holes	
>8-1/4" (210 mm) to 9-7/8" (250 mm)	Outer holes	>13" (330 mm) to 14-5/8" (371 mm)	Outer holes	



2. Attach upper yoke (to I-beam)

Secure the upper yoke to the I-beam with the Upper Yoke Hardware as shown. Tighten the bolts to **40 ft·lb (54.2 N·m)** using a torque wrench and 3/4" socket.

Upper Yoke Hardware (BAF-Supplied):

- a. (4) 1/2-13 x 2" GR 8 Bolt
- b. (8) 1/2" Flat Washer
- c. (4) 1/2-13 Nylock Nut
- d. (2) Beam Clip
- e. (2) Spacer

Proceed to "Hanging the Fan" (p. 20).

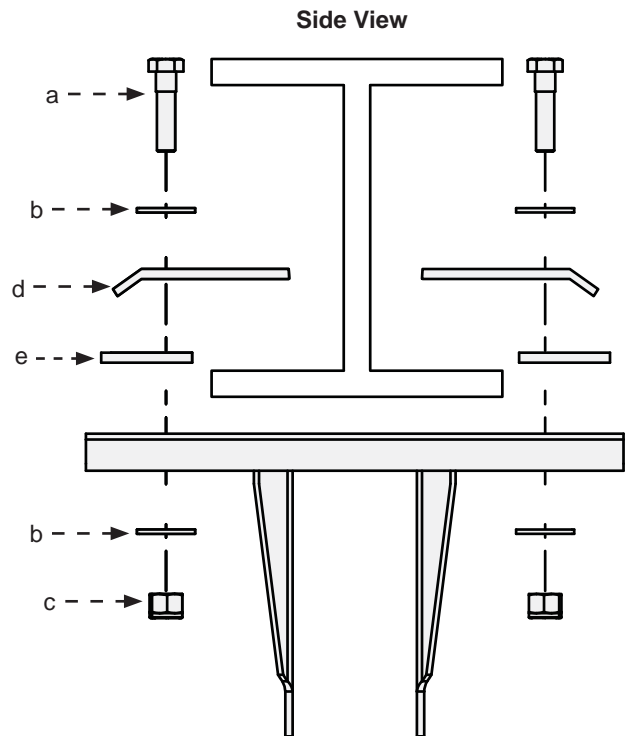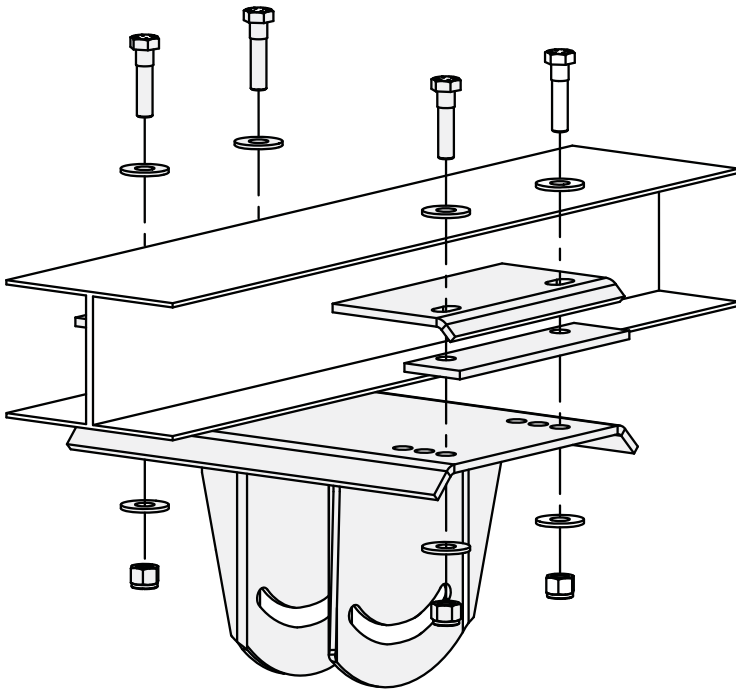

Note: Ensure the spacers are oriented as shown. Spacers are only used if the beam flange exceeds 3/8" (1 cm).

14

Mounting Structure: Bar Joists

Big Ass Fans can only be hung from an I-beam or bar joists. See page 12 for I-beam mounting instructions. Consult a structural engineer for installation methods not covered in this manual.

- ⚠ **WARNING:** The fan should not be installed unless the structure on which the fan is to be mounted is of sound construction, undamaged, and capable of supporting the loads of the fan and its method of mounting. A structural engineer should verify that the structure is adequate prior to fan installation. Verifying the stability of the mounting structure is the sole responsibility of the customer and/or end user, and Big Ass Fans hereby expressly disclaims any liability arising therefrom, or arising from the use of any materials or hardware other than those supplied by Big Ass Fans or otherwise specified in these installation instructions.
- ⚠ **WARNING:** Never use beam clips when mounting fan to angle irons! Beam clips are only intended for I-beam installations.
- ⚠ **CAUTION:** Do not install the fan from a single purlin, truss, or bar joist.
- ⚠ **CAUTION:** Unsupported angle iron spans should not exceed 12 ft (3.7 m).
- ⚠ **CAUTION:** The angle irons must be fastened to the roof structure at each end.
- ⚠ **AVERTISSEMENT :** Le ventilateur ne doit pas être installé à moins que la structure sur laquelle le ventilateur doit être monté soit une construction solide, intacte, et capable de supporter les charges du ventilateur et sa méthode de montage. Un ingénieur en structure doit vérifier que la structure est adéquate avant d'installer le ventilateur. Vérifier la stabilité de la structure de montage est de la seule responsabilité du client et/ou de l'utilisateur final, et Big Ass Fans décline expressément toute responsabilité en découlant ou résultant de l'utilisation de tout matériel ou du matériel autres que ceux fournis par Big Ass Fans ou autrement spécifié dans les instructions d'installation.
- ⚠ **AVERTISSEMENT :** Ne jamais utiliser des attaches de poutre lors du montage du ventilateur sur les cornières ! Les attaches de poutre sont uniquement destinées à l'installation de poutres en I.
- ⚠ **ATTENTION :** Ne pas installer le ventilateur à partir d'une seule panne, grappe ou solive.
- ⚠ **ATTENTION :** Des travées de cornières non soutenues ne doivent pas dépasser 12 pieds (3,7 m).
- ⚠ **ATTENTION :** Les cornières doivent être fixées à la structure de toit à chaque extrémité.



1. Select proper angle irons

Using the table and diagrams below, select the proper angle irons for fan installation. *Note: Angle irons and angle iron hardware are not included with the fan.*

Angle iron span (between mounting points)	Minimum angle iron dimensions (W x H x T)	Number of angle irons needed
6 ft (1.8 m) or less	2.5" (6.4 cm) x 2.5" (6.4 cm) x 0.25" (0.6 cm)	2
6 ft (1.8 m) to 8 ft (2.4 m)	3" (7.6 cm) x 3" (7.6 cm) x 0.25" (0.6 cm)	2
8 ft (2.4 m) to 12 ft (3.7 m)	3" (7.6 cm) x 3" (7.6 cm) x 0.25" (0.6 cm)	4*

*Two pairs of angle irons. Pairs should be placed back to back and fastened in center (see step 3).

Angle Iron Side View
(see table for dimensions)

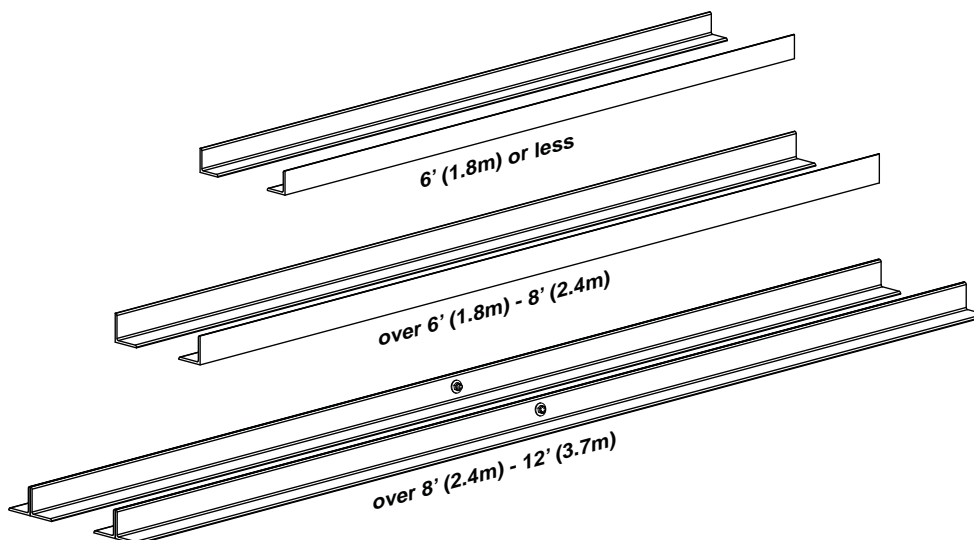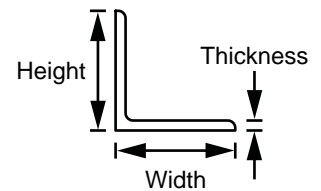


2. Pre-drill angle irons

Before drilling the angle irons, confirm that you have the appropriate mount to accommodate the roof pitch of your mounting structure.

Drill two $\text{Ø}9/16''$ (1.4 cm) holes exactly $5\text{-}3/8''$ (13.7 cm) apart in the centers of two angle irons.

Measure the distance between the mounting points of the roof structure that the angle irons will span. Measure the same distance on the angle irons and drill $\text{Ø}9/16''$ (1.4 cm) holes through each end of the angle irons. Drill holes in two angle irons if the span is 8 ft (2.4 m) or less. Drill holes in 4 angle irons if span is greater than 8 ft (2.4 m).

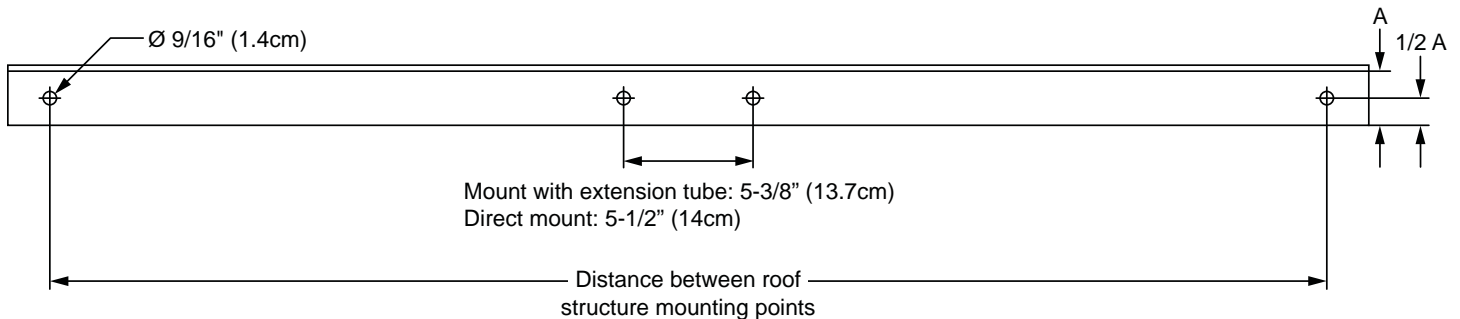

3. Secure angle irons (span longer than 8 ft)

If the angle iron span is 8 ft (2.4 m) or less, skip step 3 and proceed to step 4a.

If the angle iron span is longer than 8 ft (2.4 m), it is necessary to use double angle irons.

Locate the center of the angle iron length. Drill $\text{Ø}9/16''$ (1.4 cm) hole through the center of the vertical wall of the angle iron. Drill a total of four angle irons.


Place two drilled angle irons back to back. Fasten the angle irons together with customer-supplied $\text{Ø}1/2\text{-}13$ Grade 8 hardware and tighten the bolts to **40 ft-lb (54.2 N·m)** using a torque wrench and $3/4''$ socket.

Repeat this step for the remaining two angle irons.

Proceed to step 4b.

Grade 8 Hardware (Customer-Supplied):

- (2) $1/2\text{-}13$ Bolt
- (4) $1/2''$ Washer
- (2) $1/2''$ Nut

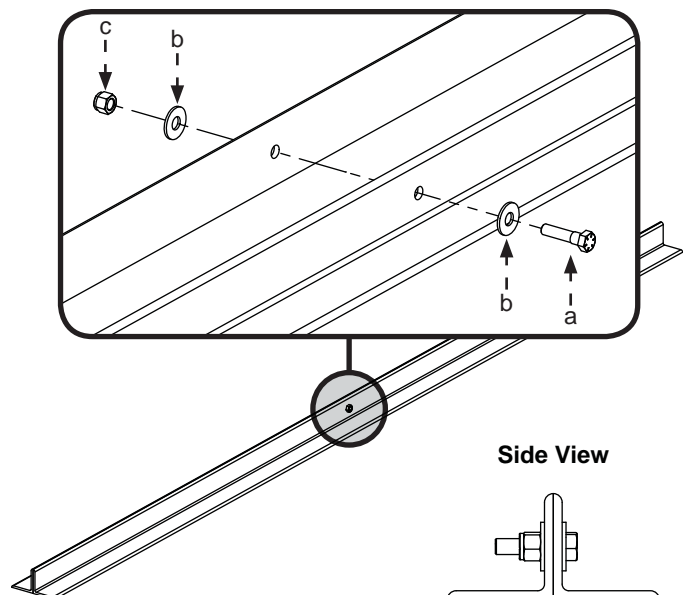

4a. Fasten single angle irons to roof structure

If the angle iron span is greater than 8 ft (2.4 m) and requires double angle irons, proceed to step 4b.



Fasten the angle irons to the roof structure mounting points at each end with customer-supplied Grade 8 hardware as shown. *Do not tighten the hardware until the upper yoke has been mounted to the angle irons (step 5).* Big Ass Fans recommends orienting the angle irons so that the horizontal legs are facing each other (or the vertical legs are on the outside).

Proceed to step 5.

Grade 8 Hardware (Customer-Supplied):

- a. (4) 1/2-13 Bolt
- b. (8) 1/2" Washer
- c. (4) 3" Square Washer (BAF-Supplied; see diagram)
- d. (4) 1/2" Nylock Nut

Square Washer

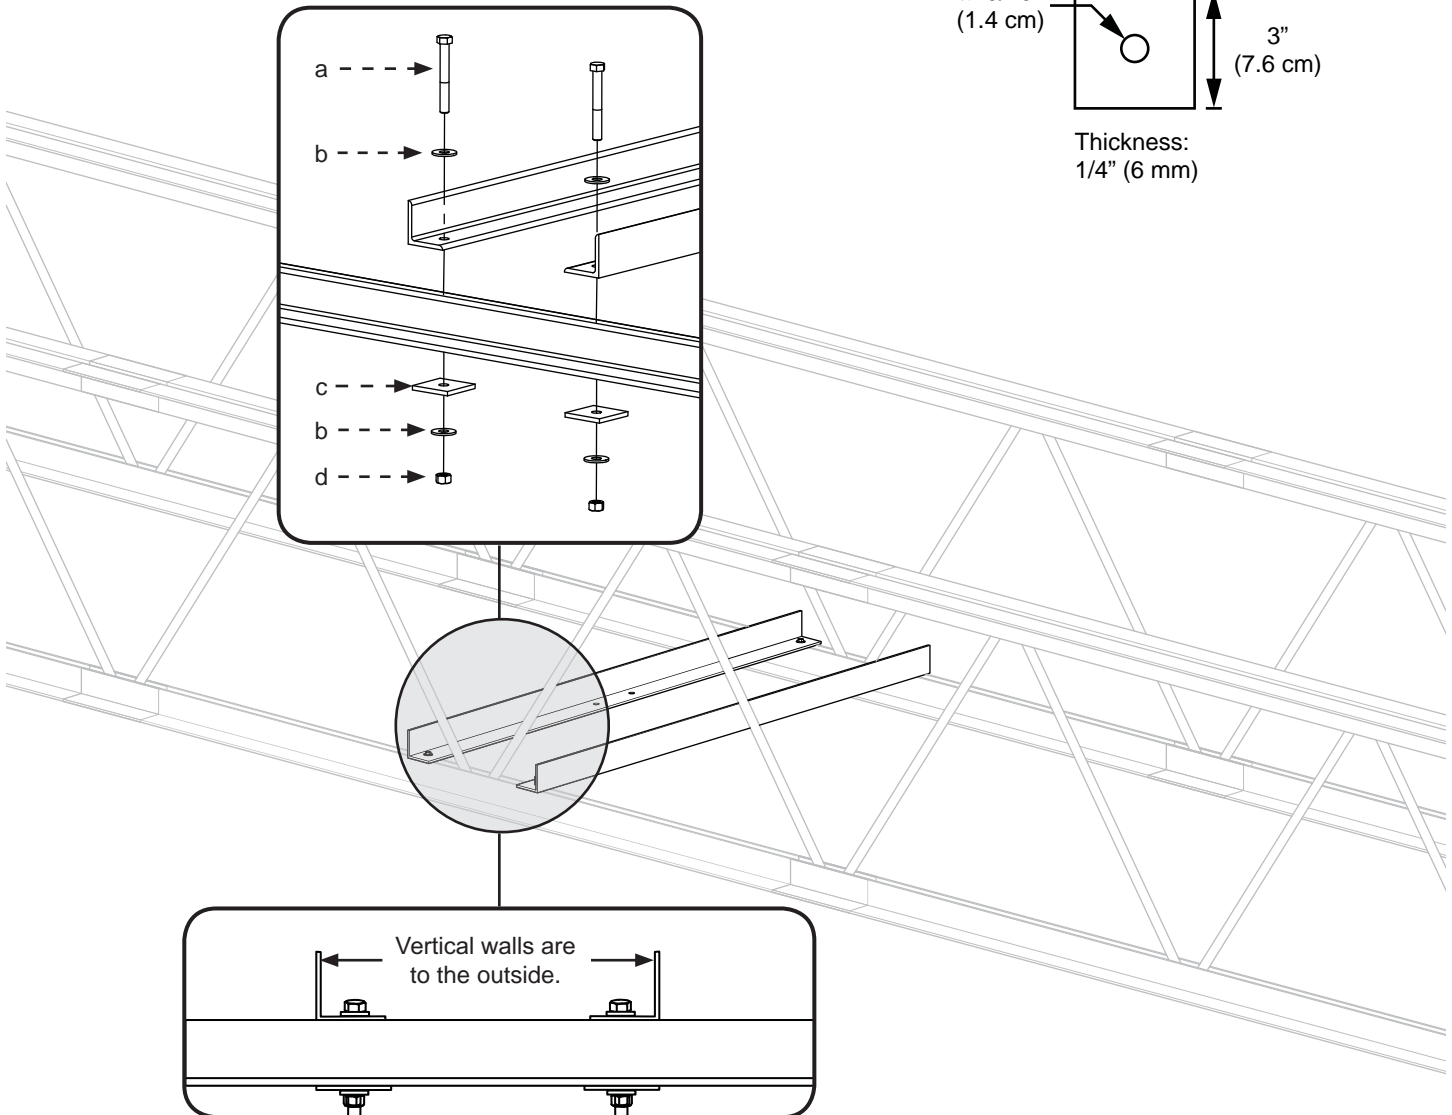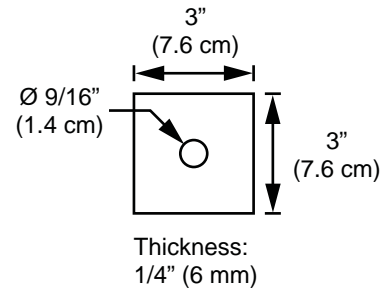


Note: Ensure the angle irons are oriented as shown.

4b. Fasten double angle irons to roof structure

Fasten the angle irons to the roof structure mounting points at each end with customer-supplied Grade 8 hardware as shown. The angle irons with fan mounting holes should be positioned on the inside, facing each other. *Do not tighten the hardware until the upper yoke has been mounted to the angle irons.*

Grade 8 Hardware (Customer-Supplied):

- (8) 1/2-13 Bolt
- (16) 1/2" Washer
- (8) 3" Square Washer (BAF-Supplied; see diagram)
- (8) 1/2" Nylock Nut

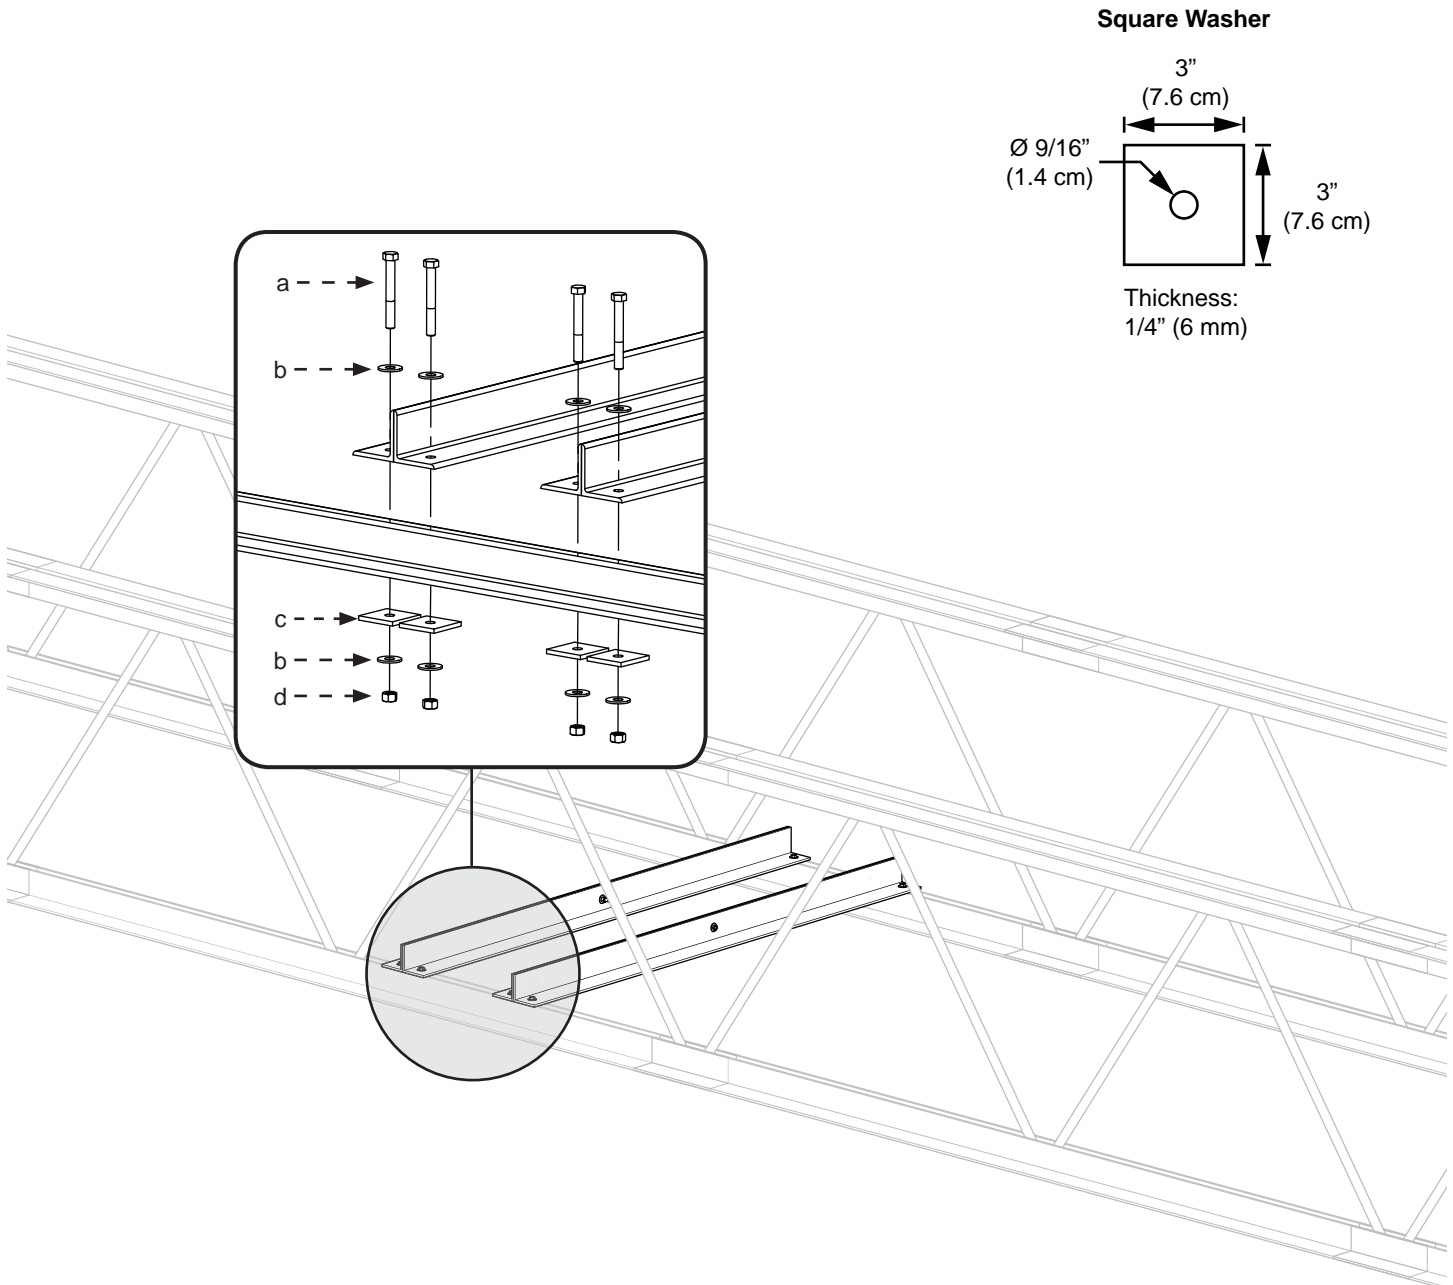

5a. Attach upper yoke (to angle irons)

If the fan will be directly mounted to the angle irons, skip this step and proceed to step 5b.

Before drilling the angle irons, confirm that you have the appropriate mount to accommodate the roof pitch of your mounting structure.


Secure the upper yoke directly to the angle irons with the Upper Yoke Hardware as shown. The angle irons should be aligned with the outermost holes of the upper yoke. Consult the diagrams below for distances between the angle irons.

Tighten the bolts to **40 ft-lb (54.2 N·m)** using a torque wrench and 3/4" socket. After attaching the upper yoke to the angle irons, tighten all the bolts securing the angle irons to the roof structure to **40 ft-lb (54.2 N·m)**.

Upper Yoke Hardware (BAF-Supplied):


- (4) 1/2-13 x 2" GR 8 Bolt
- (8) 1/2" Flat Washer
- (4) 1/2-13 Nylock Nut

Proceed to "Hanging the Fan" (p. 20).

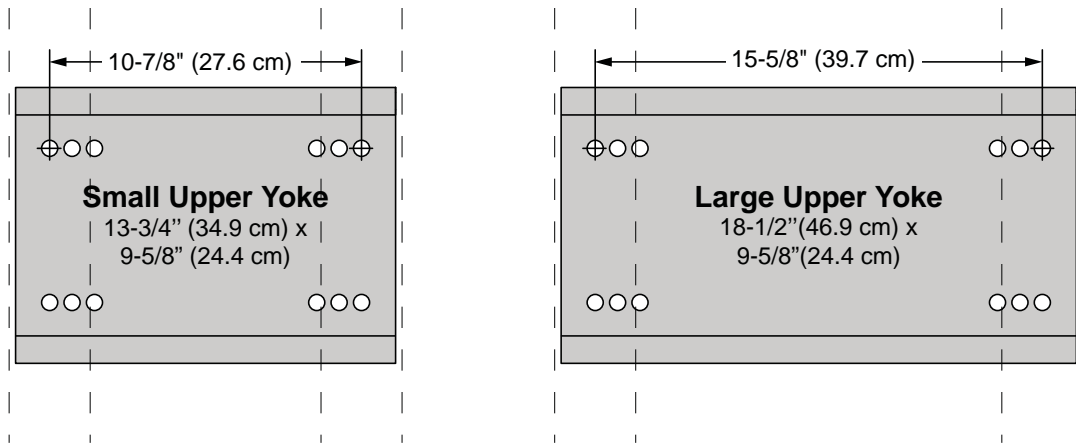

Note: Dashed lines represent angle irons in the above illustrations.

The angle irons should be aligned with the outermost holes on the upper yoke. Do not use beam clips on angle irons!

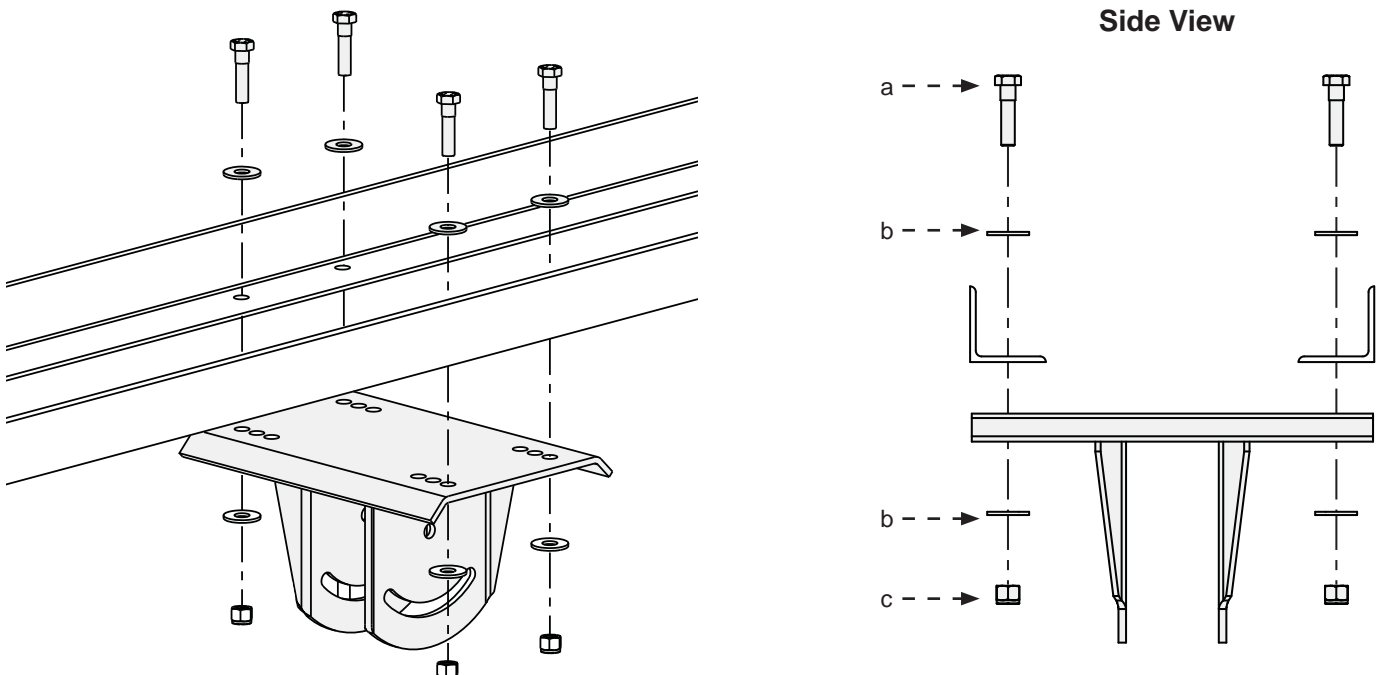

5b. Attach main fan unit (to angle irons)

- ⚠ **CAUTION:** The main fan unit is heavy. Use caution when raising it.
- ⚠ **CAUTION:** A 24-ft (7.3 m) Powerfoil X2.0 weighs, at maximum, 500 lbs (227 kg). A suitable means for lifting the weight of the fan, such as a scissor lift, and at least two (2) installation personnel will be required.
- ⚠ **ATTENTION :** L'unité principale du ventilateur est lourde. La soulever avec précaution.
- ⚠ **ATTENTION :** Un ventilateur Powerfoil X2.0 de 7,3 m pèse au maximum 227 kg. Il est nécessaire d'utiliser un dispositif adapté pour soulever le ventilateur (p. ex. une table élévatrice à ciseaux) et au moins deux installateurs



Attach the main fan unit directly to the angle irons with the Motor Hub Hardware as shown. Consult the diagram below for distances between the angle irons. *Note: The fan can only be directly mounted to angle irons. Do not directly mount the fan to an I-beam.*

Tighten the bolts to **40 ft-lb (54.2 N-m)** using a torque wrench and 3/4" socket. After attaching the main fan unit to the angle irons, tighten all the bolts securing the angle irons to the roof structure to **40 ft-lb (54.2 N-m)** using a torque wrench and 3/4" socket.

Proceed to "Secure Upper Safety Cable" (p. 20).

Main Fan Unit Hardware (BAF-Supplied):

- (4) 1/2-13 x 1 3/4" GR 8 Bolt
- (8) 1/2" Flat Washer
- (4) 1/2-13 Nylock Nut

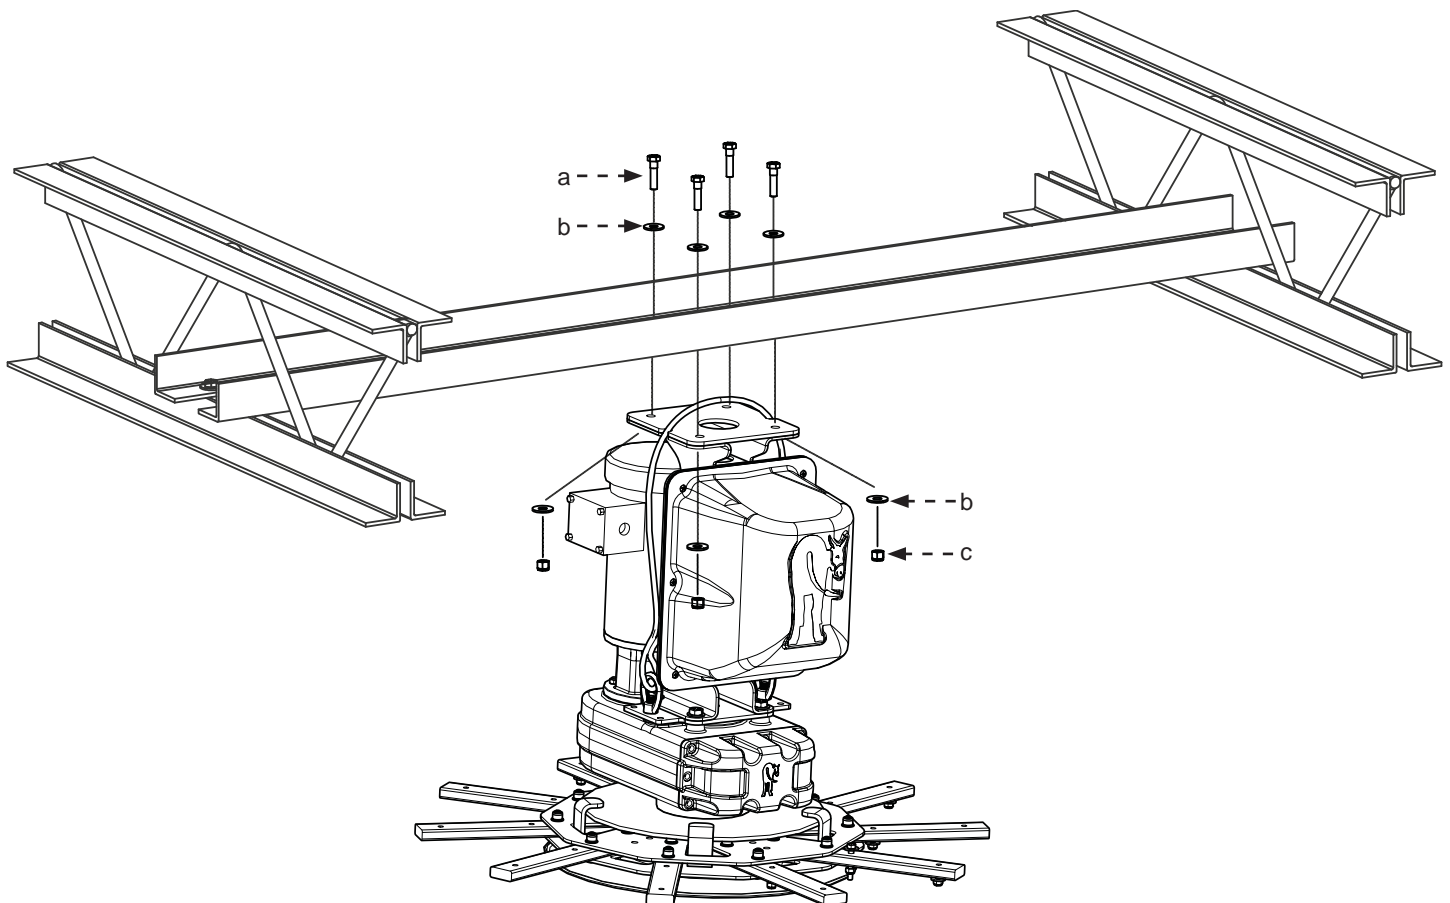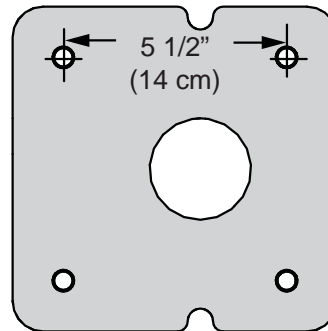

20

Hanging the Fan


1. Attach extension tube (to upper yoke)

Fasten the extension tube to the upper yoke with the Extension Tube Hardware as shown.

Ensure the extension tube is hanging plumb to the ground, and then tighten the hardware so that it is snug, but not fully tightened.

Extension Tube Hardware (BAF-Supplied):

- a. (2) 1/2-13 Nylock Nut
- b. (4) 1/2" Flat Washer
- c. (2) 1/2-13 x 4-1/2" GR 8 Bolt

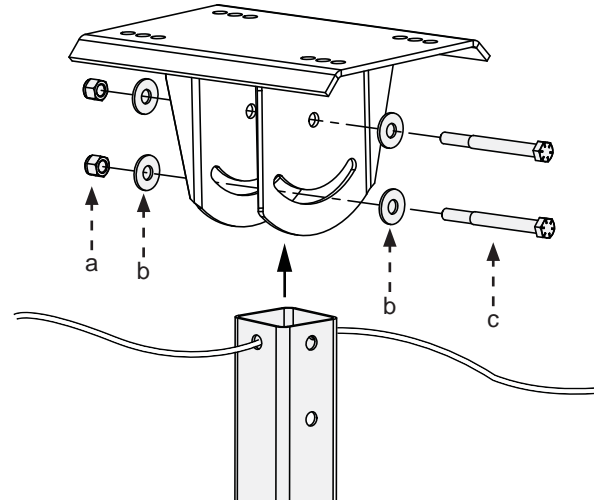
**2. Secure upper safety cable**

The safety cable is a crucial part of the fan and must be installed correctly. If you have questions or require assistance, call Customer Service at 1-877-BIG-FANS.


Le câble de sécurité est un élément essentiel du ventilateur et doit être installé correctement. Pour toute question ou tout besoin d'assistance, appeler le service après-vente au 1-877-BIG-FANS.

Wrap the safety cable around the mounting structure and secure the looped ends with the shackle as shown. The cable must be drawn tightly around the I-beam or angle iron, leaving as little slack as possible. The shackle should be on the topside of the I-beam or angle iron if possible. Securely tighten the shackle.


I-Beam Mount

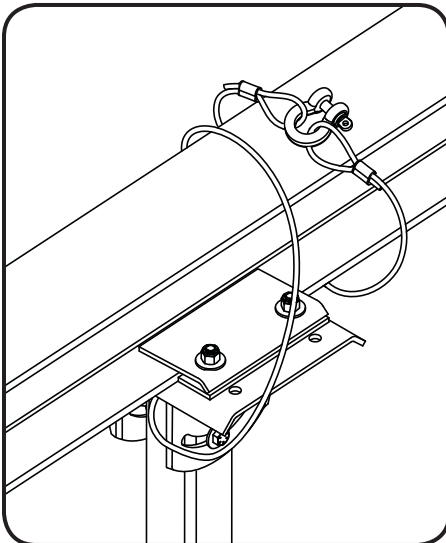


Shackle

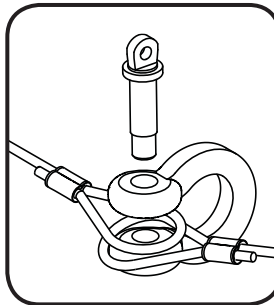

Angle Iron Mount

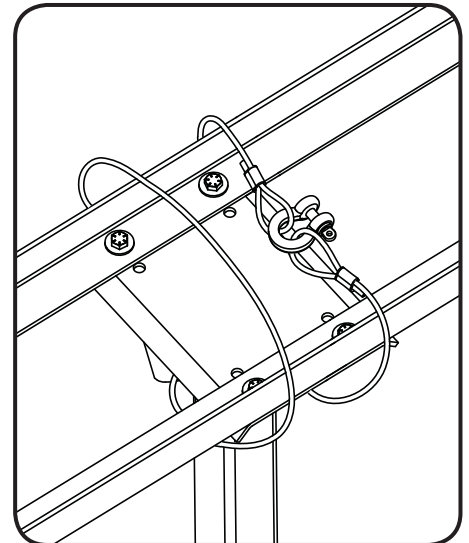

Direct Mount

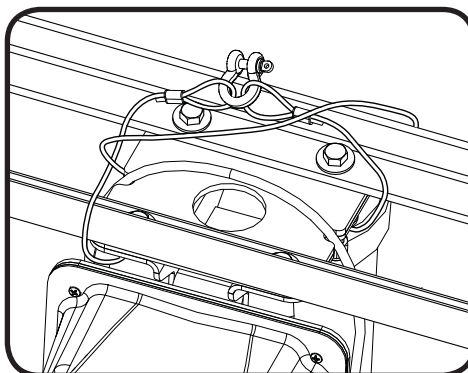

Hanging the Fan (cont.)

21


3. Attach lower yoke (to extension tube)

Attach the lower yoke to the bottom of the extension tube with the Lower Yoke Hardware as shown.

Tighten the hardware so that it is snug, but not fully tightened.

Lower Yoke Hardware (BAF-Supplied):

- a. (2) 1/2-13 x 4-1/2" GR 8 Bolt
- b. (4) 1/2" Flat Washer
- c. (2) 1/2-13 Nylock Nut

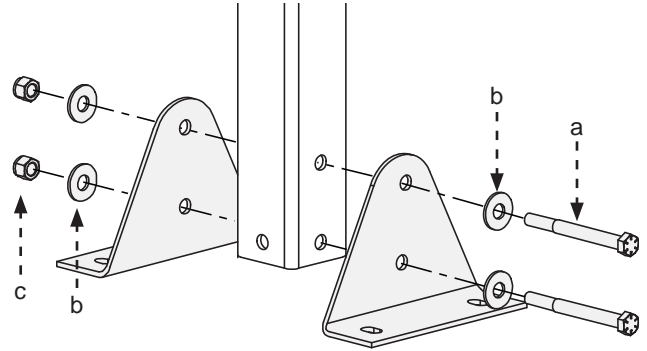

4. Attach main fan unit (to lower yoke)


- ⚠ **CAUTION:** Do not remove main fan unit from its protective packaging prior to hanging it!
- ⚠ **CAUTION:** To prevent damage, avoid contact with the bottom of the main fan unit and hub!
- ⚠ **CAUTION:** The main fan unit is heavy. Use caution when raising it.
- ⚠ **ATTENTION :** Ne pas sortir l'unité principale du ventilateur de son emballage de protection avant de la suspendre.
- ⚠ **ATTENTION :** Pour éviter tout dommage, éviter le contact avec la partie inférieure de l'unité principale du ventilateur et du moyeu.
- ⚠ **ATTENTION :** L'unité principale du ventilateur est lourde. La soulever avec précaution.

Attach the main fan unit to the lower yoke with the Main Fan Unit Hardware as shown. *Do not rest the main fan unit on the ground!* Make sure the lower cable is positioned between the lower yoke brackets as shown on the right.

Tighten the bolts to **40 ft·lb (54.2 N·m)** using a torque wrench and 3/4" socket. *Do not discard the main fan unit packaging. It should be used if the fan is ever moved or relocated.*


Main Fan Unit Hardware (BAF-Supplied):

- a. (4) 1/2-13 x 1 3/4" GR 8 Bolt
- b. (8) 1/2" Flat Washer
- c. (4) 1/2-13 Nylock Nut

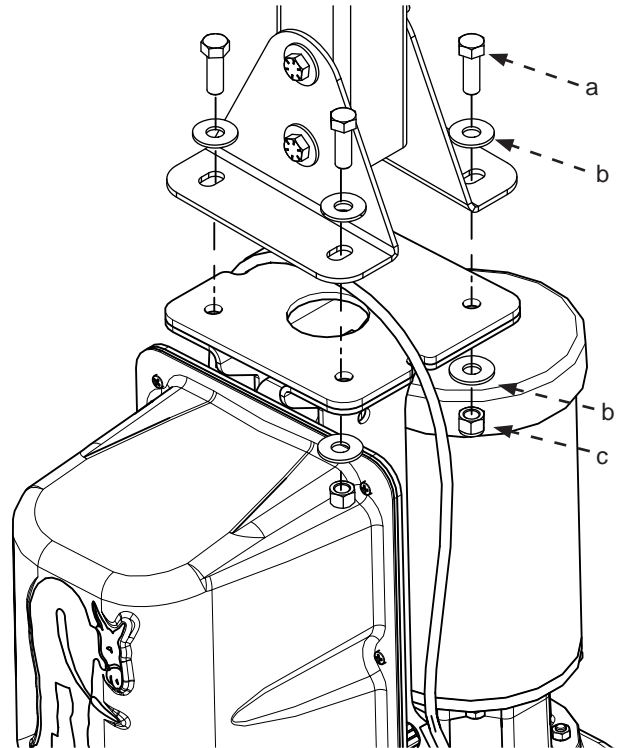

5. Confirm orientation

After securing the main fan unit to the lower yoke, allow the fan to hang so that the extension tube is plumb to the ground. When it is properly positioned, fully tighten the mounting hardware (Lower Yoke Hardware and Extension Tube Hardware) to **40 ft·lb (54.2 N·m)**.

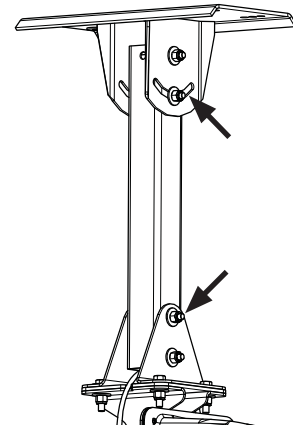

Installing Guy Wires


Guy wires may not be included in your fan order. They are intended to constrain the fan's lateral movement and are only included with fans that have extension tubes 4 ft (1.2 m) or greater in length. Depending on the conditions at the installation site, guy wires may be needed for fans with shorter tubes to prevent any lateral movement. If guy wires are needed and were not included with your fan order, contact Big Ass Fans Customer Service at 1-877-BIG-FANS.

⚠ WARNING: Ensure power is disconnected from the fan before installing the guy wires.

⚠ AVERTISSEMENT : S'assurer que le ventilateur est hors tension avant d'installer les câbles de retenue.

1. Attach locking carabiners to main fan unit

Attach the (4) locking carabiners to the guy wire clips on the main fan unit as shown. Securely tighten the carabiners.

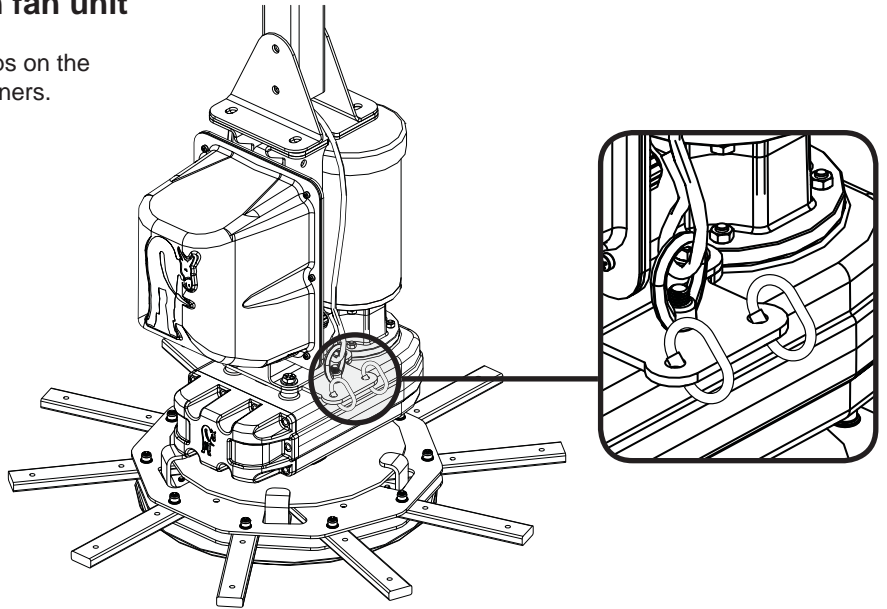

2. Attach beam clamp

Attach the beam clamp to the mounting structure. *The guy wire should be approximately 45° from the horizontal plane. Place the beam clamp accordingly. Refer to the illustrations on the following page. Fully tighten the set screw to secure the clamp.*


Fasten the small eyebolt and nut onto the beam clamp. The nut will be on the outside of the beam clamp.

Loop the guy wire through its crimped end to secure it to the eyebolt as shown.

Guy Wire Hardware (BAF-Supplied):

- a. (4) 1/4" Beam Clamp
- b. (4) 1/4-20 x 1" Eyebolt
- c. (4) 1/4-20 Hex Nut
- d. (4) Guy Wire



Beam Clamp

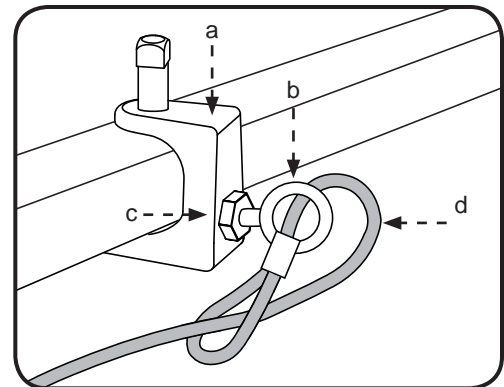

Installing Guy Wires (cont.)

For best results, the guy wires should be installed at 45° in the X-Y, Y-Z, and X-Z planes as shown below. If the angle deviates by more than 15°, contact Customer Service at 1-877-BIG-FANS for assistance.


Note: I-beams are shown in the illustration below. Your mounting structure may differ.

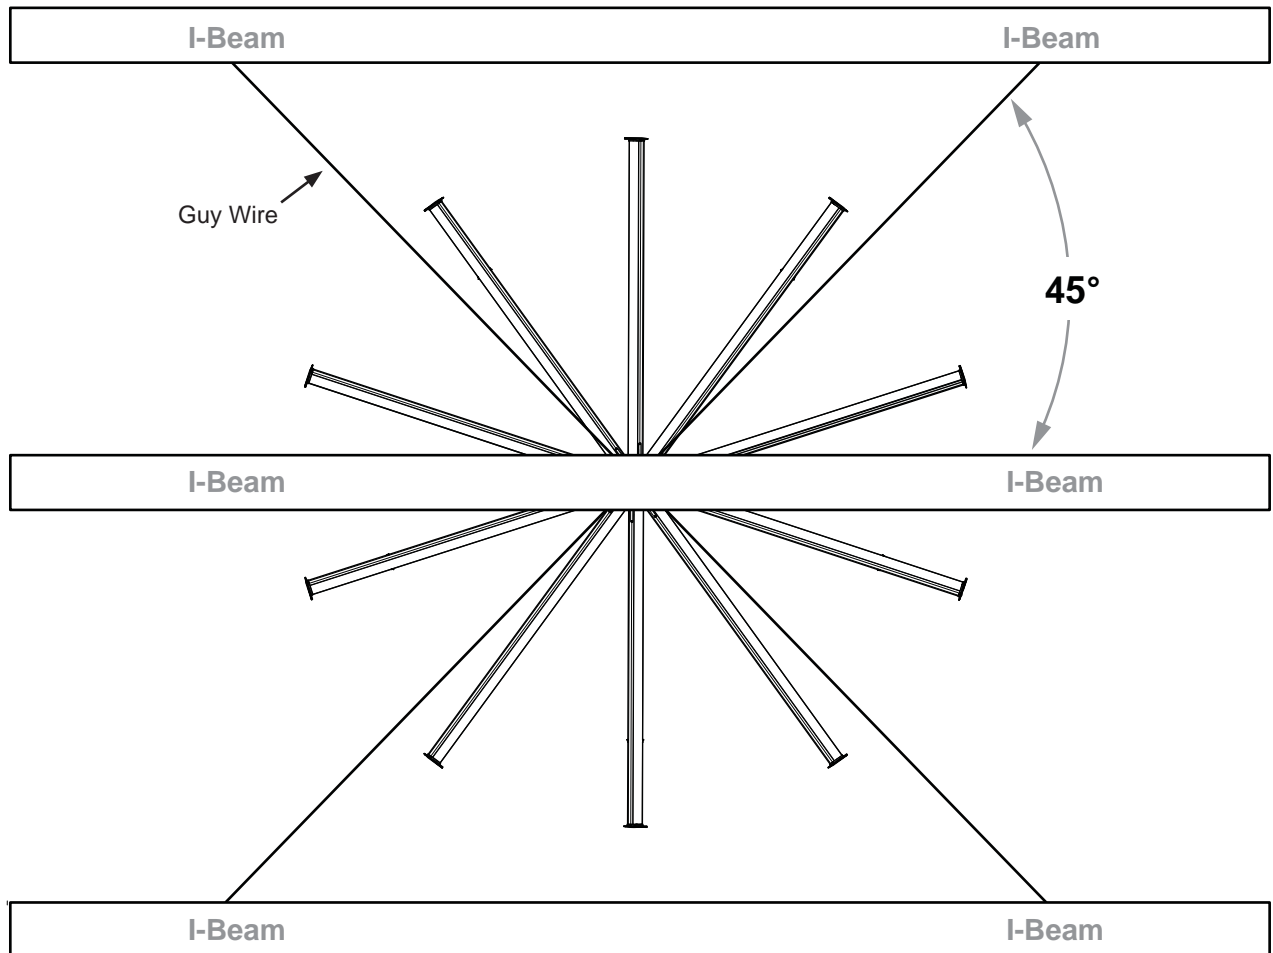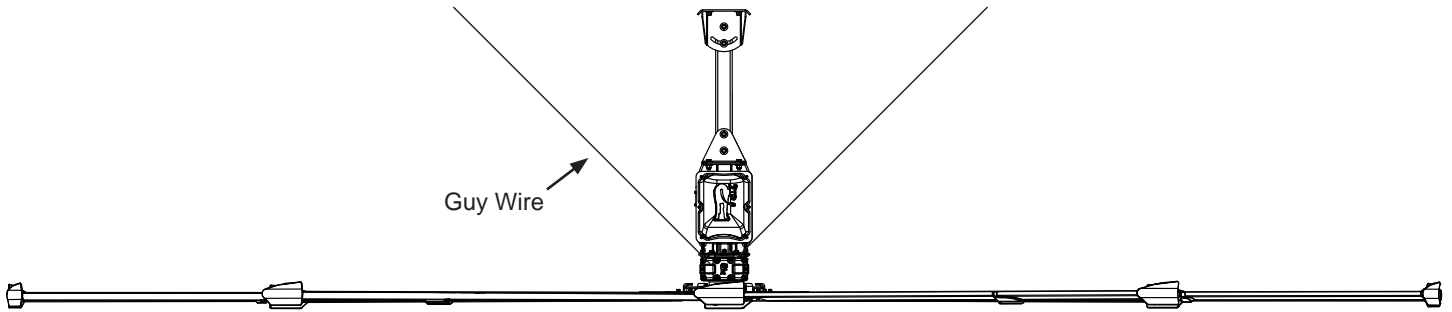

3. Route guy wire through Gripple®

Route the guy wire through the Gripple, the carabiner on the main fan unit, and then back through the Gripple as shown. Do not tighten the Gripple until the remaining guy wires have been installed.

Note: To back the guy wire out of the Gripple, insert 1/16 (1.5 mm) Allen wrench into the small hole on the Gripple.

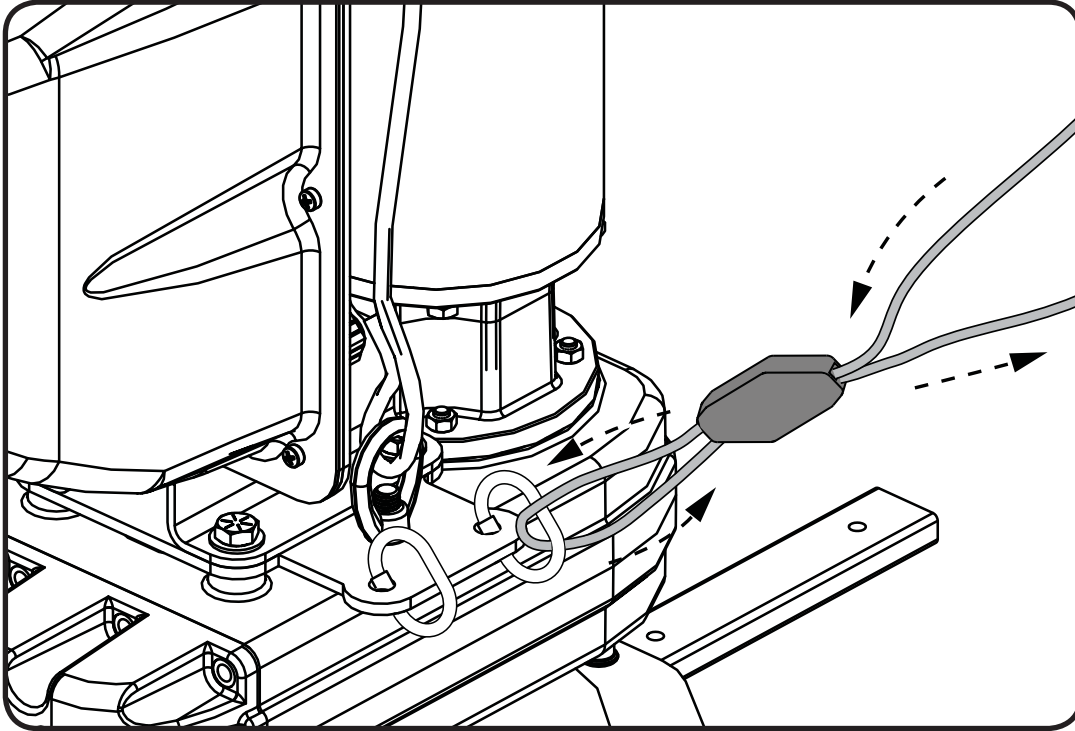

4. Install remaining guy wires


- ⚠ **CAUTION:** Over-tightening the guy wires could throw the fan off balance.
- ⚠ **ATTENTION :** Un serrage excessif des câbles de retenue risque de déséquilibrer le ventilateur.

Repeat steps 2–3 to install the three remaining guy wires.

Evenly cinch all four guy wires into place using the Gripples. The guy wires should be taut, evenly spaced around the fan, and away from the path of the airfoils. Maintain a distance of 6"–8" between the Gripple and the carabiner.

Once all of the guy wires are taut, secure their loose ends with the wire rope clips and torque to **4.5 ft·lb (6.1 N·m)**. Ensure all electrical cords/cables are unobstructed by the guy wire system.

Wire Rope Clip

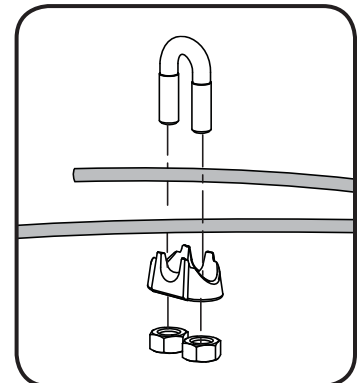

Installing Airfoils

Big Ass Fans recommends completing Electrical Installation (p. 28) before installing the airfoils.

⚠ WARNING: Disconnect power to the fan before installing the airfoils.

⚠ AVERTISSEMENT : Débranchez l'alimentation du ventilateur avant de replacer les hélices.


1. Attach winglets to airfoils

Note: Check each airfoil to ensure the AirFence™ is still securely attached.


Attach the winglet to the airfoil using the Winglet Hardware as shown. Both a Phillips head and flat head screwdriver are required to properly secure the fasteners. *Attach winglets to all 10 airfoils before attaching the airfoils to the fan.*

Winglet Hardware (BAF-Supplied):


- (10) 10-24 x 1/2" Bolt
- (10) 10-24 x 3/4" Barrel

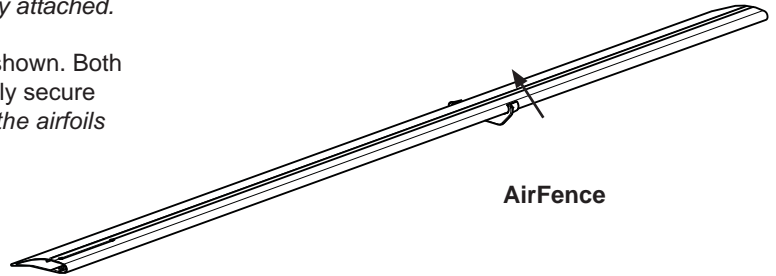

PowerfoilPlus

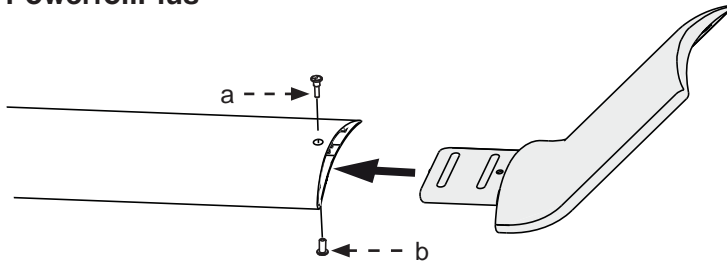


Powerfoil

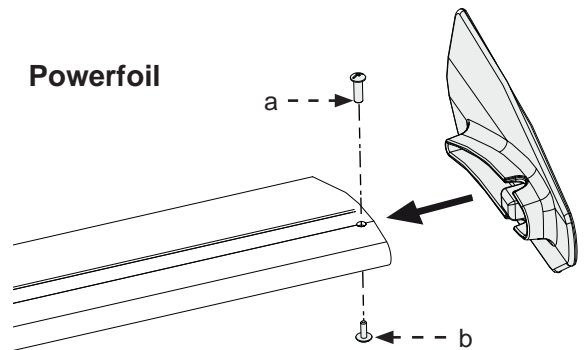

2. Position airfoils

Slide the airfoils onto the tabs of the fan hub. *The airfoils must be attached to the fan hub with the curved sides facing downward.*

Do not fasten the airfoils to the hub with hardware at this point. Proceed to step 3.

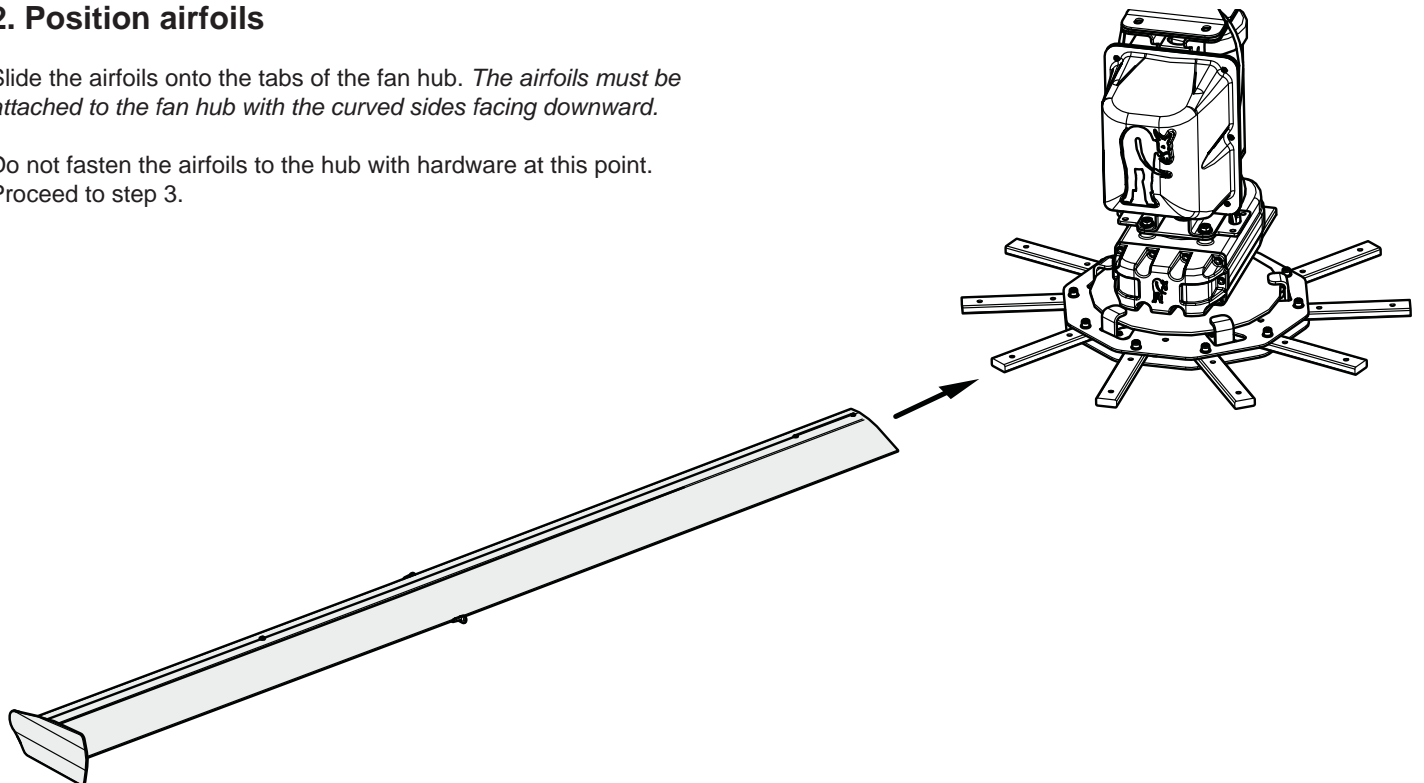

3. Attach airfoils to hub

Attach the 10 airfoil retainers with the Airfoil Hardware. Moving clockwise around the fan hub, position the airfoil retainers end over end as shown. Hole A of the retainer should be positioned over top of Hole B. *Do not tighten the bolts until all the airfoil retainers have been attached!*



Tighten the bolts along the outer perimeter to **29 ft·lb (39.3 N·m)** using a torque wrench and 1/2" socket. After the outer perimeter bolts are torqued, tighten the bolts along the inner perimeter to **29 ft·lb (39.3 N·m)**.

Airfoil Hardware (BAF-Supplied):

- (20) 5/16-18 x 2" GR 8 Bolt
- (40) 5/16" Flat Washer
- (20) 5/16-18 Nylock Nut

Airfoil Retainer

Hole A

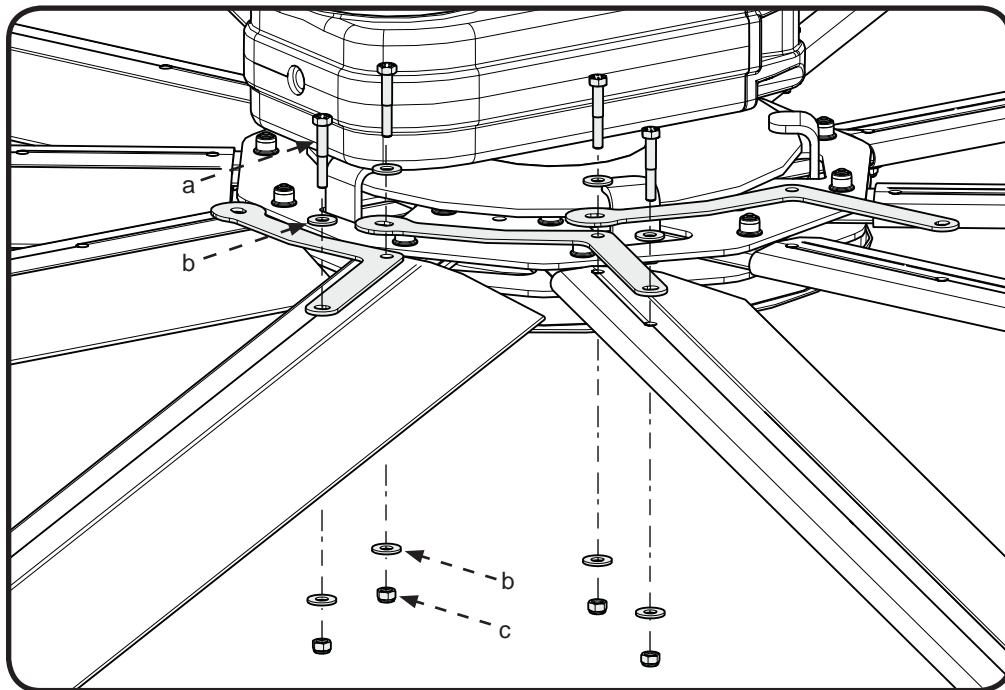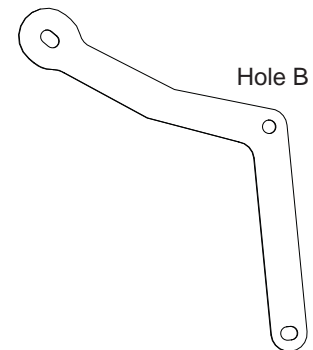

Installing Hub Cover

If your fan order included accessories, (light, camera, etc.), consult the instructions packaged with those accessories.


⚠ WARNING: Disconnect power to the fan before installing the hub cover.

⚠ AVERTISSEMENT : Débranchez l'alimentation du ventilateur avant de remplacer le couvercle du moyeu.

Attach the hub cover to the hub with the Hub Cover Hardware.

Hub Cover Hardware:

(4) 1/4" Plastic Rivet

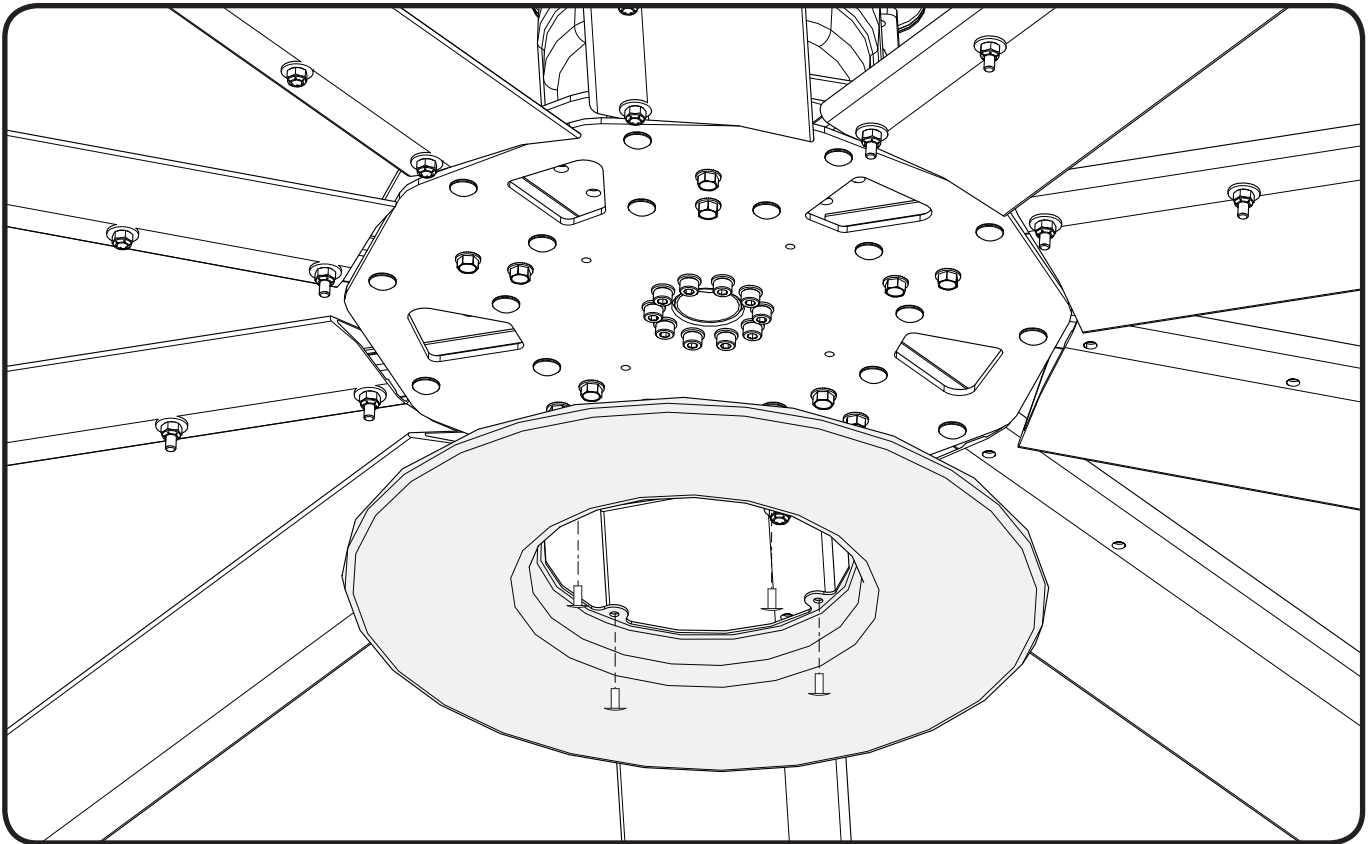

Electrical Installation



WARNING: To reduce the risk of electric shock, wiring should be performed by a qualified electrician! Incorrect assembly can cause electric shock or damage the motor and the controller! Hazard of electrical shock!

WARNING: The installation of a Big Ass Fan must be in accordance with the requirements specified in this installation manual and with any additional requirements set forth by the National Electric Code (NEC), ANSI/NFPA 70-2011, and all local codes. Code compliance is ultimately YOUR responsibility!

WARNING: The fan controllers contain high voltage capacitors that take time to discharge after removal of mains supply. Before working on the fan controller, ensure isolation of mains supply from line inputs at the fan controller's disconnect if installed. Wait three (3) minutes for capacitors to discharge to safe voltage levels. Failure to do so may result in personal injury or death. Note: Darkened display LEDs are not an indication of safe voltage levels.

CAUTION: It is the sole responsibility of the installer to verify the operating voltage of the fan system prior to installation! It is also mandatory that the installer verify that airfoils, motor hub assemblies, and fan controllers are matched properly at the time of installation, especially if multiple fan systems will be installed.

CAUTION: An incorrectly installed controller can result in component damage or reduction in the fan's life. Wiring or application errors such as under-sizing the controller, incorrect or inadequate AC supply, or excessive ambient temperatures may result in a malfunction of the fan system. Verify correct voltage, phase, and horsepower before beginning installation!

WARNING: Exercise caution and common sense when powering the fan. Do not connect the fan to a damaged or hazardous power source. Do not attempt to resolve electrical malfunctions or failures on your own. Contact Big Ass Fans at 1-877-BIG-FANS if you have any questions regarding the electrical installation of this fan.

CAUTION: For use with manufacturer-supplied variable frequency drive only. Not for use with other speed control devices!

CAUTION: Shielded cable, if applicable, must be landed on motor's ground terminal!

CAUTION: To avoid a short circuit, be very careful not to get metal chips in the controller!

CAUTION: The Big Ass Fans product warranty will not cover equipment damage or failure that is caused by improper installation.

CAUTION: If it was determined that a motor frequency less than 60 Hz is optimal for maximum performance of your particular fan model, under no circumstances should the factory programmed maximum frequency command limits be changed. Damage to the fan assembly or loss of warranty coverage can result.



AVERTISSEMENT : Pour réduire les risques de choc électrique, le câblage doit être réalisé par un électricien qualifié. Tout défaut de montage peut provoquer un choc électrique ou endommager le moteur ou le régulateur. Risque de choc électrique !

ATTENTION : l'installation de ce ventilateur doit être faite en conformité avec les exigences spécifiées dans ce manuel d'installation et toute exigence supplémentaire énoncée par le code national d'électricité américain (NEC), ANSI/NFPA 70-2011, et tous les codes locaux. Au bout du compte, le respect du code est votre responsabilité !

AVERTISSEMENT : Les régulateurs de ventilation contiennent des condensateurs à haute tension qui prennent le temps de se décharger après la coupure de l'alimentation secteur. Avant de réparer le régulateur de ventilation, assurer l'isolation de l'alimentation secteur des entrées de ligne du régulateur. Attendre trois minutes pour que les condensateurs se déchargent à des niveaux de tension non dangereux. Ne pas le faire peut entraîner des blessures ou la mort. Remarque : Les LED d'affichage de couleur sombre ne sont pas une indication des niveaux de tension non dangereux.

ATTENTION : Il est de la seule responsabilité de l'installateur de vérifier la tension de fonctionnement du ventilateur avant l'installation. L'installateur doit aussi obligatoirement vérifier que les profils d'ailes, les ensembles de moyeu du moteur et les régulateurs du ventilateur correspondent au moment de l'installation, surtout en cas d'installation de plusieurs ventilateurs.

ATTENTION : Un régulateur mal installé peut causer des dommages matériels ou réduire la durée de vie du ventilateur. Des erreurs de câblage ou d'application (p. ex. sous-dimensionnement du régulateur, une alimentation AC incorrecte ou inadéquate ou des températures ambiantes excessives) peuvent entraîner une défaillance du ventilateur. Vérifier la tension, la phase et la puissance avant de commencer l'installation.

ATTENTION : Faites preuve de prudence et de bon sens lors de la mise en marche du ventilateur. Ne pas brancher le ventilateur à une source d'alimentation endommagée. Ne pas tenter de résoudre de vous-même des dysfonctionnements ou pannes électriques.

ATTENTION : À utiliser exclusivement avec le variateur de fréquence fourni par le fabricant. Ne pas utiliser avec d'autres dispositifs de contrôle de vitesse.

ATTENTION : Tout câble blindé, le cas échéant, doit être relié à la borne de terre du moteur.

ATTENTION : Pour éviter un court-circuit, faire très attention à ne pas introduire de copeaux métalliques dans le régulateur.

ATTENTION : La garantie du produit ne couvre pas l'endommagement de l'équipement ou le non fonctionnement causé par une mauvaise installation ou une mauvaise manipulation.

ATTENTION : S'il a été déterminé qu'une fréquence moteur inférieure à 60 Hz est optimale pour un rendement maximal de votre modèle de ventilateur, les limites maximales de commande de fréquence programmées en usine ne doivent en aucun cas être modifiées. Il peut en résulter des dommages au ventilateur ou l'annulation de la couverture de la garantie.

30



Electrical Installation (cont.)

Mounting the wall controller

Select a mounting location that is visible from the fan that the wall controller operates. The mounting location should be a flat surface that is readily accessible, free from vibration, and where there is adequate distance from foreign objects or moving equipment. *Note: A junction box is not supplied with the fan.*

To mount the wall controller:

1. Attach the mounting plate to the junction box in the wall with the two (2) provided 6-32 x 1-1/4" screws (a) as shown below. Pull the RJ-11 connector (not shown) through the junction box and mounting plate.
2. Rest the wall controller in the controller cover, and then connect the data cable (not shown). Secure the controller cover to the mounting plate with the four (4) provided 6-32 x 3/8" screws (b) as shown below.
3. (Optional) Snap the button cover onto the controller cover as shown below. Only the Up Arrow, Down Arrow, RUN, and STOP/RESET buttons should be visible. The button cover can easily be removed to access other buttons.

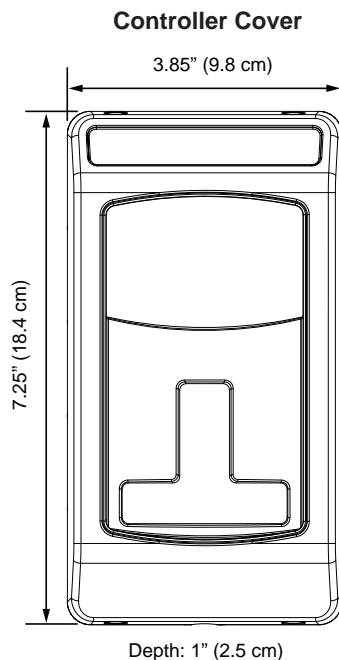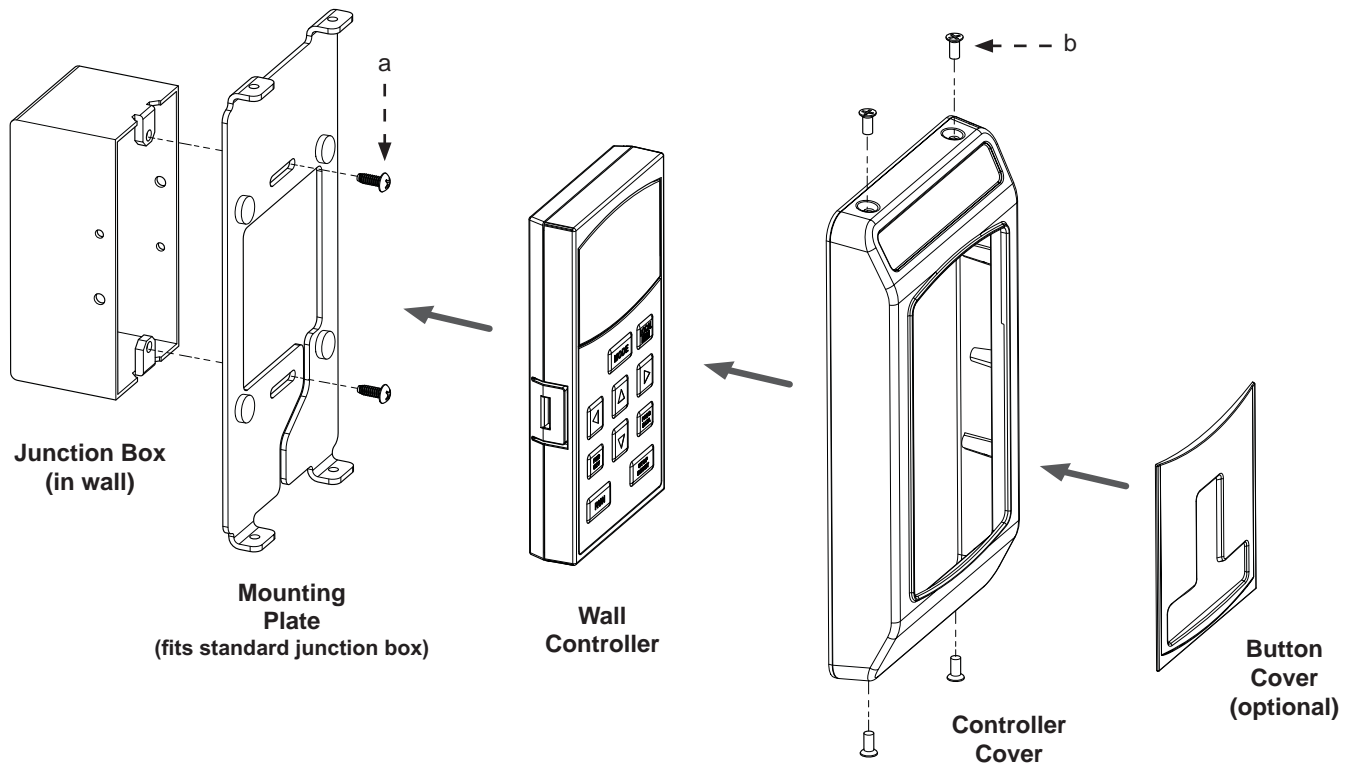


Delta secondary

- ⚠ **CAUTION:** Care must be taken when connecting to a three-phase 240/120V secondary as shown below. All fan controller models rely on internal references made between each incoming phase and ground. To prevent nuisance tripping such as Overvoltage and Undervoltage faults, 200–250V, three phase fan controllers should be connected so that the High leg, or “phase B,” terminates on “L2” of the fan controller’s input power terminals.
- ⚠ **CAUTION:** Avoid installations utilizing supply transformers with a 480V delta secondary (ungrounded, corner grounded, open). Proper fan operation cannot be guaranteed due to a lack of proper phase-to-ground voltage references.
- ⚠ **ATTENTION :** Il faut faire attention lors de la connexion à un secondaire triphasé 240/120V, comme illustré. Tous les modèles de contrôleur de ventilation dépendent des références internes effectuées entre chaque phase d'arrivée et chaque base. Pour éviter les déclenchements intempestifs tels que les défauts de surtension et de sous-tension, les régulateurs triphasés de 200V doivent être raccordés de sorte que la tension trop élevée ou la « phase B », termine le « L2 » des bornes d'entrée d'alimentation du régulateur de ventilation.
- ⚠ **ATTENTION :** Éviter les installations utilisant des transformateurs d'alimentation avec un secondaire delta de 480V (non mis à terre, mis à terre, ouvert). Le bon fonctionnement du ventilateur ne peut pas être garanti en raison d'un manque de bonnes références de tension phase-terre.

There are many different arrangements available for industrial and commercial power distribution in North America. The most common are the following:

- **575V/330V Three-Phase (Wye Secondary).** Provides 575V between phases, and 330V from each phase to Neutral/Ground.
- **480V/277V Three-Phase (Wye Secondary).** Provides 480V between phases, and 277V from each phase to Neutral/Ground.
- **208V/120V Three-Phase (Wye Secondary).** Provides 208V between phases, and 120V from each phase to Neutral/Ground.
- **240V/120V Three-Phase (Delta Secondary).** Provides 240V between phases for three-phase loads, 120V from phase “A” and “C” to Neutral/Ground, and 208V from phase “B” to Neutral/Ground as shown below. In this transformer arrangement, phase “B” is commonly referred to as a “Wild Leg” or “High Leg,” and shall be marked accordingly with an orange finish or other effective means per NEC 110.15.

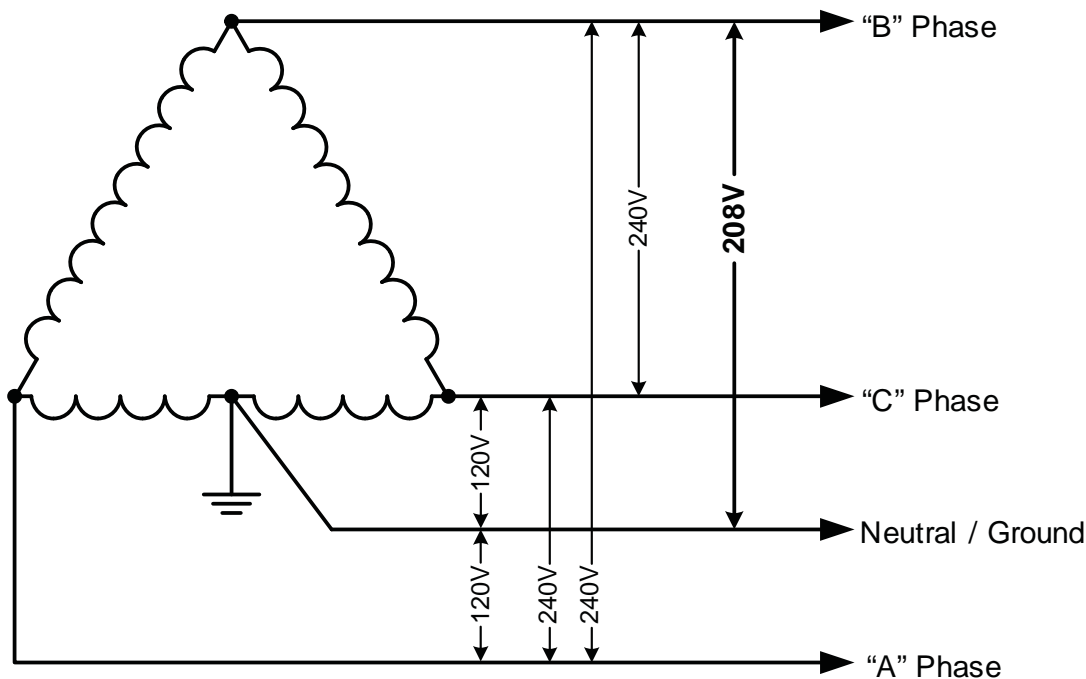


32

Electrical Installation (cont.)

Branch circuit protection


The fan controllers include fuses for branch short circuit protection. If desired, these fan controller models can be installed with a dedicated fusible disconnect and/or input circuit breaker. National and local industrial safety standards and/or electrical codes may determine additional requirements for these installations.

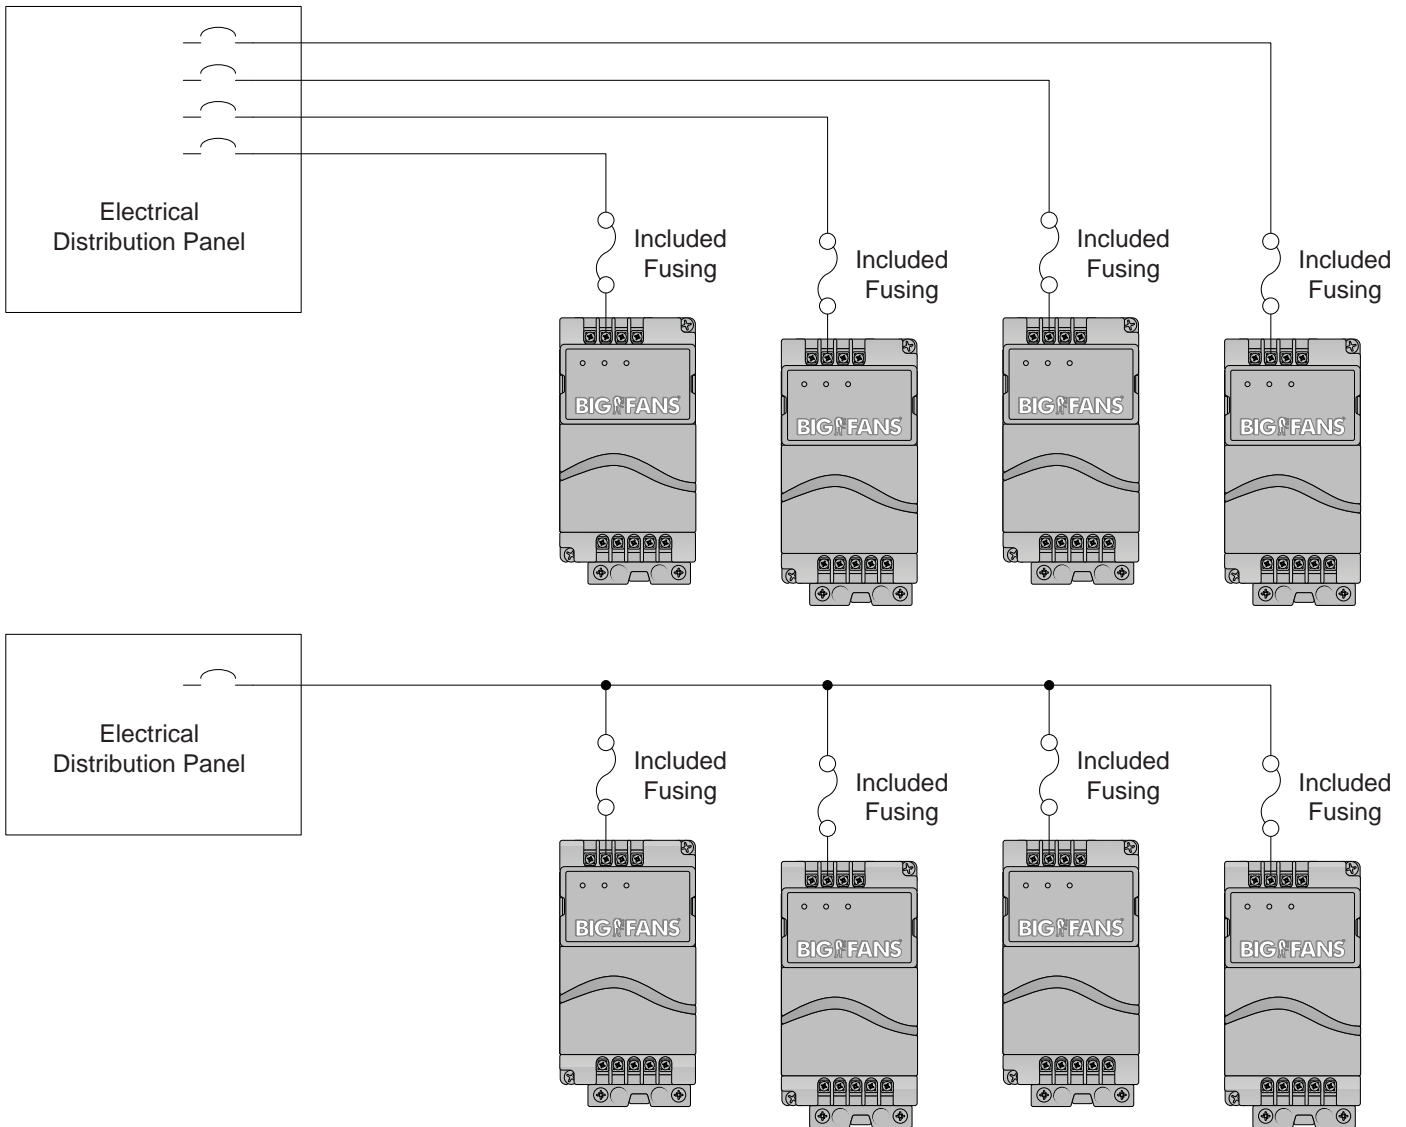

Wiring: Fan controller (200V–250V 1Φ, 1 HP)

- ⚠ **WARNING:** Wait three minutes after disconnecting before servicing!
- ⚠ **WARNING:** Improper installation can cause electric shock or damage to the motor and controller! A qualified electrician should perform the installation.
- ⚠ **AVERTISSEMENT :** Attendez trois minutes après avoir débranché avant d'utiliser le regulateur !
- ⚠ **AVERTISSEMENT :** Une installation incorrecte peut provoquer un choc électrique ou endommager le moteur et le régulateur! Un électricien qualifié doit effectuer l'installation.

The diagram below shows a standard fan controller (200V–250V 1Φ, 1HP) using single-phase input from AC power supply. See "About This Fan" on pp. 2–3 for detailed voltage and current information. See page 32 for circuit breaker/fuse requirements.

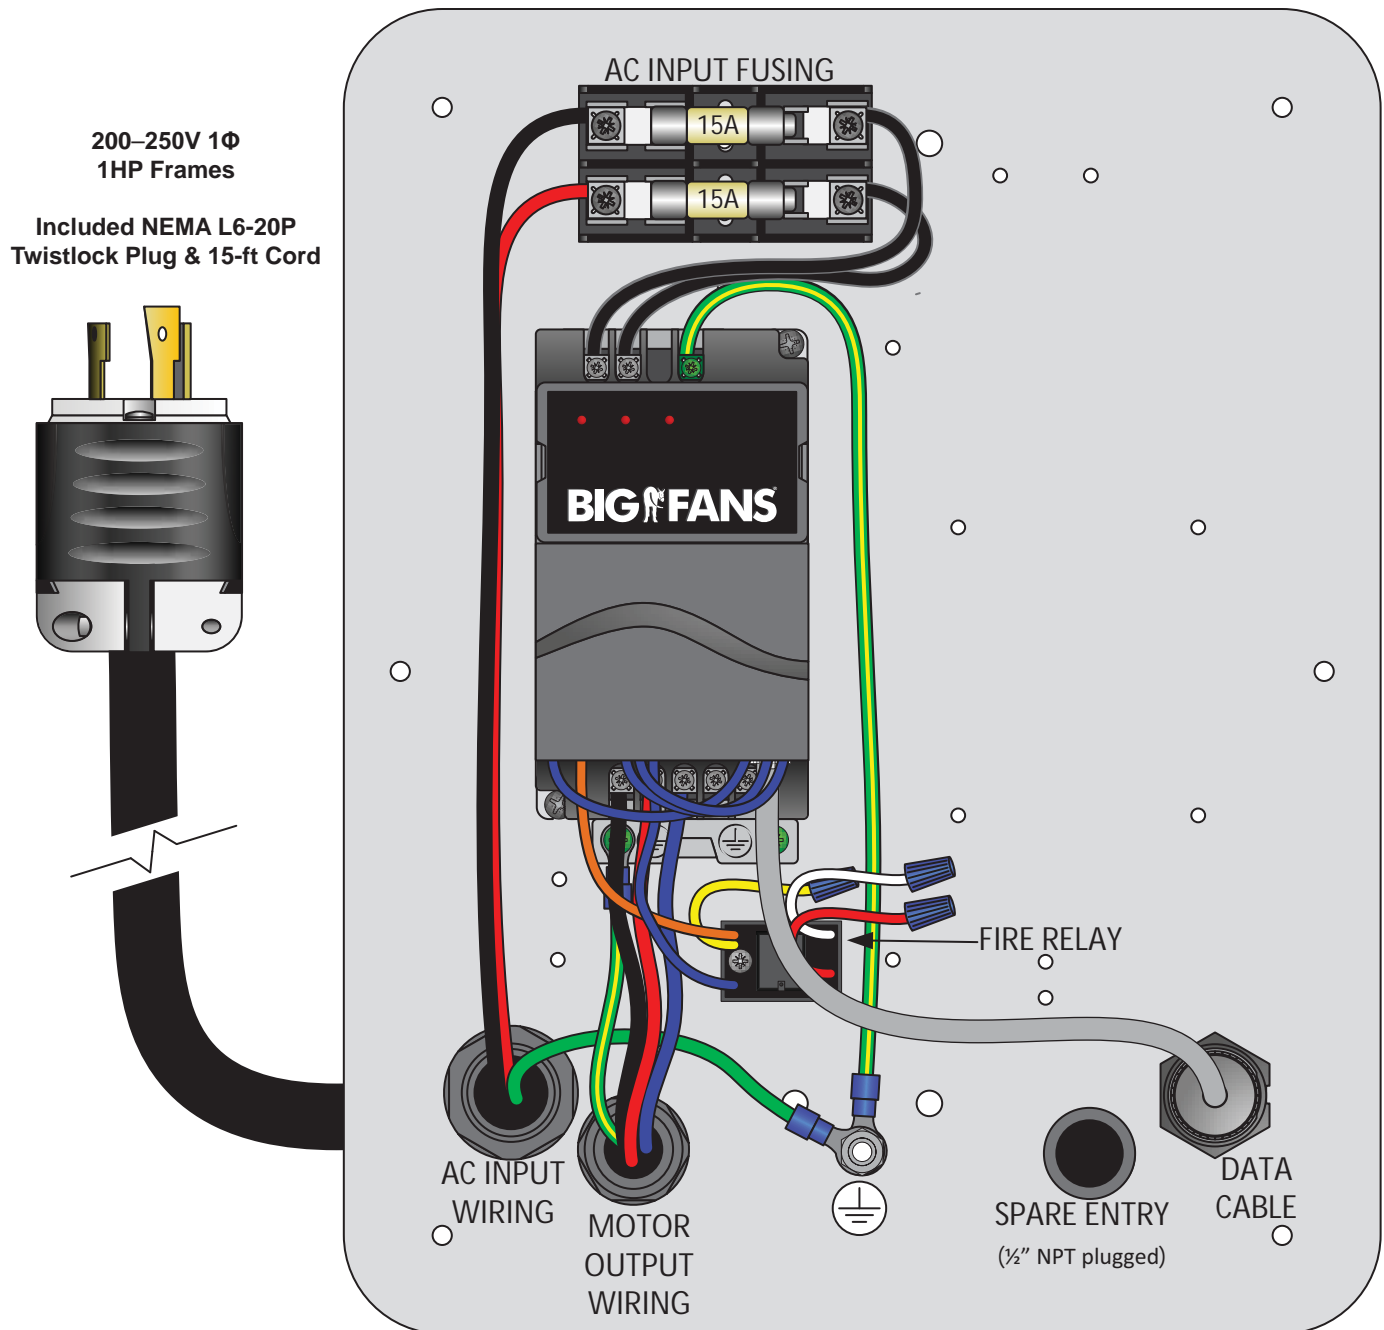


34

Electrical Installation (cont.)

Wiring: Fan controller (200V–250V 1Φ, 2 HP)

- ⚠ **WARNING:** Wait three minutes after disconnecting before servicing!
- ⚠ **WARNING:** Improper installation can cause electric shock or damage to the motor and controller! A qualified electrician should perform the installation.
- ⚠ **AVERTISSEMENT :** Attendez trois minutes après avoir débranché avant d'utiliser le regulateur !
- ⚠ **AVERTISSEMENT :** Une installation incorrecte peut provoquer un choc électrique ou endommager le moteur et le régulateur! Un électricien qualifié doit effectuer l'installation.


The diagram below shows a standard fan controller (200V–250V 1Φ, 2HP) using single-phase input from AC power supply. See "About This Fan" on pp. 2–3 for detailed voltage and current information. See page 32 for circuit breaker/fuse requirements.

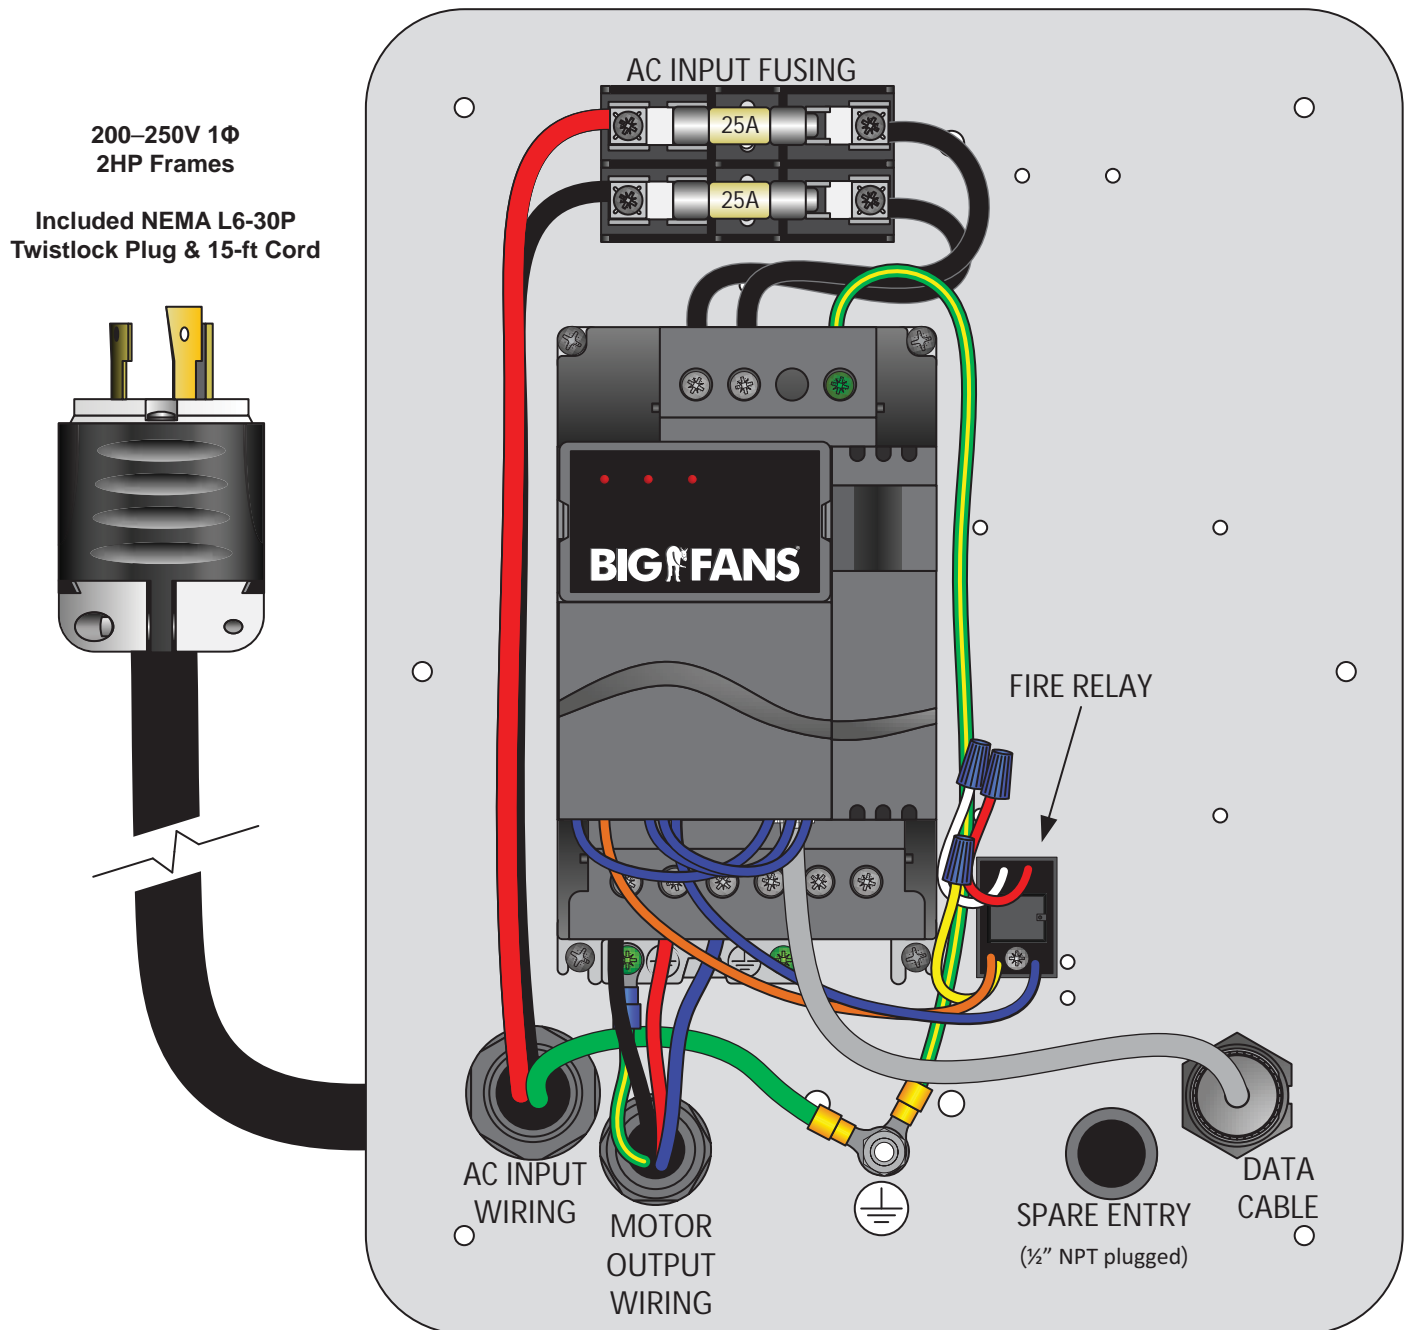

Wiring: Fan controller (200V–250V 3Φ, 1HP and 2HP)

- ⚠ **WARNING:** Wait three minutes after disconnecting before servicing!
- ⚠ **WARNING:** Improper installation can cause electric shock or damage to the motor and controller! A qualified electrician should perform the installation.
- ⚠ **AVERTISSEMENT :** Attendez trois minutes après avoir débranché avant d'utiliser le regulateur !
- ⚠ **AVERTISSEMENT :** Une installation incorrecte peut provoquer un choc électrique ou endommager le moteur et le régulateur! Un électricien qualifié doit effectuer l'installation.


The diagram below shows a standard fan controller (200V–250V 3Φ, 1HP and 2HP) using three-phase input from AC power supply. See "About This Fan" on pp. 2–3 for detailed voltage and current information. See page 32 for circuit breaker/fuse requirements.

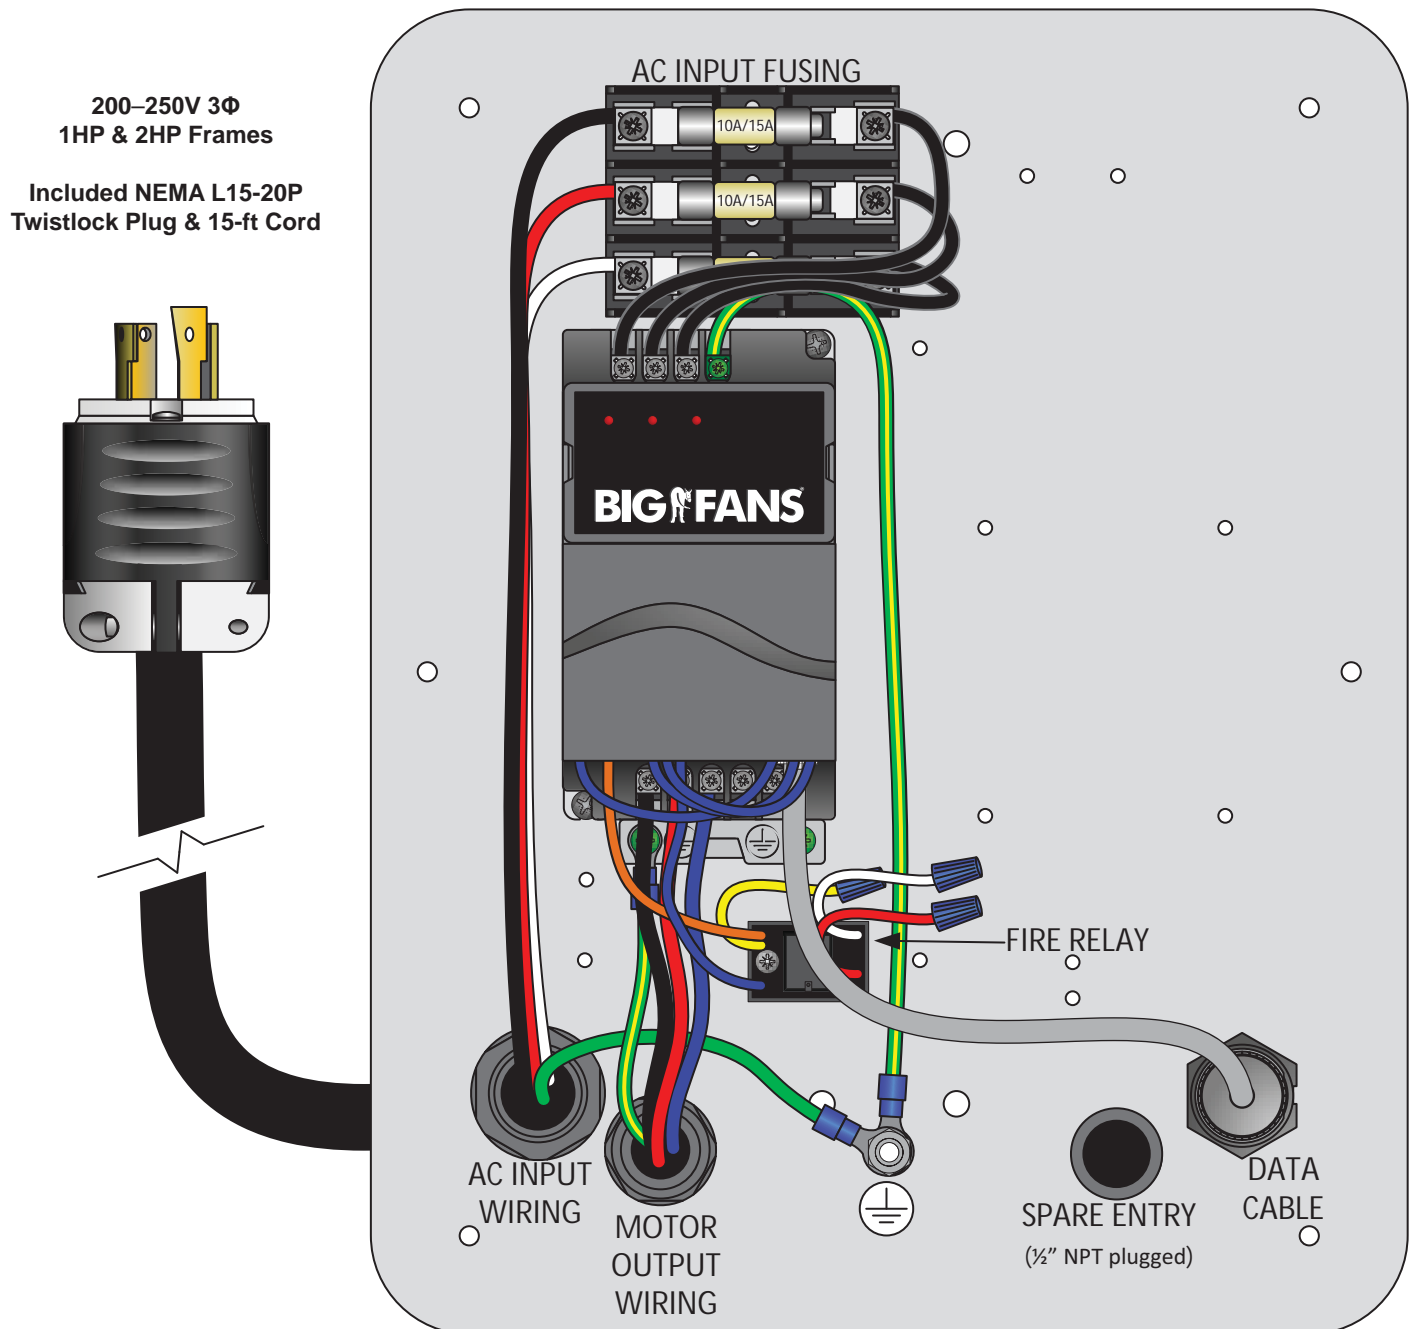

Wiring: Fan controller (400V–480V 3Φ, 1 HP and 2 HP)

- ⚠ **WARNING:** Wait three minutes after disconnecting before servicing!
- ⚠ **WARNING:** Improper installation can cause electric shock or damage to the motor and controller! A qualified electrician should perform the installation.
- ⚠ **AVERTISSEMENT :** Attendez trois minutes après avoir débranché avant d'utiliser le regulateur !
- ⚠ **AVERTISSEMENT :** Une installation incorrecte peut provoquer un choc électrique ou endommager le moteur et le régulateur! Un électricien qualifié doit effectuer l'installation.

The diagram below shows a standard fan controller (400V–480V 3Φ, 1HP and 2HP) using three-phase input from AC power supply. See "About This Fan" on pp. 2–3 for detailed voltage and current information. See page 32 for circuit breaker/fuse requirements.

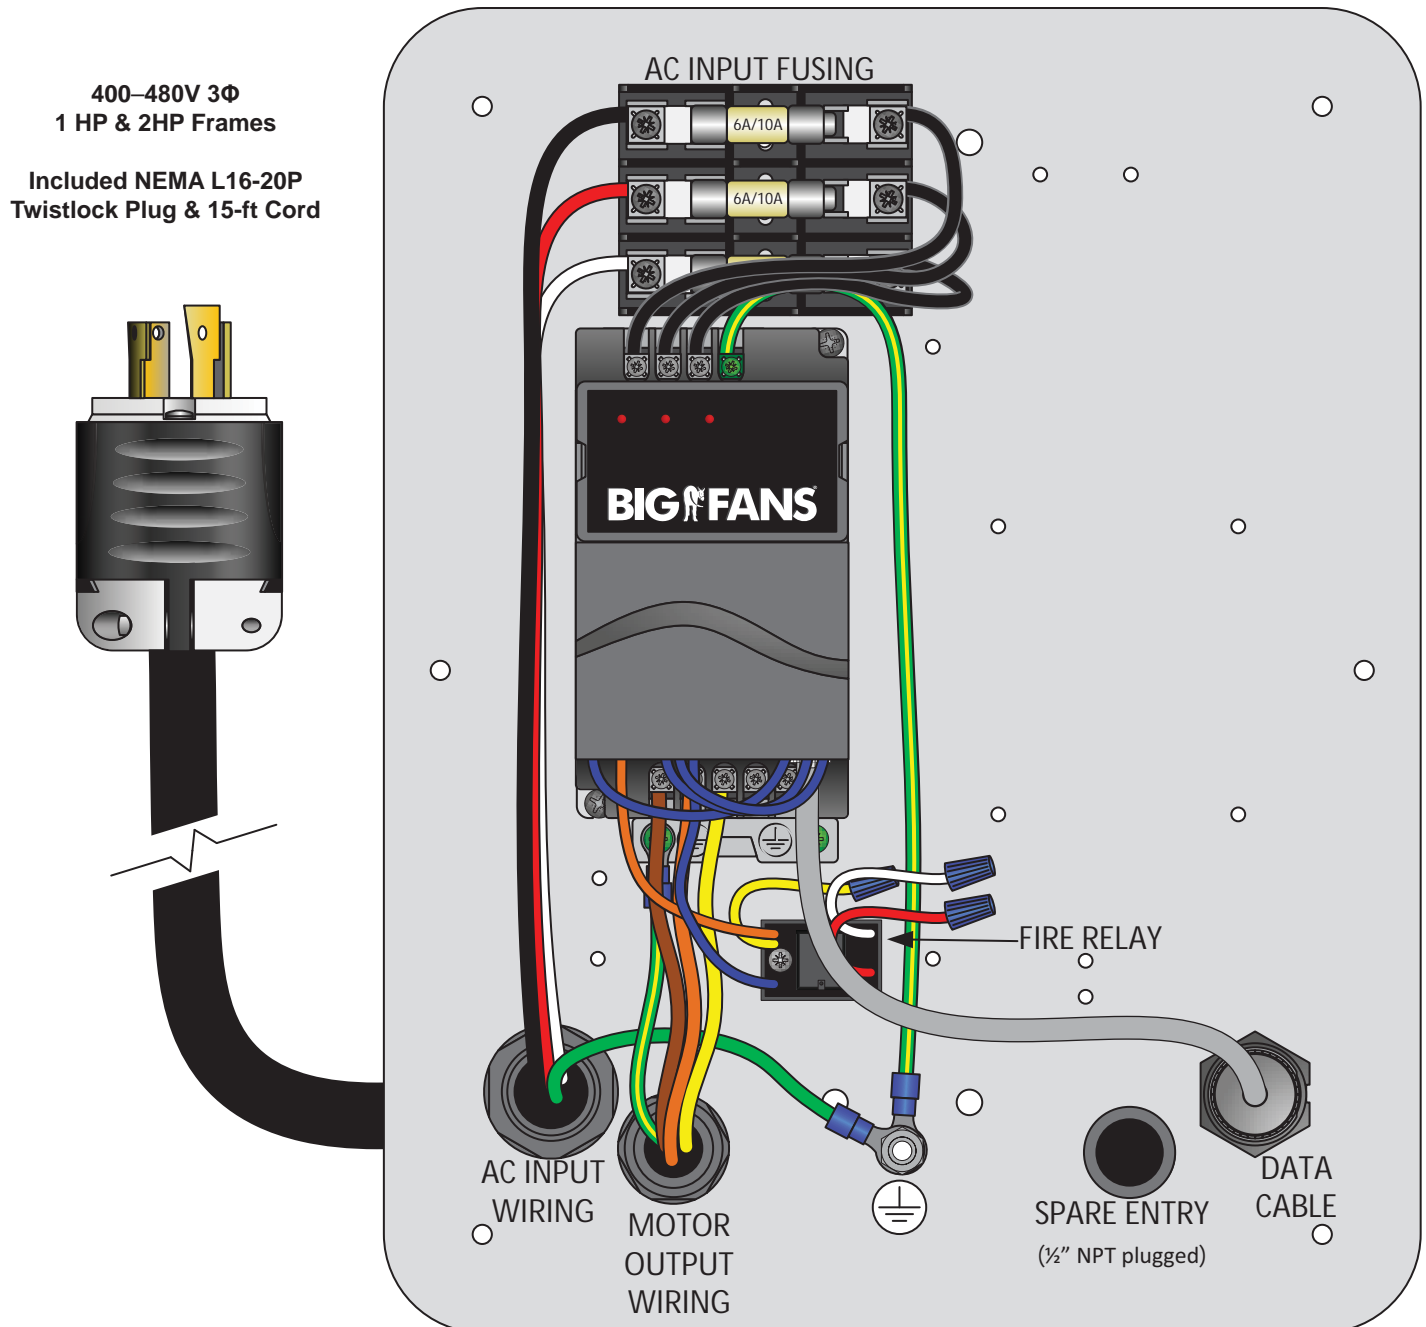


Wiring: Fan controller (575V–600V 3Φ, 1HP and 2HP)

- ⚠ **WARNING:** Wait three minutes after disconnecting before servicing!
- ⚠ **WARNING:** Improper installation can cause electric shock or damage to the motor and controller! A qualified electrician should perform the installation.
- ⚠ **AVERTISSEMENT :** Attendez trois minutes après avoir débranché avant d'utiliser le regulateur !
- ⚠ **AVERTISSEMENT :** Une installation incorrecte peut provoquer un choc électrique ou endommager le moteur et le régulateur! Un électricien qualifié doit effectuer l'installation.

The diagram below shows a standard fan controller (575V–600V 3Φ, 1HP and 2HP) using three-phase input from AC power supply. See "About This Fan" on pp. 2–3 for detailed voltage and current information. See page 32 for circuit breaker/fuse requirements.

Note: When installing Powerfoil®X2.0 fans in Canada, to avoid damage to the motor, customers with 600VAC distribution must consider utilizing 200–240VAC rated fans and controllers on their low voltage power distribution (if they have room for the additional circuits).


The motors used for PowerfoilX2.0 fans are rated per NEMA MG1 standards, which states that the motor insulation must withstand 1,600VPEAK–PEAK. 575–600VAC applications will exceed the safe voltage level of the motor insulation system, resulting in a motor insulation breakdown and subsequent motor failure.

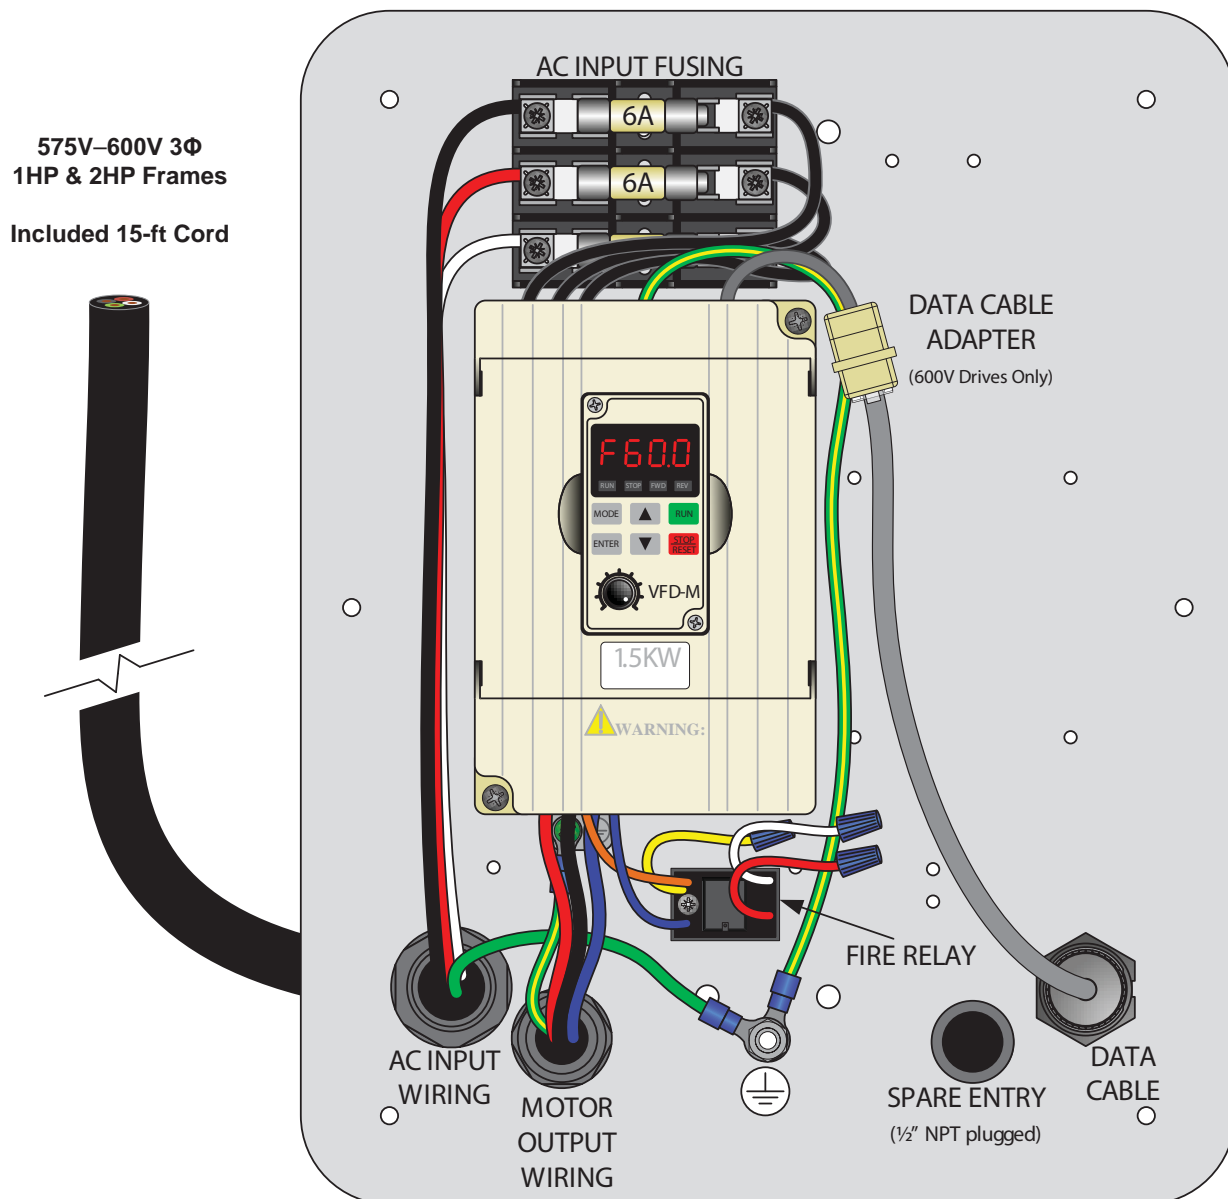

Wiring: Fan controller with EMI/RFI filter

- ⚠ **WARNING:** Wait three minutes after disconnecting before servicing!
- ⚠ **WARNING:** Improper installation can cause electric shock or damage to the motor and controller! A qualified electrician should perform the installation.
- ⚠ **AVERTISSEMENT :** Attendez trois minutes après avoir débranché avant d'utiliser le regulateur !
- ⚠ **AVERTISSEMENT :** Une installation incorrecte peut provoquer un choc électrique ou endommager le moteur et le régulateur! Un électricien qualifié doit effectuer l'installation.


The diagram below shows a typical EMI/RFI installation. See "About This Fan" on pp. 2-3 for detailed voltage and current information. See page 32 for circuit breaker/fuse requirements.

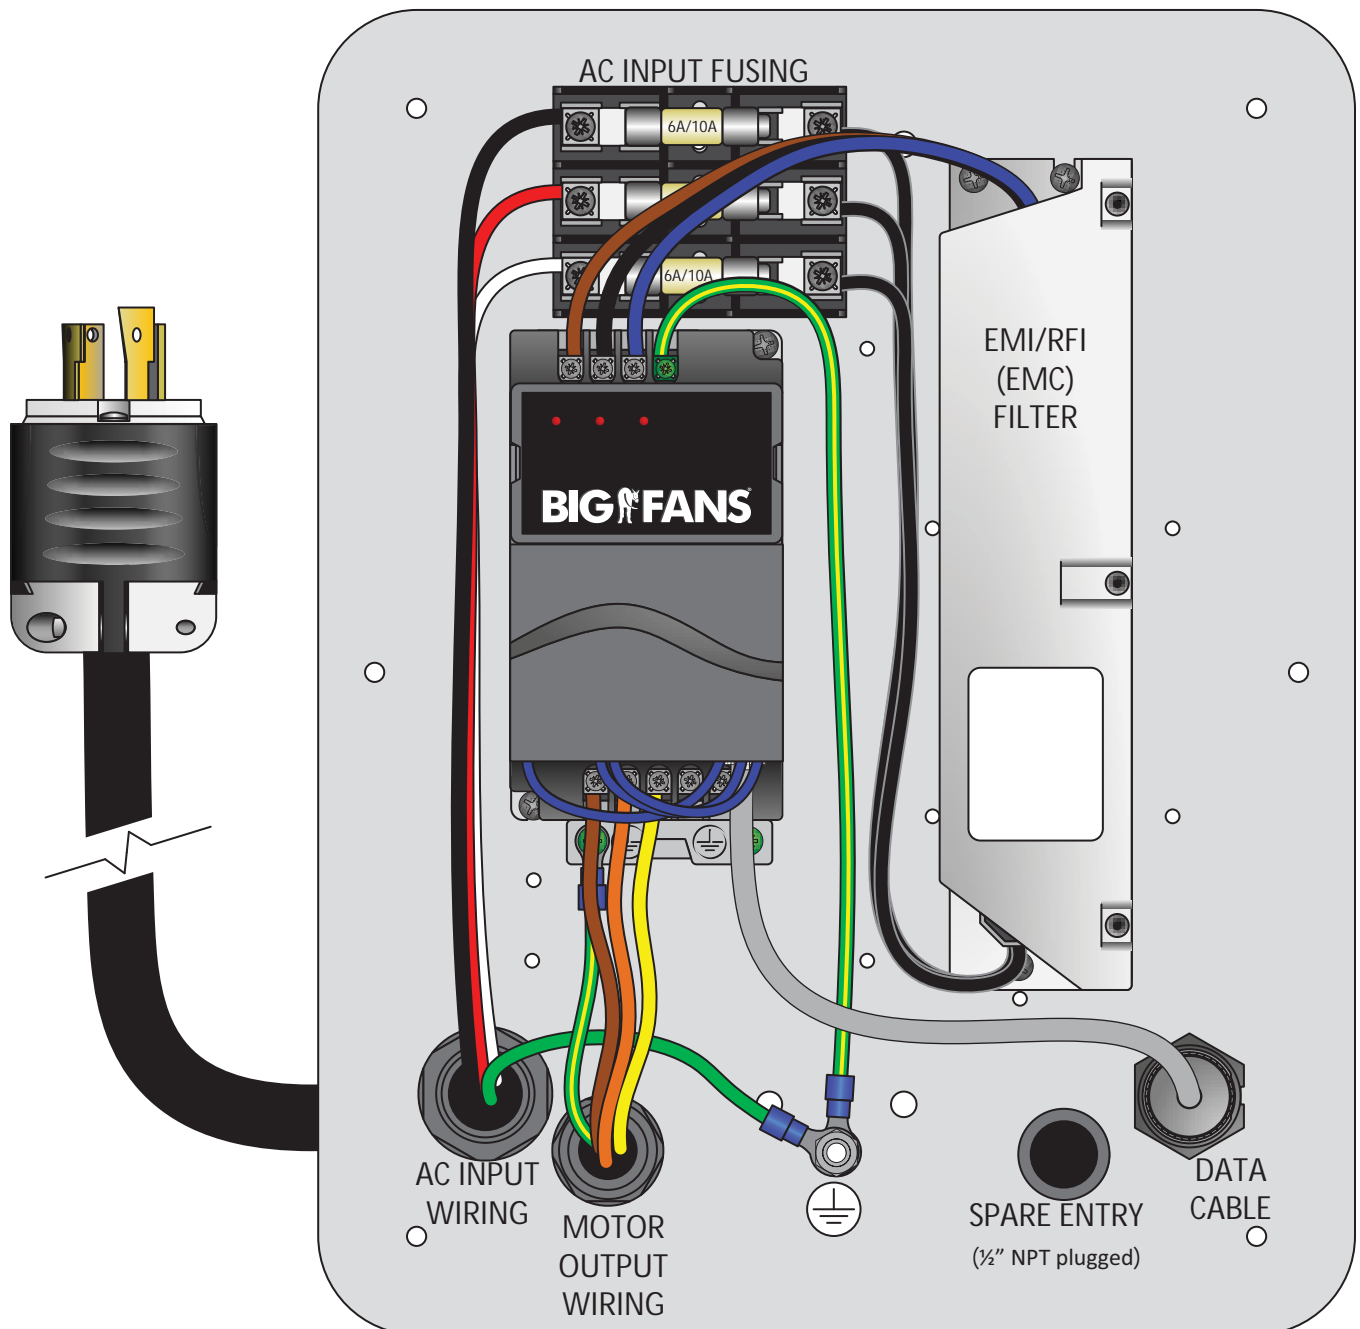

Wiring: Fan controller with line reactor

- ⚠ **WARNING:** Wait three minutes after disconnecting before servicing!
- ⚠ **WARNING:** Improper installation can cause electric shock or damage to the motor and controller! A qualified electrician should perform the installation.
- ⚠ **AVERTISSEMENT :** Attendez trois minutes après avoir débranché avant d'utiliser le regulateur !
- ⚠ **AVERTISSEMENT :** Une installation incorrecte peut provoquer un choc électrique ou endommager le moteur et le régulateur! Un électricien qualifié doit effectuer l'installation.

The diagram below shows a typical line reactor installation on a standard fan controller. See "About This Fan" on pp. 2-3 for detailed voltage and current information. See page 32 for circuit breaker/fuse requirements.

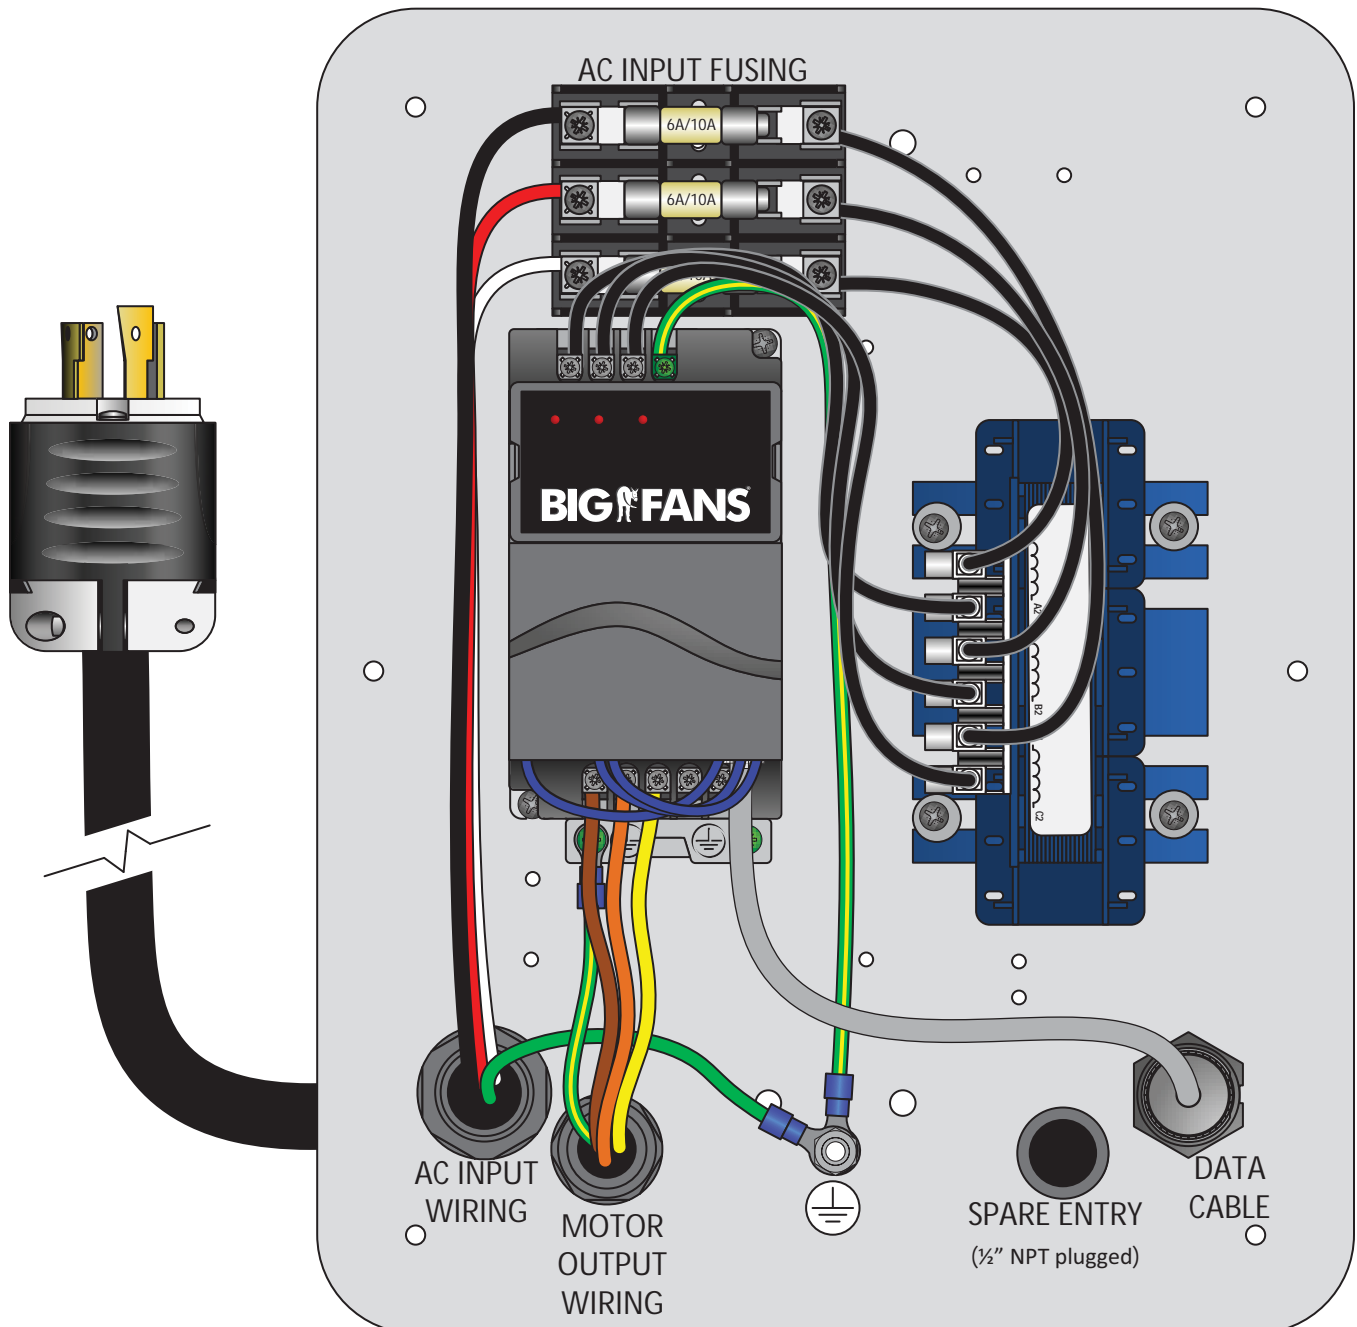

40


Electrical Installation (cont.)

Daisy chaining

The Powerfoil®X2.0 fan is preprogrammed to operate in Master/Slave or Daisy Chain mode. Starting, stopping, and speed control signals are transmitted by the master fan controller to remaining slaved fans via 0–10 VDC analog outputs. The wall controller for the slaved fans remains active as a display so that the operator can still view any fault messages, toggle between output frequency and fan RPM displays, or operate the fan via the LOCAL/REM button.




The LOCAL/REM button toggles the fan's command sources between the wall controller (LOC LED illuminated) and external sources (REM LED illuminated). In a daisy chained installation, the master fan controller will operate via the wall controller (local mode), and the Slaved fan controller(s) will operate via the 0–10 VDC command reference provided by the master fan controller (REM mode). *Note: To access the LOCAL/REM button, the controller's button cover must be removed (if used).*

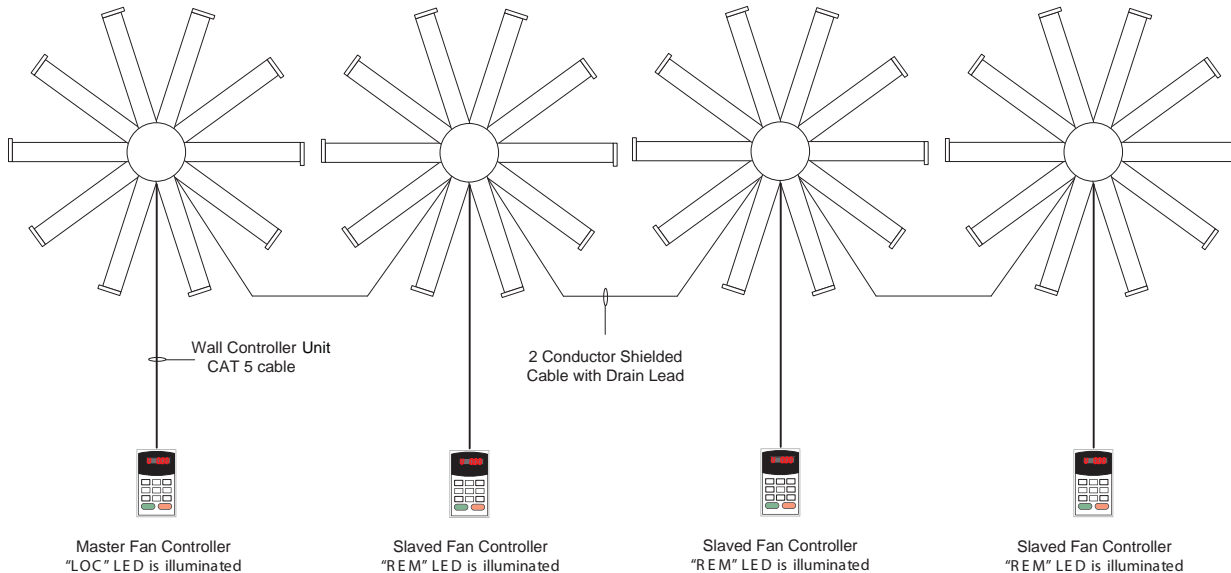

In the example above, the first controller is the master controller (local mode). The remaining fans (REM mode), when connected with a two-conductor shielded cable, will follow command references provided by the master controller. See the following page for detailed wiring diagrams. Limit two-conductor shielded cable runs to 200 ft (61 m) or less. Consult Big Ass Fans Customer Service Department at 1-877-BIG-FANS for conversion to 4–20 mA current loop.



System redundancy

If one of the fans in the chain is disabled, the next fan controller in the chain can become the master controller for all remaining fans by pressing the LOCAL/REM button on that fan's wall controller.

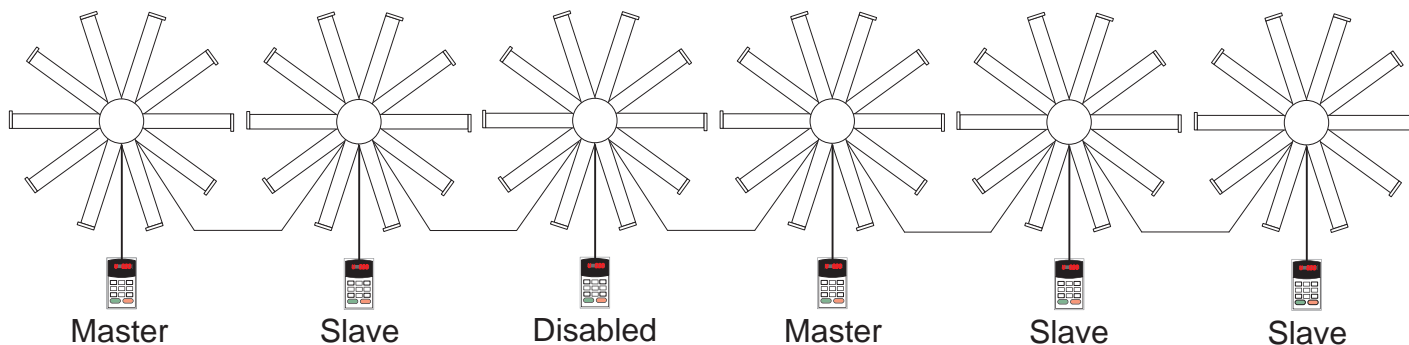


Daisy chaining (cont.)

Reverse fan rotation is disabled when the fan is operated as a slaved unit. *Note: To access all buttons on the controller, the controller's button cover must be removed (if used).*

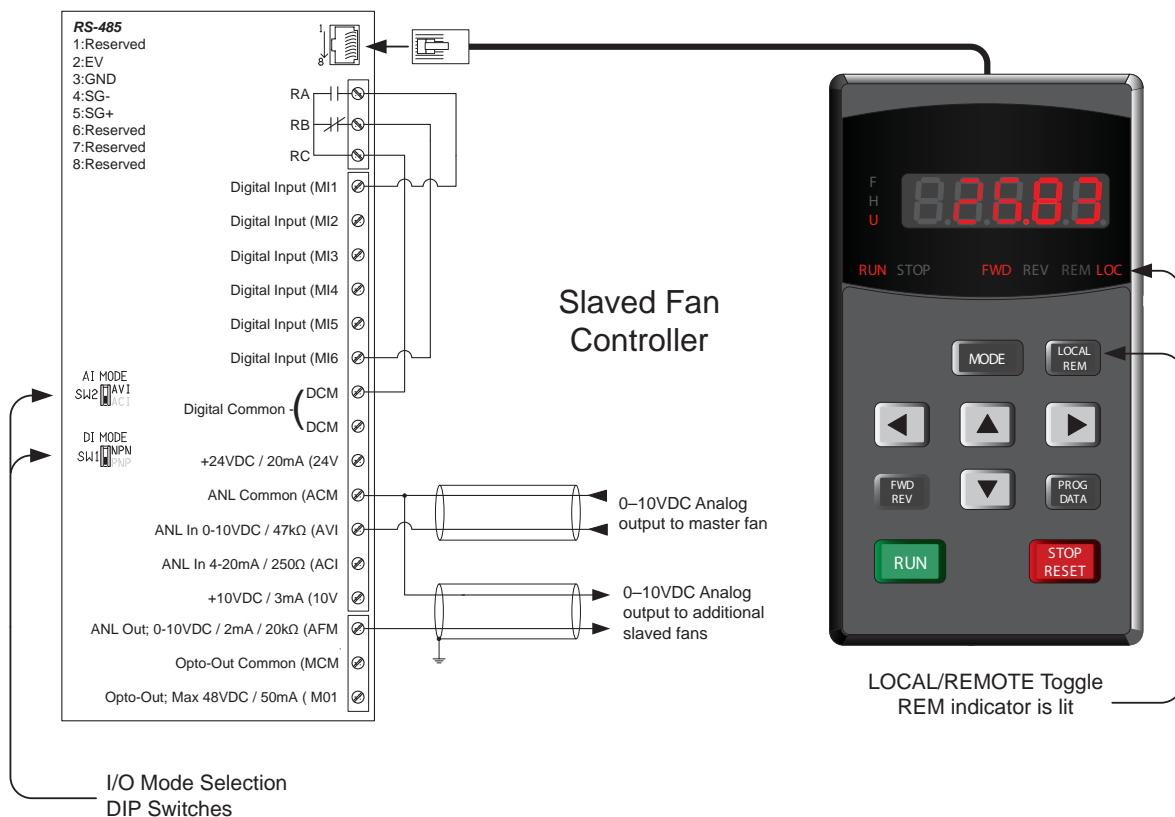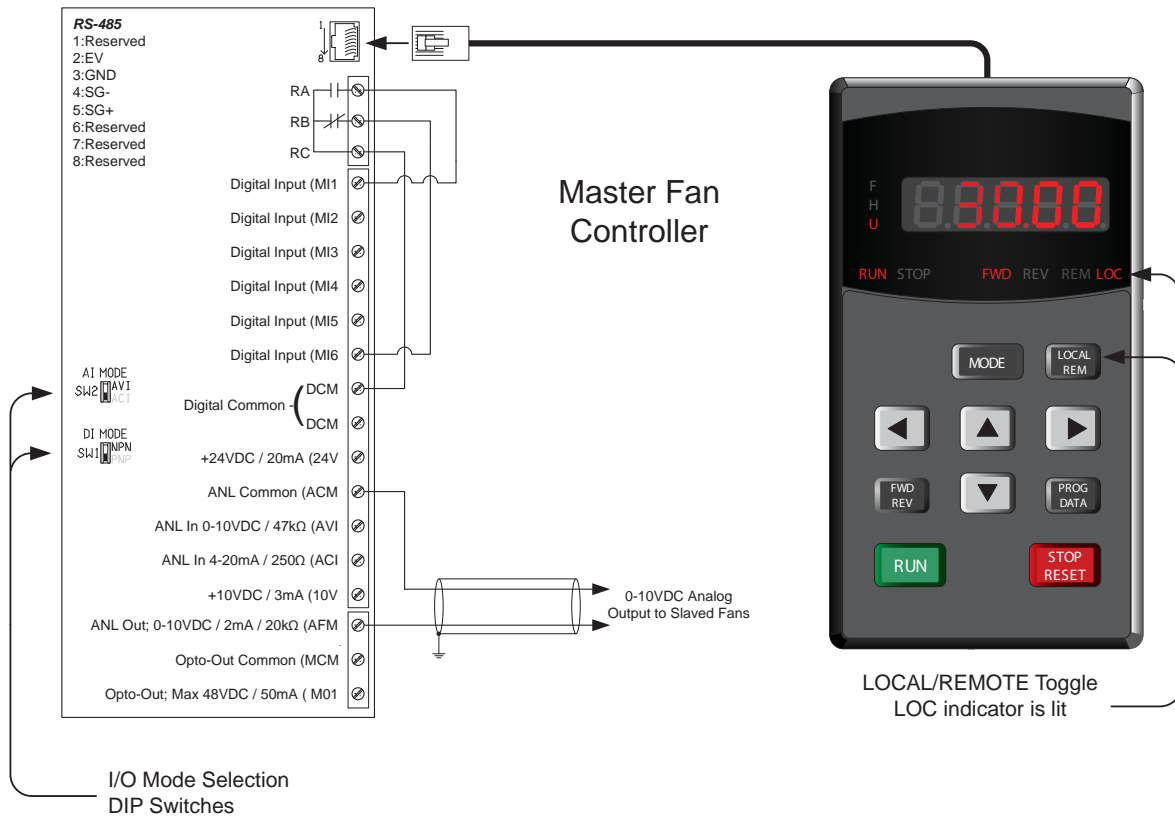

Basic Distributed I/O Interface; LOCAL Control

Note: RA to Digital Input #1 jumper removed.

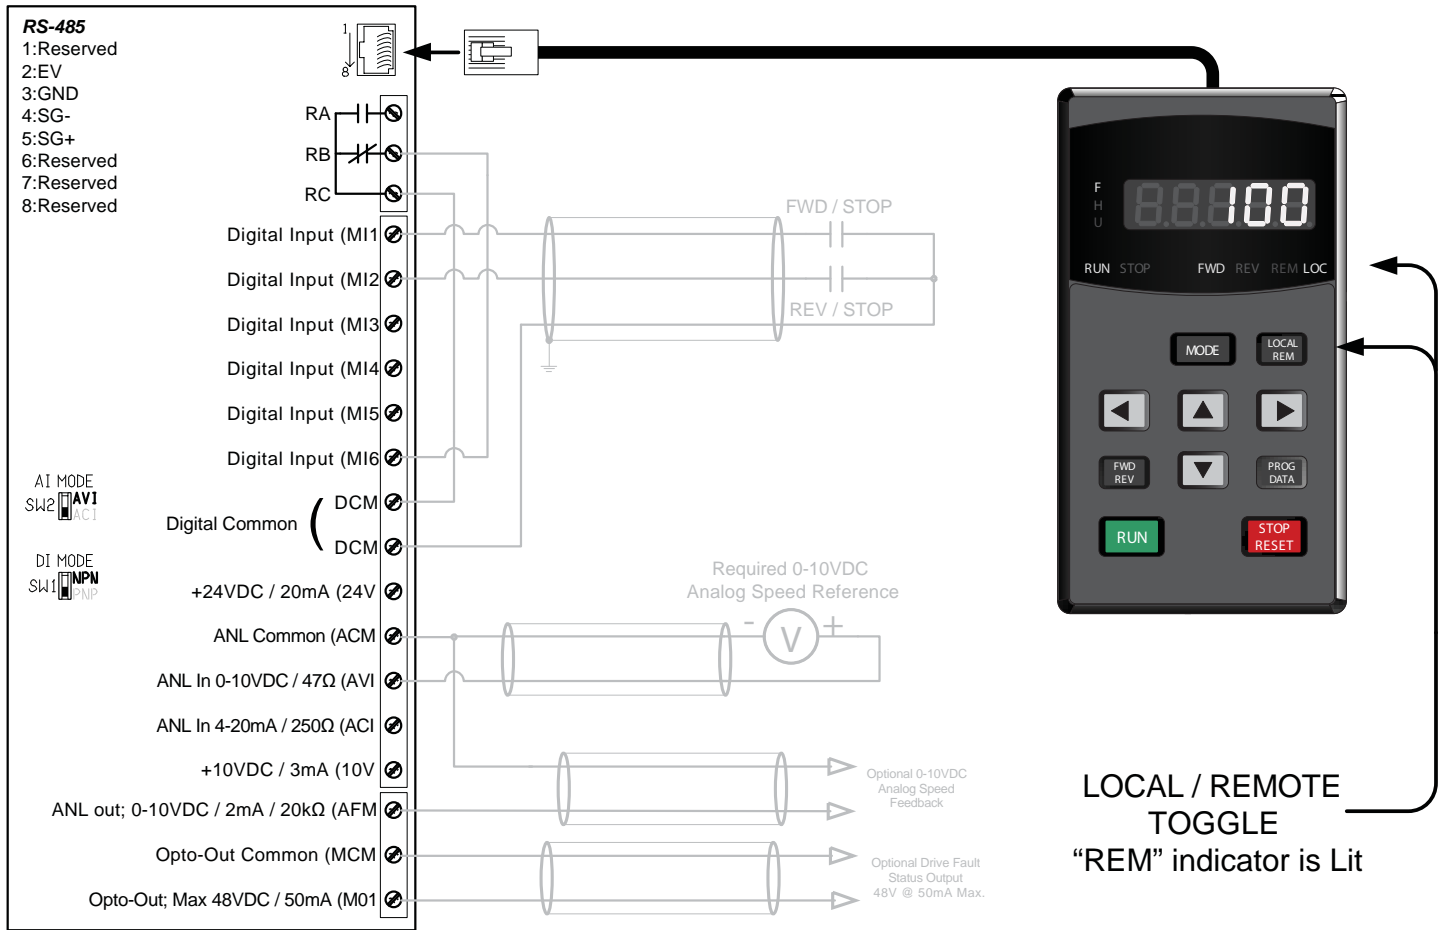


The Powerfoil® X2.0 fan is programmed to be controlled via the included wall controller, which starts, stops, and performs speed control duties for the fan. Fault messages and toggling between output frequency and fan RPM displays are also controlled by the wall controller. This mode of operation is commonly referred to as “local control.”

***For the wall control unit to be active, the LOC indicator light must be illuminated by pressing the LOCAL/REM button.**

Basic Distributed I/O Interface; EXTERNAL Control

Note: RA to Digital Input #1 jumper removed.

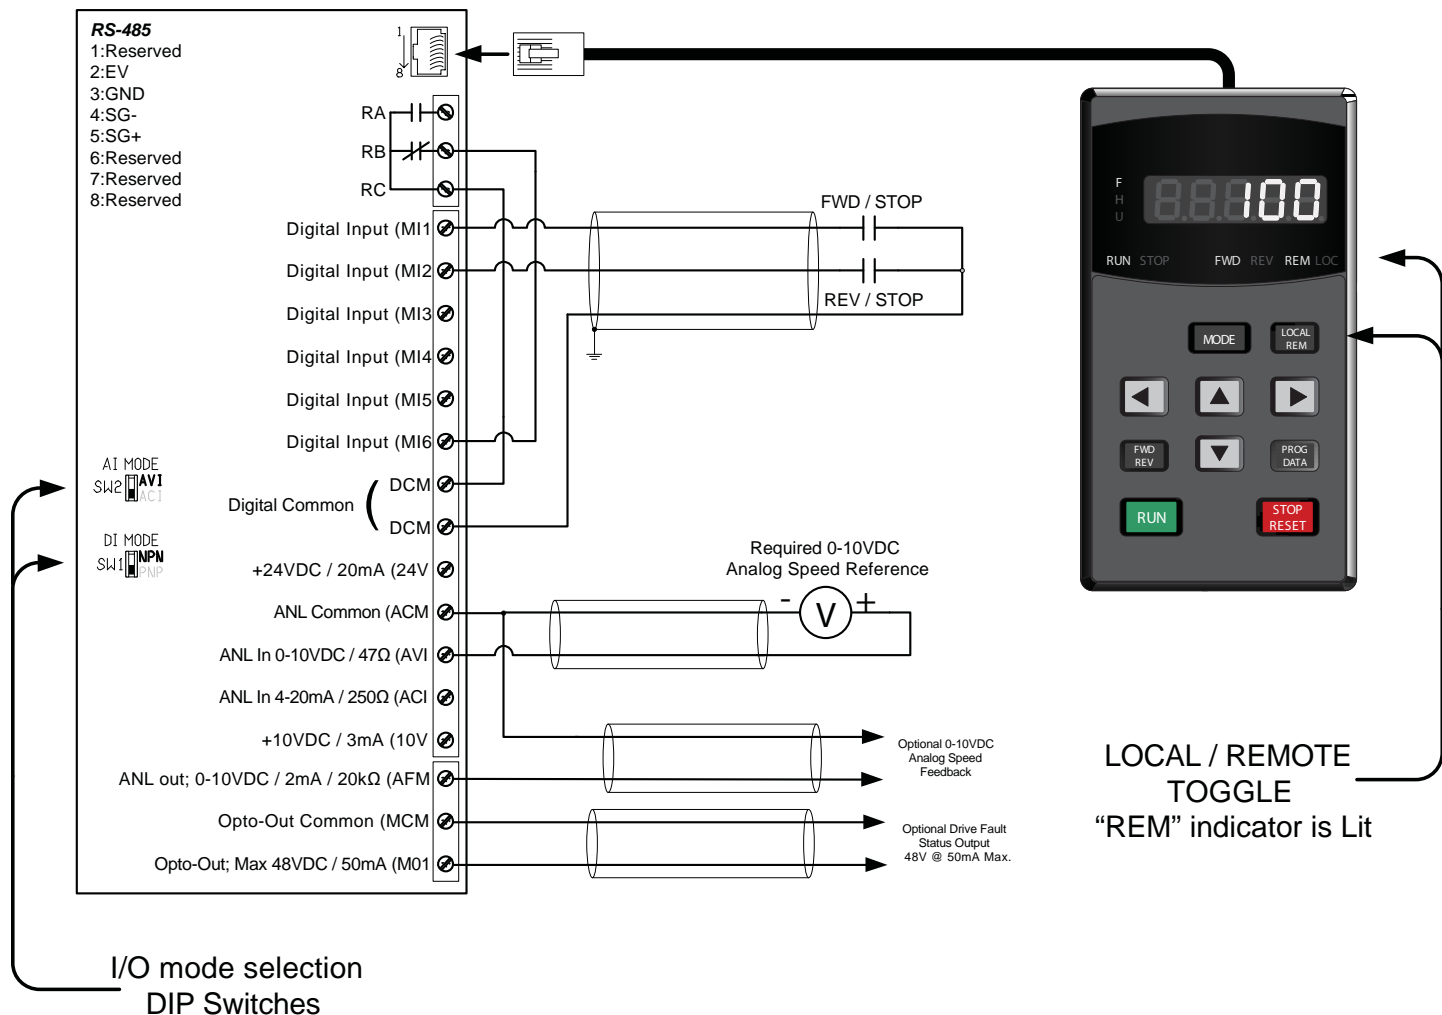

The Powerfoil® X2.0 fan is also programmed to be controlled by an Energy Management System or Building Automation System. Starting, stopping, and speed control duties are handled by the distributed I/O (2 N.O. contacts, 1 analog) provided by the installer. The wall controller remains active as a display so that fault messages can still be viewed, and toggling between output frequency and fan RPM displays can still be performed. This mode of operation is commonly referred to as “external control.”

***For distributed I/O to be active, the REM indicator light must be illuminated by pressing the LOCAL/REM button as shown above.**

About I/O Mode Selection

Big Ass Fans factory defaults for analog and digital inputs are ACI (4-20 mA) and NPN (inputs pulled down to DC Common). If required, these may be switched to AVI (0-10 VDC as shown above) and PNP (inputs pulled up to 24 VDC) via the dip switches shown above. If required, a diagram can be provided to reflect these alternate connection schemes.

Wiring: Fire signal relay (E series)

ATTENTION: If installing the fan in the United States, the fan must be installed per the following National Fire Protection Association (NFPA) guidelines:


- The fan must be centered approximately between four adjacent sprinklers.
- The vertical distance from the fan to the sprinkler deflector must be at least 3 ft (91.4 cm).
- The fan must be interlocked to shut down immediately upon receiving a waterflow signal from the alarm system.

ATTENTION : Le ventilateur doit être installé selon les directives de la National Fire Protection Association (NFPA) suivants :

- Le ventilateur doit être centré approximativement entre quatre gicleurs adjacents.
- The vertical distance from the fan to the sprinkler deflector must be at least 3 ft (91.4 cm).
- Le ventilateur doit être enclenché pour fermer immédiatement à la réception d'un signal de débit de l'eau provenant du système d'alarme.

The fire relay included with the fan is needed only if the fan will be installed in a building that has a fire sprinkler system. The fire relay integrates the fan with the sprinkler system and shuts down the fan upon receiving an alarm signal from the system. If the building in which the fan will be installed has a sprinkler system, you must install the relay according to the instructions below.

From main FACP or NAC box (if applicable)

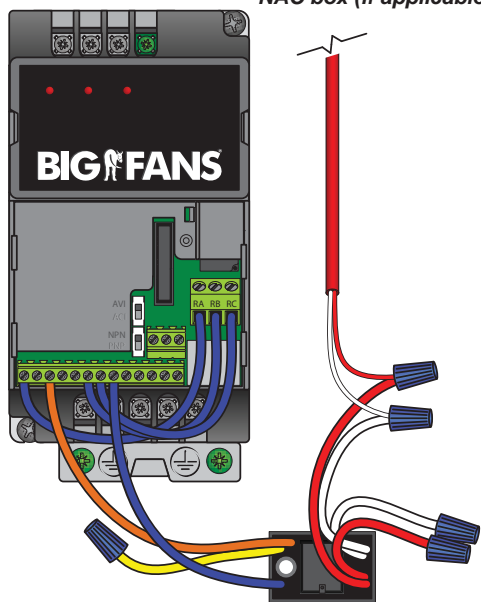

An alarm condition will stop the fan and issue an "EF," External Fault, at the fan controller's wall controller.


A contact closure across digital input terminals MI3 and DCM will result in fan shutdown. The relay uses a Normally Open (N.O.) contact as shown. The relay coil must be energized by the FACP for fan shutdown.

Two additional relay coil leads are provided to facilitate supervision pass-through where required.

White(X2)- (-)	C	-Blue
	NC	-Yellow
Red(X2)- (+)	NO	-Orange

Coil: 20-32VDC @ 20mA

From main FACP or NAC box (if applicable)

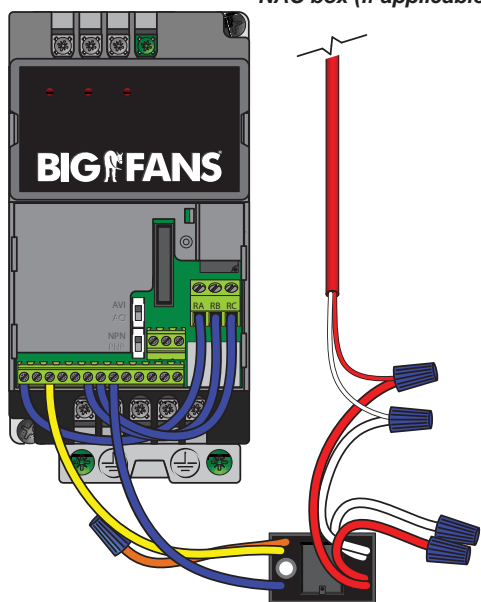

An alarm condition will stop the fan and issue an "EF," External Fault, at the fan controller's wall controller.

Optionally, the relay can be used with a Normally Closed (N.C.) contact as shown. The relay coil must remain energized by the FACP for fan operation. This would be considered a fail safe or fail open wiring arrangement.

Two additional relay coil leads are provided to facilitate supervision pass-through where required.

White(X2)- (-)	C	-Blue
	NC	-Yellow
Red(X2)- (+)	NO	-Orange

Coil: 20-32VDC @ 20mA

Wiring: Fire signal relay (M series)


ATTENTION: If installing the fan in the United States, the fan must be installed per the following National Fire Protection Association (NFPA) guidelines:

- The fan must be centered approximately between four adjacent sprinklers.
- The vertical distance from the fan to the sprinkler deflector must be at least 3 ft (91.4 cm).
- The fan must be interlocked to shut down immediately upon receiving a waterflow signal from the alarm system.

ATTENTION : Le ventilateur doit être installé selon les directives de la National Fire Protection Association (NFPA) suivants :

- Le ventilateur doit être centré approximativement entre quatre gicleurs adjacents.
- The vertical distance from the fan to the sprinkler deflector must be at least 3 ft (91.4 cm).
- Le ventilateur doit être enclenché pour fermer immédiatement à la réception d'un signal de débit de l'eau provenant du système d'alarme.

The fire relay included with the fan is needed only if the fan will be installed in a building that has a fire sprinkler system. The fire relay integrates the fan with the sprinkler system and shuts down the fan upon receiving an alarm signal from the system. If the building in which the fan will be installed has a sprinkler system, you must install the relay according to the instructions below.

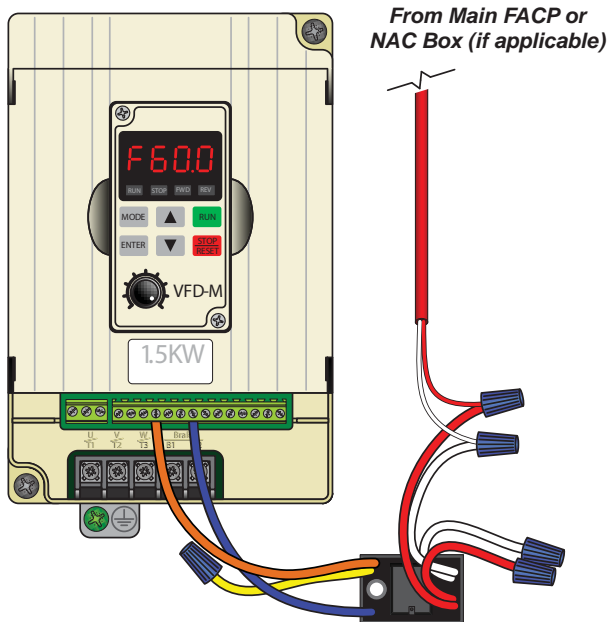


An alarm condition will stop the fan and issue an "EF," External Fault, at the fan controller's wall controller.

A contact closure across digital input terminals M3 and GND will result in fan shut down. The relay uses a Normally Open (N.O.) contact as shown. The relay coil must be energized by the FACP for fan shutdown.

Two additional relay coil leads are provided to facilitate supervision pass-through where required.

White(X2)- (-)	C	-Blue
	NC	-Yellow
Red(X2)- (+)	NO	-Orange

Coil: 20-32VDC @ 20mA

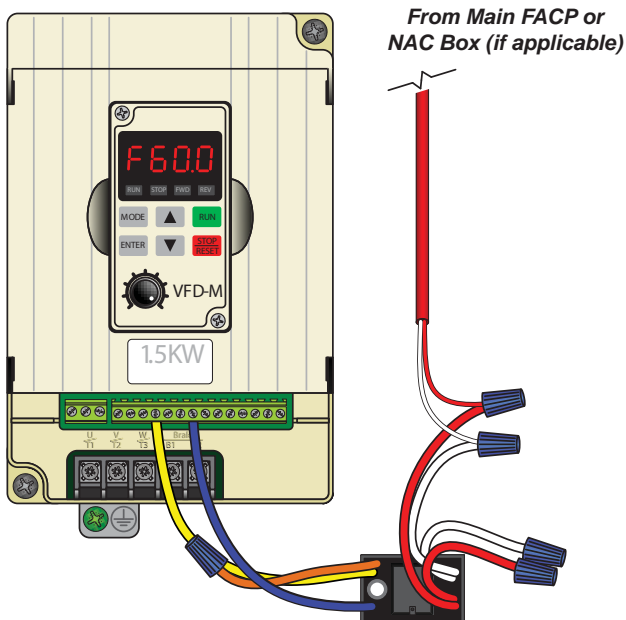

An alarm condition will stop the fan and issue an "EF," External Fault, at the fan controller's wall controller.

Optionally, the relay can be used with a Normally Closed (N.C.) contact as shown. The relay coil must remain energized by the FACP for fan operation. This would be considered a fail safe or fail open wiring arrangement.

Two additional relay coil leads are provided to facilitate supervision pass-through where required.


White(X2)- (-)	C	-Blue
	NC	-Yellow
Red(X2)- (+)	NO	-Orange

Coil: 20-32VDC @ 20mA

46

Electrical Installation (cont.)

Interfacing with basic timers, thermostats, and other equipment

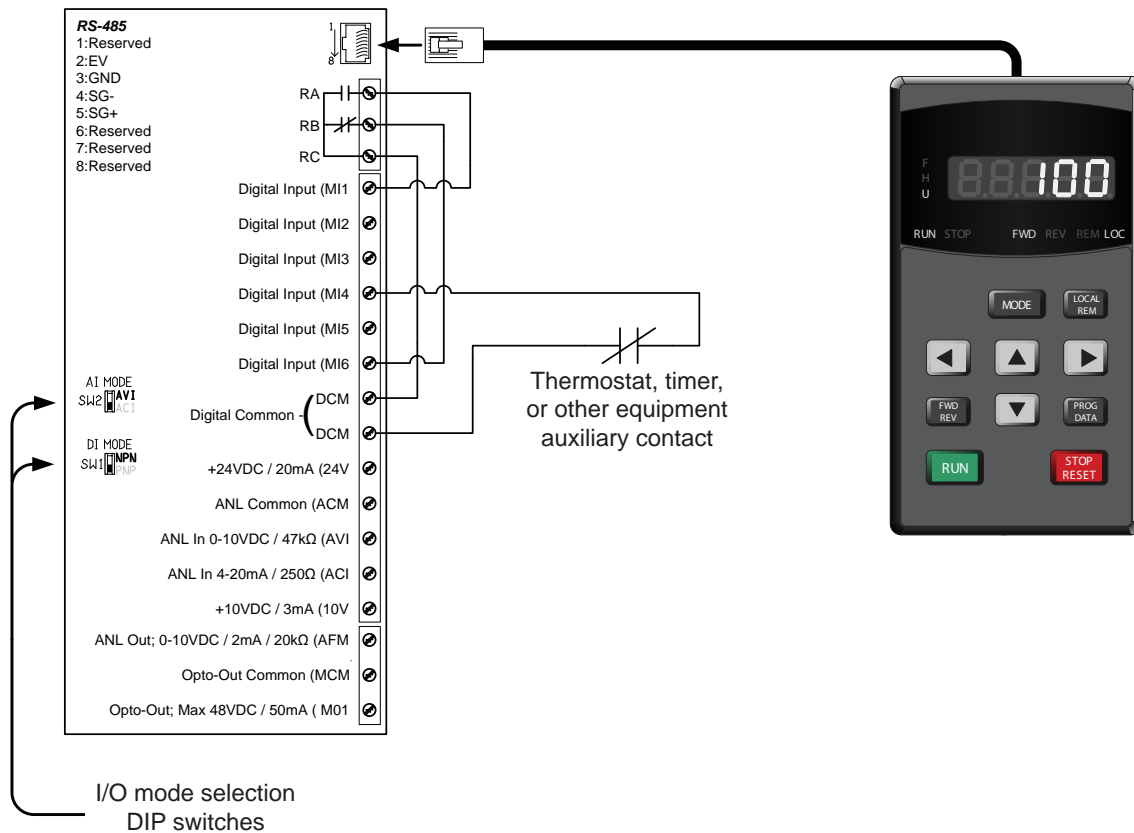

When a contact closure is seen across Digital Input #4 (MI4) and DC Common (DCM), the fan is pre-programmed to issue a base-block code and initiate fan shutdown. This is essentially turning off the fan controller's output terminals, while leaving the fan controller in Run mode.

Auxiliary contacts can be associated with basic timers and thermostats, as well as equipment such as overhead cranes, in order to initiate fan shutdown simultaneously with equipment shutdown when contact closure is seen.

After the auxiliary contact has reopened, the fan will return to its previous operating mode.

Wall Controller Operation

Upon initial power-up of the fan, the wall controller display appears as shown on the right. The wall controller is programmed to show the fan's current running speed in RPM on the LED display. The display also indicates if the fan is stopped (STOP), set to run forward (FWD), or is set to respond to a remote control source (REM) such as an Energy Management System or Building Automation System.

Other main LED display modes include Motor Current, Memory Status, Motor Command Frequency, and Motor Actual Frequency. Useful indicators of fan status on the wall controller are RUN/STOP, JOG, FWD/REV direction, and External or Local Control.

To operate the fan from the wall controller, press the LOCAL/REM button to make sure that the LOC indicator is illuminated. The RUN, STOP, and FWD/REV buttons are functional only when the LOC indicator is illuminated. *Note: To access the LOCAL/REM button on the controller, the controller's button cover must be removed (if used).*

For error code definitions and corrective actions, see "Fan Error Codes" on page 58.

Starting, stopping, and direction control

The LOC indicator must be illuminated on the fan controller in order to start, stop, or change the direction of the fan. *Note: The RUN, STOP/RESET, and FWD/REV buttons are disabled while External Automation Control is enabled (REM LED illuminated).*



Note: The controller cover and optional button cover are removed in the above illustration.



To start the fan, press the RUN button on the controller's display. When the RUN button is pressed, the STOP LED extinguishes and the RUN LED illuminates while the fan accelerates to the commanded speed.



To decelerate the fan, press the STOP/RESET button. The RUN LED will flash, indicating that the fan controller has accepted the command, and the STOP LED will illuminate.



Proper fan rotation is initially set at the factory. **To reverse the rotation of the fan**, press the FWD/REV button. The fan does not have to be stopped in order to perform this action. When pressed while the fan is running, the FWD or REV LED will flash (current direction), indicating a pending change in fan direction.

Changing the fan speed

The LOC indicator must be illuminated to adjust fan speed, which can be performed when the fan is stopped or running.



To change the fan speed, press the UP and DOWN arrow buttons. The fan speed can be adjusted regardless of what is visible on the LED display, with the exception of the Memory Read/Write screen. When one of the direction keys is pressed, the current display mode is forced to change to the Fan Freq. Command screen as shown below.


Note: To accelerate this process, press either the LEFT or RIGHT arrow button to select which digit is controlled by the UP and DOWN buttons. Allowing selection of the digit can make changing the fan speed a very fast or very accurate operation. The controller's button cover must be removed (if used) in order to access the LEFT and RIGHT arrow buttons.



Cycling through the LED display modes

MODE

To cycle through the possible display options on the wall controller, press the MODE button repeatedly. Below are the possible screens in the order in which they appear on the display. *Note: To access the MODE button, the controller's button cover must be removed (if used).*

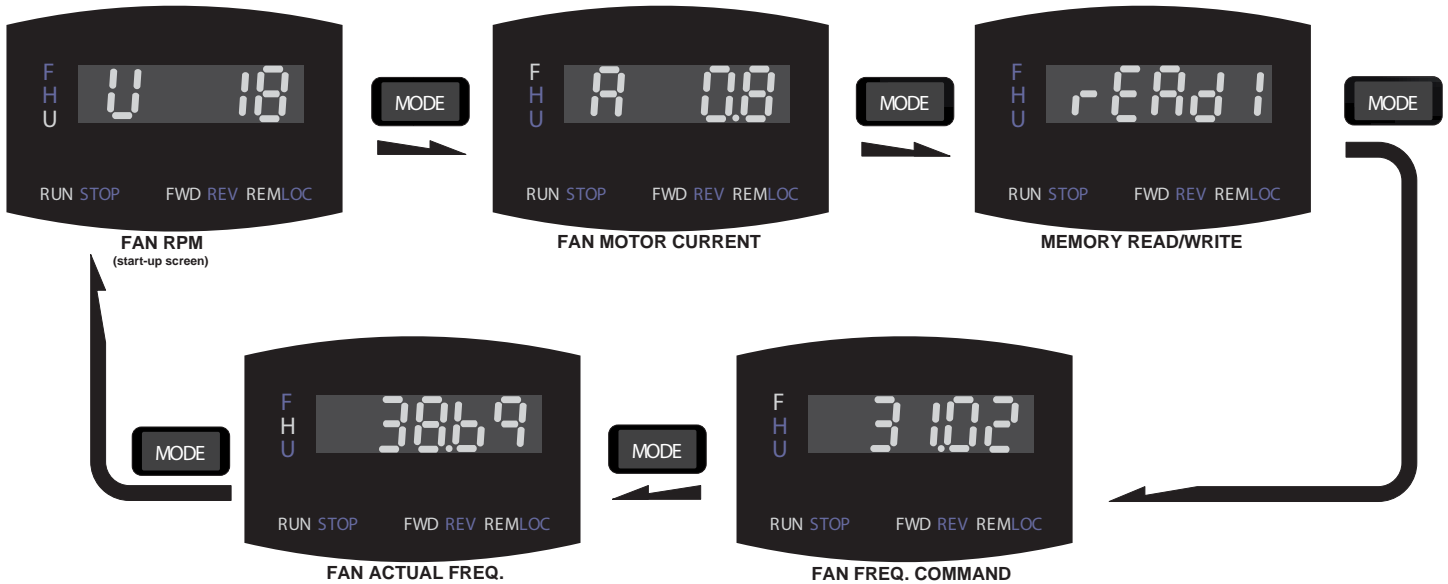


Toggling the fan's command source

LOCAL
REM

To select the fan's command source, press the LOCAL/REM button. The fan controller is preprogrammed to accept digital and analog inputs from customer automation systems for start/stop and speed commands, or to be directly controlled from the wall controller. Upon startup, the fan puts priority on external commands provided by automation systems or other fans. *Note: To access all buttons on the controller, the controller's button cover must be removed (if used).*

To operate the fan from the wall controller, press the LOCAL/REM button to make sure that the LOC indicator is illuminated. The RUN, STOP, and FWD/REV buttons are functional only when the LOC indicator is illuminated. *Note: To access the LOCAL/REM button on the controller, the controller's button cover must be removed (if used).*

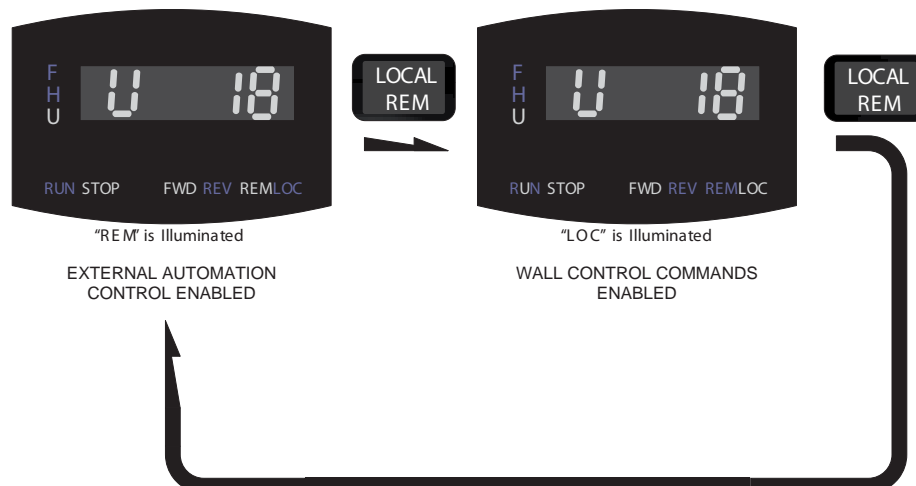

Understanding and clearing fan faults



External faults

EF or “External Fault” is displayed when the fan has stopped due to an alarm condition. EF also displays if the user has interfaced the fan system with other equipment requiring fan shutdown, such as an ESFR system.



Internal faults

All other error codes are considered “Internal faults.” These codes are specific to problems associated with the fan controller or motor. For example, the error code for “input power phase loss” is shown on the left. For a full list of error codes and their meanings, see “Fan Error Codes” on page 58.



To reset the fan controller, press the STOP/RESET button (after the condition that induced the fault has been cleared).

Programming and parameter changes

⚠ CAUTION: Under no circumstances should an operator attempt to alter the programming of the fan’s controller without the assistance of an authorized Big Ass Fans installer, the Big Ass Fans Customer Service Department, or the Big Ass Fans Engineering Department.


⚠ ATTENTION : L’opérateur ne doit tenter en aucun cas de modifier la programmation du régulateur du ventilateur sans l’aide d’un installateur agréé, du service après-vente ou du service technique de la société Big Ass Fans.




To access parameters and make changes to the behavior of the fan system, press the PROG/DATA button. If this button is pushed inadvertently, exit programming mode by pressing the MODE button twice to return to the normal operational screen. *Note: To access the PROG/DATA button on the controller, the controller’s button cover must be removed (if used).*

Locking and unlocking procedures

To lock or unlock the wall controller, follow the chart below. Note: To access the required buttons, the controller's button cover must be removed (if used).

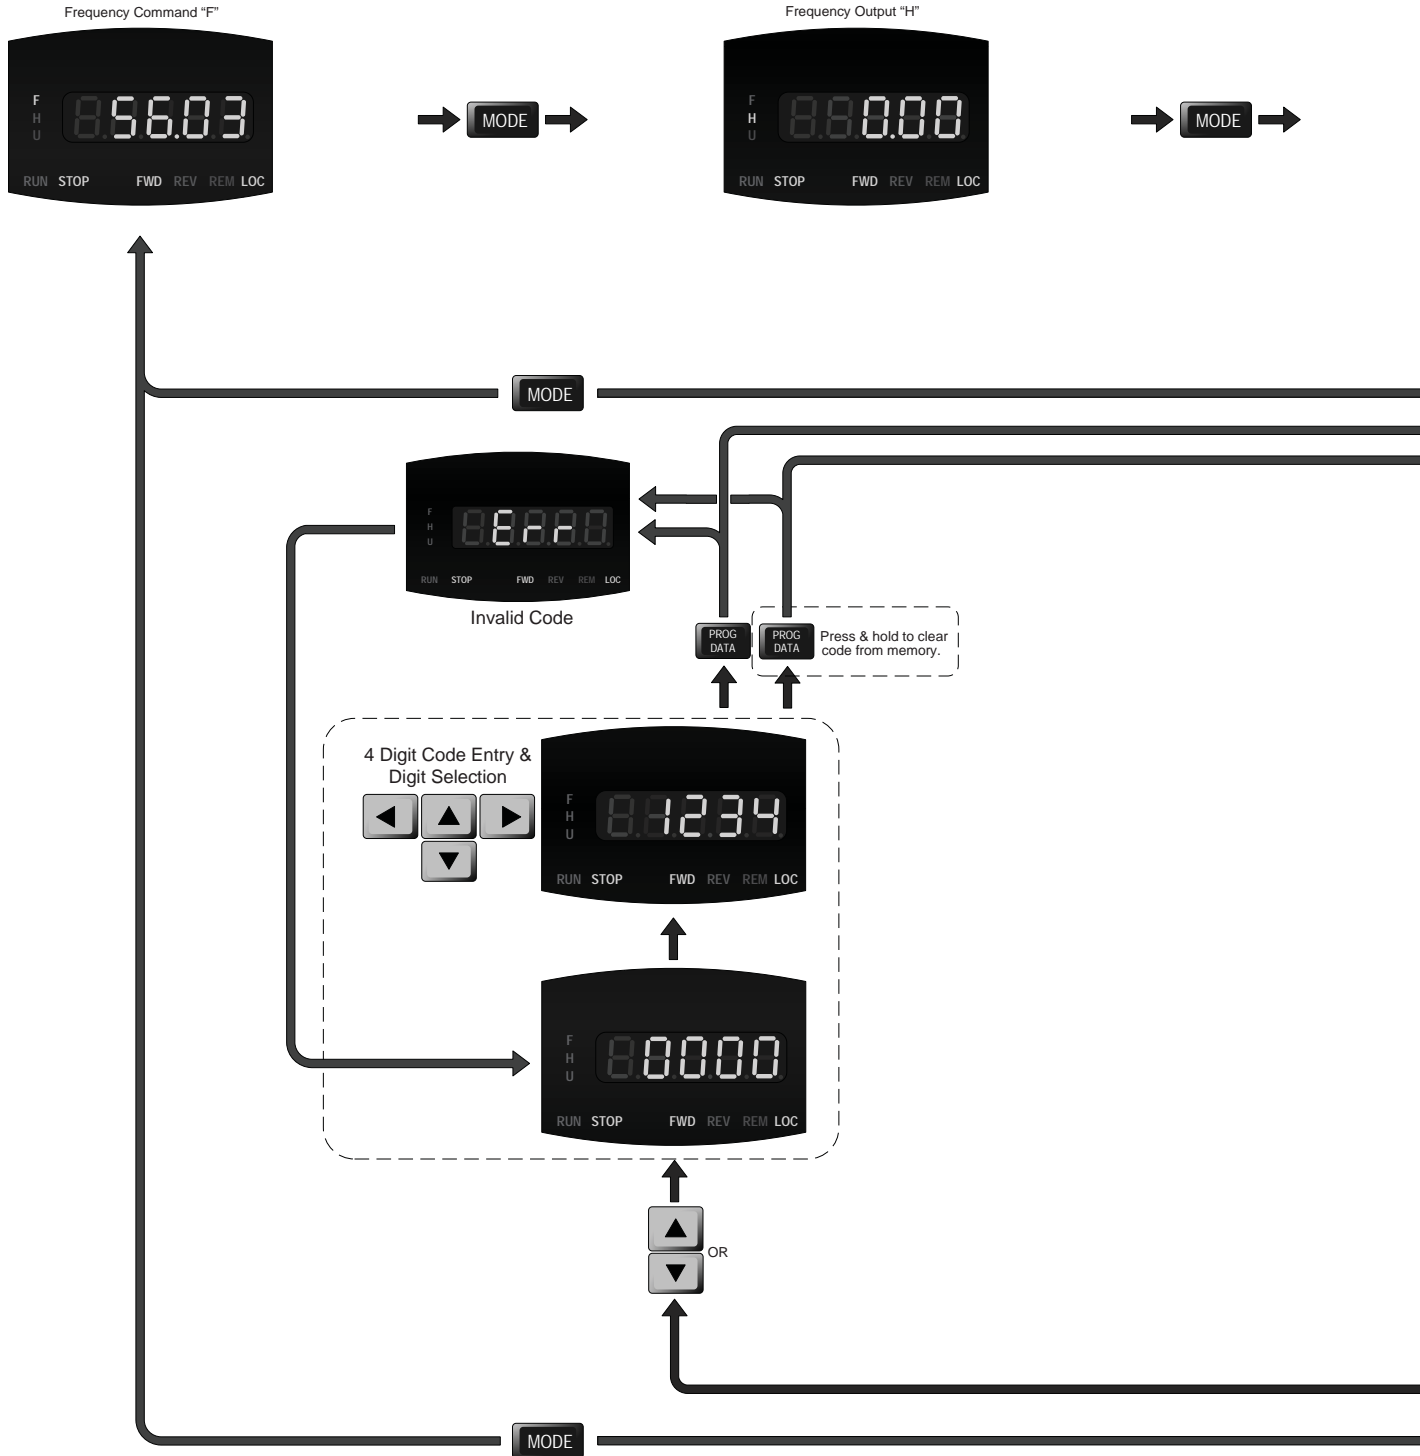

Locking and unlocking procedures

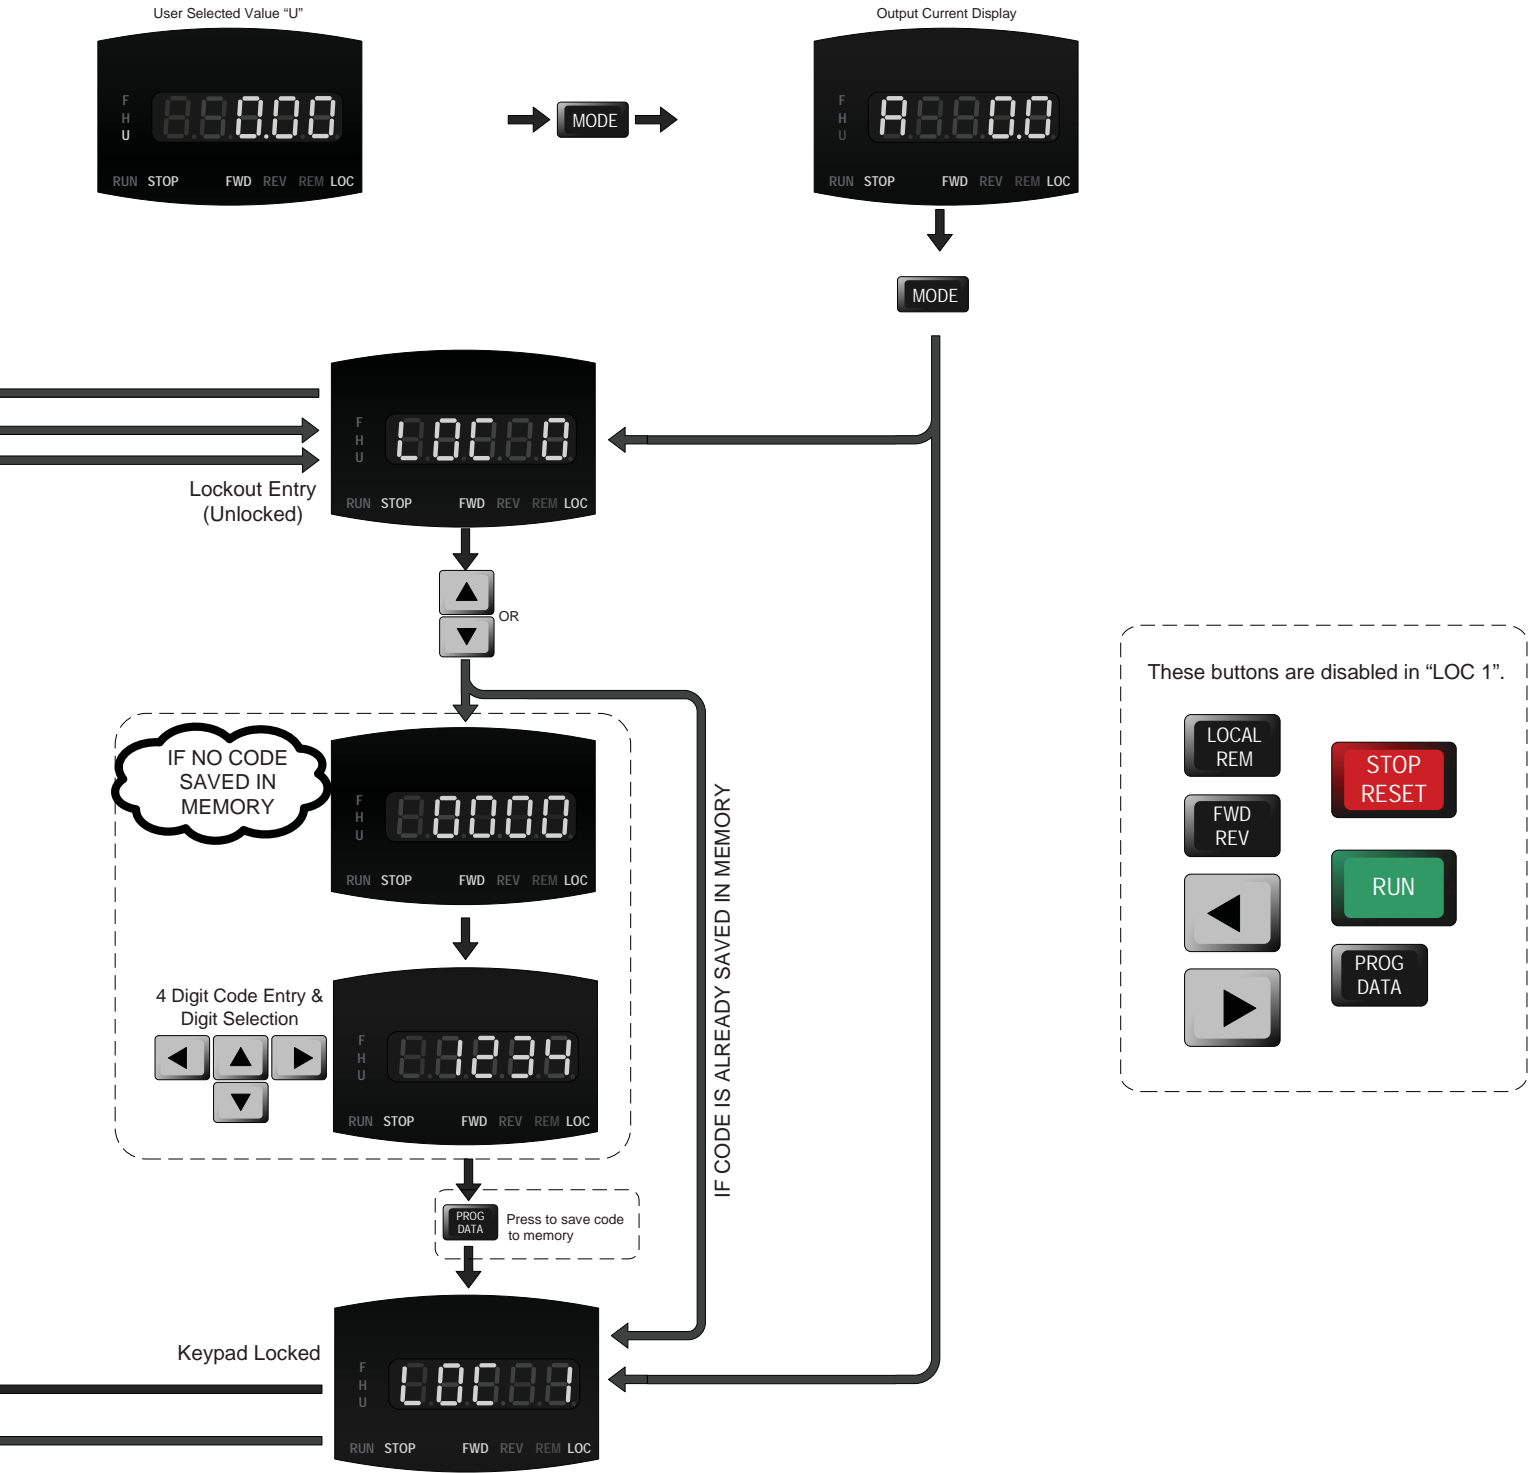

Big Ass Fans are the highest quality, most meticulously engineered HVLS fans on the planet, moving a lot of air with their size, not speed. Moving at a low speed means less energy used for operation, translating into more energy savings year-round. Follow the procedures below to ensure the most efficient operation of your Big Ass Fan.

To ensure proper fan rotation:

1. Turn on the fan.
2. Verify that the fan is rotating in the counterclockwise direction (when viewed from below).
3. If the fan is not rotating counterclockwise, reverse the direction of rotation. See page 47 for instructions on changing the direction of rotation.

Heating season

The Powerfoil®X2.0 fan returns heat from the ceiling to floor level more efficiently than small ceiling fans. For maximum energy savings, the fan should be operated continuously during the heating season and should not be operated in reverse (clockwise). Big Ass Fans are designed to operate efficiently at very low speeds, so turning the fan very slowly in the forward direction (counterclockwise) will provide enough air movement to circulate the hot air at the ceiling down to the floor without causing a draft.

Adjust the fan speed to the appropriate starting fan speed listed in the table below.

Floor-to-ceiling height (ft)	Starting fan speed	Display %
< 40	15 Hz	20–30%
≥ 40	20 Hz	30–40%

Stand directly below the tips of the airfoils with hand outstretched. If you feel a draft, slightly decrease the fan speed by 0.5 Hz (1–2%). Repeat until the draft is no longer noticeable.

Cooling season

The cooling effect created by the breeze from the Powerfoil X2.0 fan keeps occupants comfortable with the thermostat at a higher setting. During the cooling season, every degree higher that the thermostat is reset reduces the energy consumed by the air conditioner by 1.5–2%. To minimize energy usage during the cooling season, operate the fan only when building occupants are present.

Adjust the fan speed to the appropriate starting fan speed listed in the table below.

Floor-to-ceiling height (ft)	Starting fan speed	Display %
< 40	25 Hz	40–50%
≥ 40	40 Hz	60–70%

Increase the speed of the fan until desired air speed or maximum fan speed is reached. In air conditioned facilities, increase the thermostat setting by 2–7°F to save energy.

Preventive Maintenance

- ⚠ **WARNING:** Risk of fire, electric shock, or injury to persons during cleaning and user-maintenance!
- ⚠ **WARNING:** Before servicing or cleaning unit, switch off power at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
- ⚠ **WARNING:** When service or replacement of a fan component in the fan requires the removal or disconnection of a safety device, the safety device is to be reinstalled or remounted as previously installed.
- ⚠ **AVERTISSEMENT :** Risque d'incendie, d'électrocution ou de blessures lors du nettoyage et de la réparation !
- ⚠ **AVERTISSEMENT :** Avant de réparer ou de nettoyer l'appareil, coupez le courant au niveau du panneau de service et verrouillez le dispositif de sectionnement pour éviter une mise en marche accidentelle. Lorsque le dispositif de sectionnement ne peut être verrouillé, fixer un dispositif d'avertissement en évidence, comme une étiquette, sur le panneau de service.
- ⚠ **ATTENTION :** Lorsque le service ou le remplacement d'un composant du ventilateur exige le retrait ou la déconnexion d'un dispositif de sécurité, le dispositif de sécurité doit être réinstallé ou remonté comme précédemment installé

Please take a few moments each year to perform the following preventive maintenance inspection on your fan to ensure its safe and efficient operation. Before contacting Customer Service, try resolving the issue using the troubleshooting procedures on page 57. If you have any questions, contact Customer Service at 1-877-BIG-FANS. *Note: Actual installation setup may differ from picture.*

Annual preventive maintenance

Perform the following maintenance procedures each year using the "Maintenance Checklist":

1. Check for the presence of the safety cable and shackle. The cable should be wrapped around the mounting structure, leaving as little slack as possible. The shackle should be securely tightened and located on the topside of the mounting structure.
2. Ensure all 12 mounting bolts are present and torqued to 40 ft·lb (54.2 N·m). Ensure the lower cable is between the brackets of the lower yoke.
3. Inspect motor terminals inside the junction box and tighten if necessary.
4. Check all connections in the fan controller and tighten as needed.
5. Check the gear reducer for oil leakage. If leakage is detected, contact Customer Service at 1-877-BIG-FANS.
6. Ensure airfoils are secured to one another by airfoil retainers.
7. Ensure all 20 bolts securing airfoils to fan are present and torqued to 29 ft·lb (39.3 N·m).
8. Inspect the lower safety cable to ensure it is secure.
9. Inspect the airfoils and main motor unit for signs of damage or cracks.
10. Inspect the fan for signs of corrosion, discoloration, pitting, and flaking of metal.
11. Check guy wires (if installed) for fraying or damage.


General preventive maintenance

Periodically perform the following maintenance procedures on your fan:

- Verify proper fan rotation. The fan should be turning counterclockwise when viewed from the floor.
- Dust the airfoils, motor, and motor housing. If desired, use a gentle cleaner or degreasing agent to polish the foils. Do not use Clorox® or other chlorine based cleaners, which could result in the release of toxic/fatal fumes!
- Observe the motion of the fan during operation. The fan should not wobble or precess. If any wobble is noticed, ensure the mounting structure is rigid enough to support the fan and that the guy wires, if used, are sufficiently taut. If guy wires were not used, Big Ass Fans suggests installing them. Contact Customer Service at 1-877-BIG-FANS.

- ⚠ **WARNING:** Do not operate a fan with missing or damaged components. Please contact Customer Service at 1-877-BIG-FANS.

- ⚠ **AVERTISSEMENT :** Ne pas faire fonctionner le ventilateur avec des composants manquants ou endommagés !

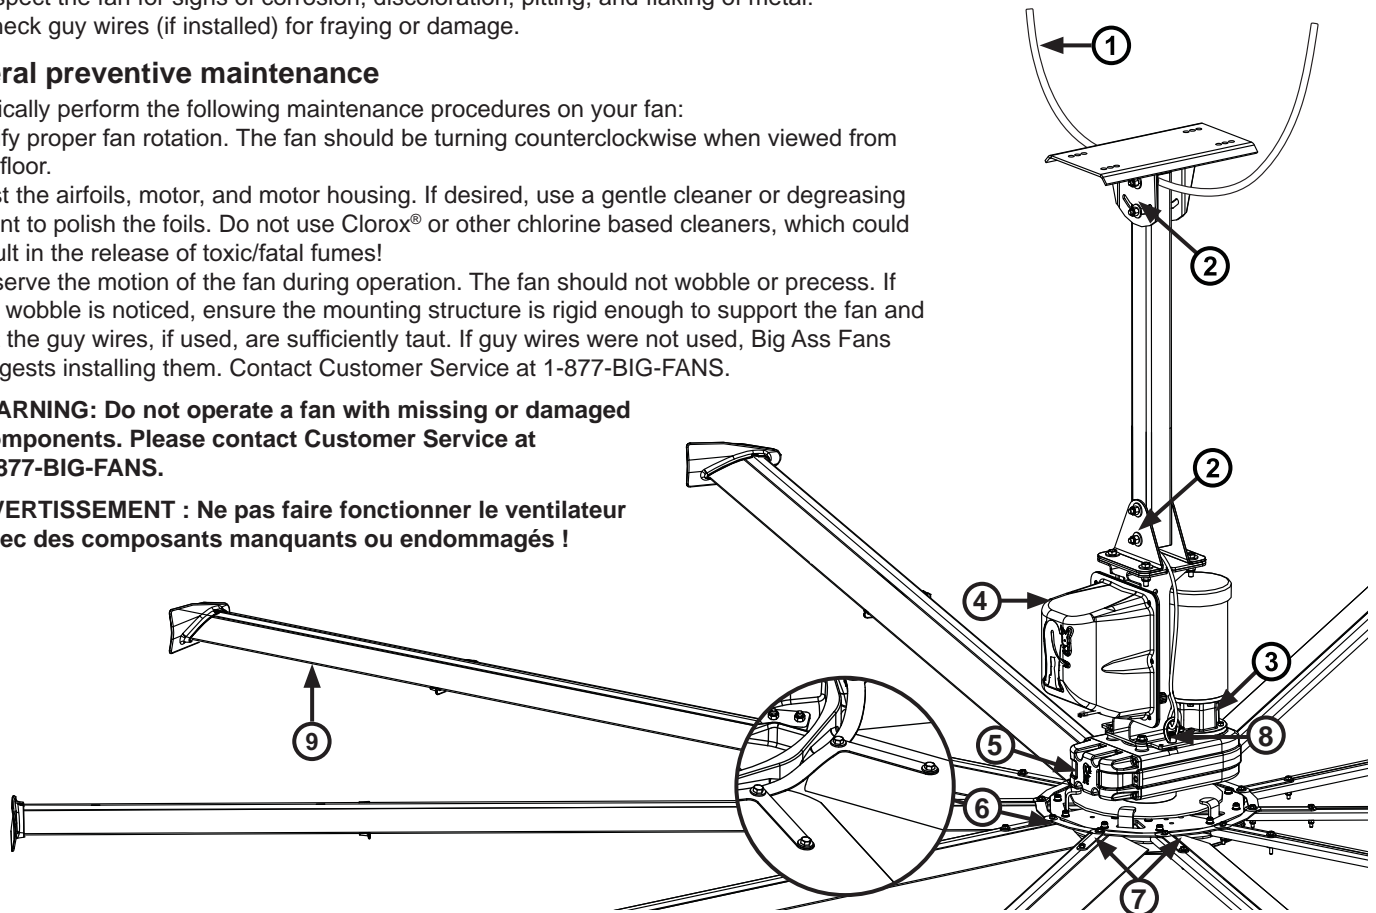

Troubleshooting

57

Cutting the extension tube

⚠ CAUTION: Ensure the safety cable is not damaged after cutting and drilling the extension tube!


⚠ ATTENTION : S'assurer que le câble de sécurité n'est pas endommagé après avoir coupé et percé le tube de rallonge.

If your mounting structure requires a non-standard extension tube length, use the below guidelines to cut the extension tube. *Note: Use the cut off portion of extension tube as a guide for hole placement and spacing.*


IMPORTANT

SAFETY CABLE IS ATTACHED
HERE-- DO NOT CUT OR ALTER

IMPORTANT : Un câble de sécurité
est fixé ici ; ne pas couper ni modifier.

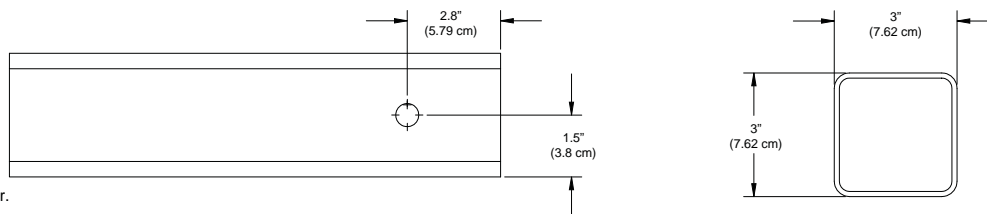

**BOTTOM END--
CUT THIS END ONLY**

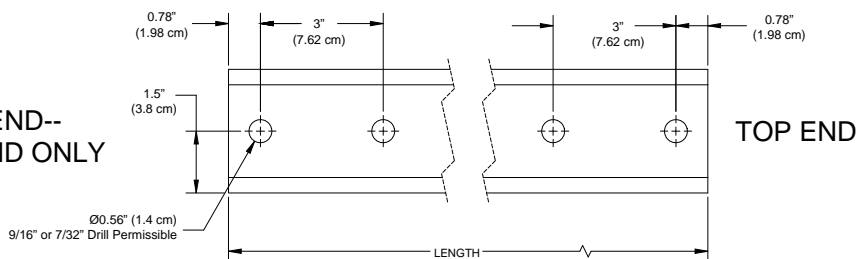

General troubleshooting

Some issues can be resolved before requesting service. Review the below troubleshooting tips before contacting Customer Service for support.

Symptom	Possible solution(s)
<i>The fan is turning in the wrong direction.</i>	To be effective, the fan should be rotating in the counterclockwise direction (when viewed from the floor). If the fan is not rotating in the counterclockwise direction, press the FWD/REV button on the wall controller.
<i>A popping noise is coming from the fan.</i> Airfoil noise is a result of airfoils that are not tightened to the specified torque.	Disconnect the fan from power, and then tighten the airfoil fasteners to 29 ft-lb (39.3 N-m). If the popping still occurs, verify that the airfoils are not contacting each other. If they are, contact Big Ass Fans Customer Service at 1-877-BIG-FANS.
<i>The fan will not start.</i>	Verify the following: <ul style="list-style-type: none"> • Make sure that all wires are securely connected. • Make sure the wall controller is set to RUN and LOC mode. • Verify that supply power is adequate and functional. If the fan still does not start, contact Customer Service at 1-877-BIG-FANS.
<i>The fan controller generates radio frequency noise (RF).</i> Fan controllers generate RF noise in many ways, but this can be prevented using the proper wiring practices outlined in "Electrical Installation" (p. 28).	Verify the following: <ul style="list-style-type: none"> • Do not run your controller and sensitive equipment on the same power line. • Ensure the properly sized EM/RFI filter (p. 38) is installed. • Ensure proper grounding at the motor, controller, and from the controller to the utility. If the noise is still present, contact Customer Service at 1-877-BIG-FANS.
<i>The motor makes noise when fan speed is increased.</i> Audible high frequency carrier noise may be an indicator of a stall condition.	Verify motor currents are within limits. See the fan specifications on pages 2–3.
The fan wobbles during operation.	<ul style="list-style-type: none"> • Verify that the mounting structure is rigid enough to support the fan and that the fan is not being exposed to external air forces. • If guy wires were installed, confirm proper installation. If guy wires were not installed, contact Big Ass Fans Customer Service at 1-877-BIG-FANS.

Note: Some motor, gearbox, or drive noise is to be expected and is normal.

E Series fan error codes

Review the below error codes and corrective actions for your fan controller before contacting Customer Service for support.

Error code	Description and corrective action
OC	Over Current <i>Abnormal condition exists on the motor side of the fan system.</i> Check motor OL point parameters. Check the motor wiring for shorts. If the condition persists with the disconnected motor, contact Customer Service at 1-877-BIG-FANS.
OU	High AC Input Voltage <i>Incoming AC line voltage has exceeded acceptable limits or the motor is trying to stop too quickly.</i> Check the DC buss voltage at drive idle versus drive running. Monitor DV buss voltage as the motor is stopping. Verify that incoming AC supply is acceptable configuration (center ground Wye Delta with Wild on B phase).
OH1 OH2	Drive Overtemp <i>Verify the fan is installed in an acceptable environment (122°F [50°C] maximum).</i> Check the drive for excessive dirt buildup on the heat sink fins. Check the drive cooling fan function.
Lu	Under Voltage <i>Incoming AC line voltage has fallen below acceptable limits.</i> Check the DC buss voltage at drive idle versus drive running. Monitor DV buss voltage as the motor is stopping. Verify that incoming AC supply is acceptable configuration (center ground Wye Delta with Wild on B phase).
ocA	Over Current During Acceleration <i>Motor circuit insulation failure or over boosting.</i> Check the torque boost. If the condition persists with a disconnected motor, contact Customer Service at 1-877-BIG-FANS.
ol ol1 ol2	Excessive Drive Output Current <i>An abnormal condition exists on the motor side of the fan system.</i> Check the motor OL point parameters. Reduce torque comp (Pr.54).
ocd	Over Current During Acceleration <i>Motor circuit insulation failure or over boosting.</i> Check the torque boost. If the deceleration time is too short, check parameters.
ocn	Over Current During Steady Operation <i>Motor circuit insulation failure or over boosting.</i> Check the motor wiring. This fault could indicate a mechanical failure.
EF	External Fault <i>ESFR input has been triggered (MI3).</i> If the system's building is not on fire, check the relay wiring and the alarm system status. If the building is on fire, vacate the premises immediately! If the SmartSense365™ is in use, 4-20mA loop has been compromised. Check the SmartSense365 power supply and loop wiring. The drive <i>will not</i> auto recover from EF.
GFF	Ground Fault <i>Drive output terminal shorted to ground.</i> Depending on the severity of short, the output module can be damaged (if SCC ≥ 50% of drive rating).
cEO4	Communications Error <i>The drive has been issued a command while in fault status.</i> Clear all active faults before trying to operate the drive.
AErr	Analog Error <i>The ACI switch is active. The drive is searching for a 4-20mA signal, but it is not present or is out of tolerance.</i>
PHL	Incoming Phase Loss <i>Possible loose connections or blown over current devices.</i> Check the incoming AC line for loose connections or blow over current devices.

E Series fan error codes (cont.)

Error code	Description and corrective action
cF1.0 cF1.1 cF2.0 cF2.1	Internal Memory Error If the power cycle is not resolved, perform a parameter hard reset. If the condition persists, contact Customer Service at 1-877-BIG-FANS.
cE10	Communications Error—Slave Verify proper data wiring between the drive's RS485 port and the command source.
bb	Base Block <i>Base Block input (M4) has been triggered.</i> Check the accessory wiring and accessory configuration. The drive will auto-recover to the previous operating state.
FbE	Feedback Signal Error Check the AVI/ACI wiring.
HPF1, HPF2 HPF3, HPF4 cF3.0, cF3.1 cF3.2, cF3.3 cF3.4, cF3.5 AcL codeE	Various Unrecoverable Errors If the power cycle will not clear these faults, contact Customer Service at 1-877-BIG-FANS.

Pr.00.04 Diagnostics running display options

Setting	Run screen display
00	(BAF Default) Display user-defined unit
01	Counter value; pulses on TRG terminal
02	Not valid
03	DC buss voltage ($\div 1.414 =$ approx. AC line)
04	RMS equivalent feedback level (percentage)
05	PID analog feedback level (percentage)
06	Power factor angle of motor (degrees)
07	Output power in kW
08	Motor torque estimate (N·m)
09	VDC at AVI terminal (displayed in volts)
10	mA at ACI terminal (displayed in mA)
11	IGBT temperature (degrees C°)
12	Not valid
13	Not valid
14	Not valid
15	Not valid

M Series fan error codes

Review the below error codes and corrective actions for your fan controller before contacting Customer Service for support.

Error code	Description and corrective action
OC	Over Current <i>Abnormal condition exists on the motor side of the fan system.</i> Check motor OL point parameters. Check the motor wiring for shorts. If the condition persists with the disconnected motor, contact Customer Service at 1-877-BIG-FANS.
OU	High AC Input Voltage <i>Incoming AC line voltage has exceeded acceptable limits or the motor is trying to stop too quickly.</i> Check the DC buss voltage at drive idle versus drive running. Monitor DV buss voltage as the motor is stopping. Verify that incoming AC supply is acceptable configuration (center ground Wye Delta with Wild on B phase).
OH	Drive Overtemp <i>Verify the fan is installed in an acceptable environment (122°F [50°C] maximum).</i> Check the drive for excessive dirt buildup on the heat sink fins. Check the drive cooling fan function.
LU	Under Voltage <i>Incoming AC line voltage has fallen below acceptable limits.</i> Check the DC buss voltage at drive idle versus drive running. Monitor DV buss voltage as the motor is stopping. Verify that incoming AC supply is acceptable configuration (center ground Wye Delta with Wild on B phase).
OL OL1 OL2	Excessive Drive Output Current <i>An abnormal condition exists on the motor side of the fan system.</i> Check the motor OL point parameters. Reduce torque comp (Pr.54).
ocA	Over Current During Acceleration <i>Motor circuit insulation failure or over boosting.</i> Check the torque boost. If the condition persists with a disconnected motor, contact Customer Service at 1-877-BIG-FANS.
ocd	Over Current During Acceleration <i>Motor circuit insulation failure or over boosting.</i> Check the torque boost. If the deceleration time is too short, check parameters.
ocn	Over Current During Steady Operation <i>Motor circuit insulation failure or over boosting.</i> Check the motor wiring. This fault could indicate a mechanical failure.
EF	External Fault <i>ESFR input has been triggered (MI3).</i> If the system's building is not on fire, check the relay wiring and the alarm system status. If the building is on fire, vacate the premises immediately! If the SmartSense365™ is in use, 4-20mA loop has been compromised. Check the SmartSense365™ power supply and loop wiring. The drive <i>will not</i> auto recover from EF.
GFF	Ground Fault <i>Drive output terminal shorted to ground.</i> Depending on the severity of short, the output module can be damaged (if SCC ≥ 50% of drive rating).
FbE	Feedback Signal Error Check the AVI/ACI wiring.
PHL	Incoming Phase Loss <i>Possible loose connections or blown over current devices.</i> Check the incoming AC line for loose connections or blow over current devices.
bb	Base Block <i>Base Block input (M4) has been triggered.</i> Check the accessory wiring and accessory configuration. The drive will auto-recover to the previous operating state.

M Series fan error codes (cont.)

Error code	Description and corrective action
HPF1, HPF2 HPF3, HPF4 cF3.0, cF3.1 cF3.2, cF3.3 cF3.4, cF3.5 AcL codeE	Various Unrecoverable Errors If the power cycle will not clear these faults, contact Customer Service at 1-877-BIG-FANS.
cF1 cF2	Internal Memory Error If the power cycle is not resolved, perform a parameter hard reset. If the condition persists, contact Customer Service at 1-877-BIG-FANS.
cE1	Communications Error—Slave Verify proper data wiring between the drive's RS485 port and the command source.

Pr.64 Diagnostics running display options

Setting	Run screen display
00	Display drive output frequency (Hz)
01	(Default) User-defined number (Hz x PR.65)
02	RMS equivalent output voltage to motor
03	DC buss voltage ($\div 1.414 =$ approx. AC line)
04	PV (i)
05	Display internal counter value
06	Display the settings frequency (F or 0 = %)
07	Display parameter setting
08	Reserved/Not valid
09	Output current to motor
10	Display program operation (0.xxx)

62

Warranty Return Instructions

Congratulations on your purchase of a Big Ass Fan! We are delighted that you have chosen our product to improve the quality of your indoor environment, and hope you'll have much pleasure using the fan for years to come.

Replacement of products under warranty return instructions

If you believe a part failed during normal operation and is covered under warranty, Big Ass Fans will ship a replacement part to you pursuant to your notice that you will be replacing the original part within 10 days. The replacement part will be shipped to you prior to our receipt of the item that failed, and prior to our evaluation of this part to determine the reasons for its failure and whether it is covered under warranty.

In order to evaluate the cause of the product failure, we will need you to return the original part to our offices within 10 working days of receipt of the replacement part. Should the part be covered under warranty, you will not be charged for the replacement item; however, you will be charged for the replacement part plus shipping if (1) the part is not under warranty because the source of failure is outside the scope of the warranty, or (2) the warranty period has expired. If there is no warranty coverage, we will send you a detailed letter of explanation. We also will charge you for the replacement item plus shipping and handling if you do not return the original item within 10 days of the receipt of the replacement item.

Instructions for returning the original item

1. Please use the return label that is included in the box containing the replacement part. The return shipment address is:

Big Ass Fan Company
ATTN: RMA# _____
800 Winchester Road
Lexington, KY 40505

2. Use the packaging for the replacement part to return the original part.
3. Include the packing list we have provided which includes the RMA#.
4. If the part weighs over 50 lbs., you will be provided a prepaid Bill Of Lading. To schedule a freight pick up, please contact Customer Service. We will only charge back the freight costs if the original part is not under warranty, or if you do not return the original component within 10 days of receipt of the replacement.
5. If the part weighs 50 lbs. or less, please use the provided prepaid UPS Ground shipping label and drop off at your nearest UPS pickup location.

If you have questions, please contact us at 1-877-BIG-FANS.

Warranty claim form instructions

1. Complete Warranty Claim Form and Responsibility Agreement and fax them to 859-967-1695, Attn: Customer Service. These pages will be faxed back to you for your records. The Warranty Claim Form will include our acknowledgment and a Return Materials Authorization (RMA) number. **Do not return any item without first being assigned an RMA# by Big Ass Fans Customer Service.**
2. No more than 10 days prior to the date you have made arrangements to replace the component part, call Customer Service at 1-877-BIG-FANS to arrange for replacement component delivery and original component pickup. At that time, we will fax you a written acknowledgment of your call that includes a reminder of the return instructions. Note: Even if you are not able to replace the component immediately following your initial notice to us, returning the Warranty Claim Form and Responsibility Agreement will effectively stop the warranty clock from running. You can then make the product exchange when you are prepared to do so. However, the warranty period will continue to run until we receive these completed pages back from you, and no warranty will be honored without receipt of these pages within the warranty period. We will not send out any replacement part until you have called to let us know that you have scheduled installation of the replacement. This ensures that the replacement part is not lost or damaged while awaiting installation, and that you are not billed for the replacement because you have waited too long to return the original component (see Responsibility Agreement).
3. When you receive the replacement part, you have 10 working days to remove and replace the existing component and return it to us at **800 Winchester Road, Lexington, KY 40505**.
 - a. Upon receiving the replacement part, verify that replacement part order is correct. If order is incorrect or damaged, notify Big Ass Fan Company within 24 hours after receiving order.
 - b. Use care unpacking the replacement component, as you will need to use *both* the packaging from the replacement part and the packing list and a return address label included inside this packaging to return the original part. If the original packaging and return documents are not used, you will be responsible for any damage incurred in transit as well as any additional costs involved. **Note: The RMA# must appear on the outside of the box being returned. Items without an RMA# will not be accepted.**
 - c. Use the delivery service or one of the truck lines specified in the acknowledgement for return of the part. We will refuse receipt of any shipment that is returned via an unauthorized carrier. If you prefer, we can make all arrangements for delivery and pickup.
 - d. Fax a copy of the bill of lading or other tracking information to 859-967-1695 when the item has been shipped so that we know to expect delivery of the original part.
4. If we do not receive the original part back within 15 working days from the date you receive delivery of the replacement, you will be invoiced for the cost of the replacement part, plus freight, on Net 15 terms (see Responsibility Agreement), and this invoice will be due and payable. If you subsequently return the replacement part to us after payment has been made, we will refund any payment made for the replacement part, unless we subsequently determine that the part is not covered under warranty.



Warranty Claim Form

800 Winchester Road
Lexington, KY 40505
Phone: 1-877-BIG-FANS
Fax: (859) 967-1695
www.bigassfans.com

Name (print): _____ Signature: _____

Company: _____

Shipping Address: _____

City/State/ZIP: _____

Phone: _____ Fax: _____

Items Returned: _____ Date of Purchase: _____

Reason(s) for Returning Item (please provide detail, including length of time after fan had been in operation that problem was noticed, nature of problem, any attempts you made to remedy the problem, etc.):

ATTENTION: Do not return any item without first being assigned an RMA# by Big Ass Fan Company Customer Service Department. The RMA# must appear on the outside of the box being returned. Items without an RMA# will not be accepted.

Date Replacement Parts Should Be Shipped (if known): _____

(Please do not request shipment until you are prepared to install. Call us at 1-877-BIG-FANS to arrange shipment when you have scheduled installation.)

Acknowledgment of Receipt of Warranty Return Notification
(to be completed by Big Ass Fan Company)

Acknowledged By: _____ Date: _____

RMA#: _____

Authorized Truck Line(s): _____



Responsibility Agreement

800 Winchester Road
Lexington, KY 40505
Phone: 1-877-BIG-FANS
Fax: (859) 967-1695
www.bigassfans.com

To: Big Ass Fan Company

The undersigned understands and acknowledges receipt of the Warranty Claim Form and Instructions and agrees that Big Ass Fans ("Big Ass Fan Company") has the right, upon receipt of returned merchandise, to make final determination as to whether this merchandise should be replaced at no cost under Big Ass Fan Company's stated warranty policy.

The undersigned further agrees that if Big Ass Fan Company determines that this merchandise does not qualify under its stated warranty policy, Big Ass Fan Company can invoice for the replacement merchandise plus shipping and handling for the original part and all replacements, and such invoice will be paid within 15 days of receipt of the same.

The undersigned agrees to ship to Big Ass Fan Company's location at 800 Winchester Road, Lexington, KY 40505 all of the merchandise replaced by Big Ass Fan Company including, but not limited to, defective or failed components, within 10 working days of the receipt of the any replacements.

The undersigned further agrees that if said replaced merchandise has not been shipped to Big Ass Fan Company within 10 working days, Big Ass Fan Company can invoice for the replacement merchandise plus shipping and handling, and the invoice will be paid within 15 days of receipt.

Signed: _____

Title: _____

For: _____
(Name of Company)

Date: _____

BIG ASS FANS **Check-In Procedure** (for Big Ass Fans Certified Installers Only)

2348 Innovation Drive
 Lexington, KY 40511
 Phone: 1-877-BIG-FANS
 Fax: (859) 967-1695
 www.bigassfans.com

ATTENTION: These items must be completed prior to any additional installation crew members entering jobsite or any installation material being unloaded.

Date: _____

Company: _____ Job Name: _____

Address: _____ Purchase Order No.: _____

City/State/ZIP: _____

Contact Name: _____ Phone: _____

E-mail: _____

****SEE THE FOLLOWING PAGE FOR NFPA 13 REGULATIONS****

<input type="checkbox"/>	Fan placement is to be in accordance with agreed upon original Scope of Work and Layout. If this is to change, please note change and consult Field Service Manager for approval.
<input type="checkbox"/>	Installation techniques have been discussed (type of conduit, L-brackets if required, mounting technique explained). If the extension tube exceed 4 ft (1.2 m), guy wires are explained and fully understood.
<input type="checkbox"/>	Times in/out, duration, and schedule presented and accepted.
<input type="checkbox"/>	Time (please list the number of employees and total duration of jobs):
<input type="checkbox"/>	<p>Safety rules and regulations have been brought to installer's attention (e.g., badges, safety harnesses, vests, hard hats, footwear, lock out/tag out, certification processes, work area free of trash and debris, etc.). If there are any areas that are forbidden or secure, they are brought to the supervisor's attention and instructed not to enter. If there are any special site conditions (i.e., open areas and operating machinery to be avoided), they are also brought to the supervisor's attention and instructed how to bypass the area if required.</p> <p>Safety Rules and Regulations listed:</p>
<input type="checkbox"/>	<p>The facility manager understands all electrical requirements, i.e., breaker size, voltage, brand, main panel space, and they are in accordance with original Scope of Work and Layout.</p> <p>Additional comments:</p>

Check-In Procedure (cont.)

(for Big Ass Fans Certified Installers Only)

National Fire Protection Association Standard

In accordance with NFPA 13 Standard from the National Fire Prevention Association as referenced in sections 12.1.4 and 11.1.7: High Volume Low Speed (HVLS) Fans:

The installation of HVLS fans in buildings equipped with sprinklers, including ESFR sprinklers, shall comply with the following:

- The maximum fan diameter shall be 24 feet (7.3 m).
- The fan shall be approximately centered between four adjacent sprinklers.
- The vertical clearance from the fan to sprinkler deflector shall be a minimum of 3 feet (0.9 m).
- All fans shall be interlocked to shut down immediately upon receiving a water flow signal from the alarm system in accordance with the requirements of NFPA 72- National Fire Alarm and Signaling Code.

If this installation will be performed outside the scope of work or not within the specifications of Big Ass Fans by customer's request, please provide specific details:

Please sign below if both parties agree that all aspects of this installation have been thoroughly explained and are of clear understanding and agreement of the installation to be completed.

Customer Signature: _____

Printed Name: _____ **Date:** _____

Contractor Signature: _____

Printed Name: _____ **Date:** _____

The supervisor is to hold all documents until the job is complete and send all forms back to Field Service Manager. This will consist of the service/work order, Check-In document, and Close-Out document. The installation crew will not receive payment until all forms are signed by the facility manager and the supervisor. These documents will then be forwarded to the Field Service Manager at Big Ass Fans.

 **BIG ASS FANS**
Close-Out Procedure
 (for Big Ass Fans Certified Installers Only)

2348 Innovation Drive
 Lexington, KY 40511
 Phone: 1-877-BIG-FANS
 Fax: (859) 967-1695
 www.bigassfans.com

Date: _____

Company: _____ Job Name: _____

Address: _____ Purchase Order No.: _____

City/State/ZIP: _____

Contact Name: _____ Phone: _____

E-mail: _____

The field crew supervisor and facility manager are to walk through the completed installation.

<input type="checkbox"/>	The installation is complete and on time in accordance with the original Check-In document. If not, explain:
<input type="checkbox"/>	Conduit runs are installed in accordance with the Check-In document, Scope of Work, and Layout. If not, explain:
<input type="checkbox"/>	The fans are correctly placed in accordance with both the Check-In document, Scope of Work, and Layout. If not, explain:
<input type="checkbox"/>	Breaker size and wire type are in accordance with the Check-In document, Scope of Work, and Layout. If not, explain:
<input type="checkbox"/>	All safety rules and regulations met in accordance with the Check-In document, Scope of Work, and Layout. If not, explain:
<input type="checkbox"/>	Fans have been running for over an hour and operate without visible defect or issue.
<input type="checkbox"/>	The fan is spinning in the correct direction (counterclockwise when viewed from floor).
<input type="checkbox"/>	Angle irons are securely fastened and are without any apparent problems in accordance with installation techniques discussed at check-in.
<input type="checkbox"/>	If extension tube is 4 ft (1.2 m) or longer, guy wires are in place and there is no evidence of a wobble.
<input type="checkbox"/>	Supervisor or contractor has supplied and explained the Installation Guide. If not, explain:
<input type="checkbox"/>	The supervisor or contractor has explained and I understand how to operate fan including starting/stopping, speed operation, and power disconnect. If not, explain:
<input type="checkbox"/>	Time in/out and duration are in accordance with Check-In document.
	Additional comments:

Close-Out Procedure (cont.)

(for Big Ass Fans Certified Installers Only)

National Fire Protection Association Standard

In accordance with NFPA 13 Standard from the National Fire Prevention Association as referenced in sections 12.1.4 and 11.1.7: High Volume Low Speed (HVLS) Fans:

The installation of HVLS fans in buildings equipped with sprinklers, including ESFR sprinklers, shall comply with the following:

- The maximum fan diameter shall be 24 feet (7.3 m).
- The fan shall be approximately centered between four adjacent sprinklers.
- The vertical clearance from the fan to sprinkler deflector shall be a minimum of 3 feet (0.9 m).
- All fans shall be interlocked to shut down immediately upon receiving a water flow signal from the alarm system in accordance with the requirements of NFPA 72- National Fire Alarm and Signaling Code.

NOTE: The customer's initials are required as acknowledgement for the following instances:

- Return Trip Required – Additional Charges Apply (Customer not Ready/Lift Issues)
- Work Completed Outside Scope of Work (if applicable)
- Installation Not Performed Per BAF Recommendations or Specifications For Any Reason
- Customer Understands and Approves Additional Charges As Explained in amount of \$ _____ (if applicable)
- Other (Please Explain Below)

If this installation will be performed outside the scope of work or not within the specifications of Big Ass Fans by customer's request, please provide specific details:

Please sign below if both parties agree that all aspects of this installation have been thoroughly explained and are of clear understanding and agreement of the installation to be completed.


Customer Signature: _____

Printed Name: _____ **Date:** _____

Contractor Signature: _____

Printed Name: _____ **Date:** _____

The supervisor is to hold all documents until the job is complete and send all forms back to Field Service Manager. This will consist of the service/work order, Check-In document, and Close-Out document. The installation crew will not receive payment until all forms are signed by the facility manager and the supervisor. These documents will then be forwarded to the Field Service Manager at Big Ass Fans.

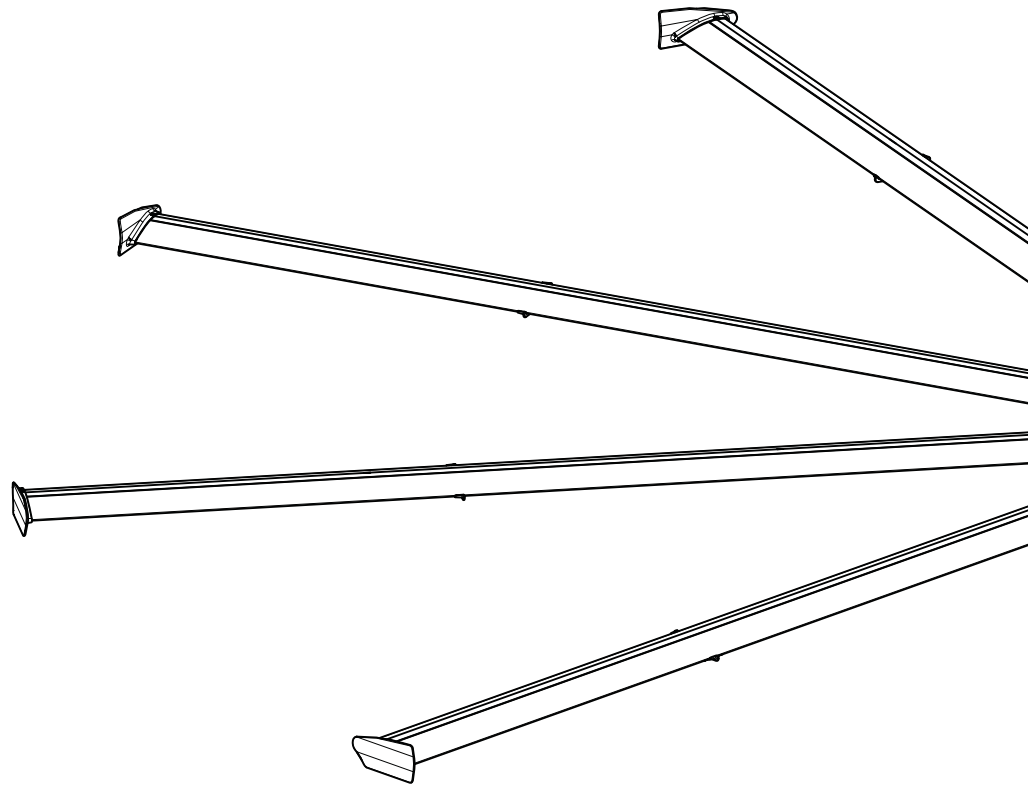

002788-01

002788-01

REV. H

 **BIG ASS FANS®**

2348 Innovation Drive, Lexington, KY 40511
1 (877) BIG-FANS | WWW.BIGASSFANS.COM